

[Manuals.plus](#) /

› [Satisfyer](#) /

› Satisfyer Mini Wand-er Vibrator Instruction Manual

Satisfyer 4044224

Satisfyer Mini Wand-er Vibrator Instruction Manual

Model: 4044224

INTRODUCTION

Thank you for choosing the Satisfyer Mini Wand-er Vibrator. This device is designed for personal use, offering a range of vibration patterns for stimulating full-body massage. Please read this manual carefully before first use and retain it for future reference.

Important Safety Information: This product is intended for adult use only. Do not use if the device is damaged. Consult a healthcare professional if you have any medical conditions or concerns.

PRODUCT OVERVIEW

The Satisfyer Mini Wand-er is a compact, travel-friendly vibrator made from body-safe silicone. It features a rounded head for broad stimulation and an intuitive control panel.



Image: Side view of the Satisfyer Mini Wand-er Vibrator in gray, showcasing its ergonomic design.

Key Features:

- **Stimulating Full-Body Massage:** The rounded head is designed to reach various body parts for relaxation and stimulation.
- **12 Vibration Settings:** Offers a range of programs from gentle to intense, controlled via the device's panel.
- **Portable & Travel Friendly:** Compact size for easy transport.
- **IPX7 Waterproof:** Suitable for use in the shower or bath, protected against immersion in water up to 1 meter deep for up to 30 minutes.
- **Material:** Made from body-safe silicone.

SETUP

Charging the Device:

1. Locate the magnetic charging contacts on the device.
2. Connect the provided USB charging cable to the device's magnetic contacts. Ensure a secure connection.
3. Plug the USB end of the cable into a standard USB power adapter (not included) or a computer's USB port.
4. The device will indicate charging status (e.g., an LED light). Refer to the device's specific light indicators for full charge status.
5. A full charge typically takes several hours.



Image: The Satisfyer Mini Wand-er Vibrator connected to its magnetic USB charging cable.

First Use Preparation:

- Before initial use, fully charge the device.
- Clean the device thoroughly with warm water and a mild, toy-safe cleaner or soap. Rinse well and allow to air dry.

OPERATING INSTRUCTIONS

Satisfyer



Why you will love it:



FULL BODY



VIBRATION



VERSATILE



WATERPROOF



SILICONE



EASY TO CLEAN

Image: A hand demonstrating how to hold the Satisfyer Mini Wand-er Vibrator, highlighting the control buttons.

1. **Power On/Off:** Press and hold the power button (often marked with a circle or wave icon) for approximately 2 seconds to turn the device on or off.
2. **Adjust Vibration Programs:** Once powered on, press the program button (often marked with a wave icon or 'M') to cycle through the 12 available vibration patterns.
3. **Adjust Intensity:** Use the '+' and '-' buttons to increase or decrease the vibration intensity within the selected program.
4. **Application:** Apply the rounded head of the vibrator to desired areas for massage and stimulation.

The device defaults to the first setting each time it is turned on.

Cleaning:

- Clean the device before and after each use.
- Wash with warm water and a mild, toy-safe soap or specialized toy cleaner.
- Rinse thoroughly to remove all soap residue.
- Pat dry with a lint-free cloth or allow to air dry completely.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.



WHY SEXUAL WELLNESS?

Just like **leafy greens & sunscreen**, **sexual pleasure** is a key piece of overall **health & wellness**.

At Satisfyer, our mission is to blend **sexual health & tech innovation** that easily fits into your **self-care routine**. Orgasm is for everyone - all bodies, all levels of ability, no holds barred.

Image: The Satisfyer Mini Wand-er Vibrator covered in water droplets, demonstrating its waterproof capability.

Storage:

- Store the device in a clean, dry, and dust-free place.
- Keep it away from direct sunlight and extreme temperatures.
- Avoid storing with other toys made of different materials to prevent material degradation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the provided USB cable.
Vibrations are weak or inconsistent.	Low battery.	Recharge the device.
Device not charging.	Charging cable not properly connected or damaged.	Ensure the magnetic contacts are clean and securely connected. Try a different USB power source. If the cable is damaged, replace it.
Buttons are unresponsive.	Device may be locked or experiencing a temporary software issue.	Try turning the device off and on again. Ensure the device is not wet or dirty around the buttons.

If you experience issues not listed here or if the problem persists, please contact Satisfyer customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Mini Wand-er
Item Model Number	4044224
Brand	Satisfyer
Material	Silicone
Color	Gray
Product Dimensions	19.69 x 19.69 x 11.02 inches; 4.3 ounces
Battery	1 Lithium Ion battery required (integrated)
Waterproof Rating	IPX7 (protected against immersion in water up to 1 meter for up to 30 minutes)
Vibration Programs	12

WARRANTY AND SUPPORT

Warranty Information:

The Satisfyer Mini Wand-er Vibrator comes with a **15-year product protection warranty**. This warranty covers manufacturing defects and ensures long-lasting satisfaction. Please retain your proof of purchase for warranty claims.

Customer Support:

For further assistance, troubleshooting, or warranty claims, please visit the official Satisfyer website or contact their customer service department. Contact details can typically be found on the product packaging or the official brand

website.

Online Resources: www.satisfyer.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question