

## Timex TWG030100JR

# Timex Men's X Pan Am Chronograph 42mm Watch User Manual

Model: TWG030100JR

## INTRODUCTION

Welcome to the user manual for your Timex Men's X Pan Am Chronograph 42mm Watch. This timepiece combines classic design with modern functionality, paying homage to the golden age of aviation. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your watch to ensure its longevity and accurate performance.





Figure 1: Front view of the Timex X Pan Am Chronograph 42mm Watch.

## SETUP

### Initial Setup and Time/Date Adjustment

Upon receiving your watch, you may need to set the correct time and date.

#### 1. Setting the Time:

- Pull the crown (the knob on the side of the watch) out to position 2 (the outermost position).
- Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
- Push the crown back into position 0 (normal operating position) to start the watch.

#### 2. Setting the Date:

- Pull the crown out to position 1 (the middle position).
- Turn the crown clockwise to adjust the date.
- Once the correct date is displayed, push the crown back into position 0.
- *Note: Avoid setting the date between 9 PM and 3 AM, as this can damage the date mechanism. If you need to set the date during this period, first set the time outside this window, adjust the date, then reset the time.*



Figure 2: Side view illustrating the crown for time and date adjustments.

## OPERATING YOUR WATCH

### Chronograph Function

Your Timex X Pan Am Chronograph features a precise chronograph function for measuring elapsed time.

- Starting the Chronograph:** Press the top pusher (button) located at the 2 o'clock position. The chronograph second hand will begin to move.
- Stopping the Chronograph:** Press the top pusher again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
- Resetting the Chronograph:** After stopping, press the bottom pusher (button) located at the 4 o'clock position to reset all chronograph hands to their zero positions.

### Water Resistance

This watch is water resistant up to 50 meters (164 feet). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling.

- Do not operate the crown or pushers when the watch is wet or submerged in water.
- Avoid exposing the watch to hot water, steam, or sudden temperature changes, as this can compromise the water resistance seals.
- After exposure to saltwater, rinse the watch with fresh water and dry it thoroughly.



Figure 3: Case back with water resistance indication.

## MAINTENANCE

### General Care

- Clean your watch regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying.
- Avoid contact with chemicals such as solvents, detergents, perfumes, and cosmetics, as these can damage the watch case, strap, or seals.
- Protect your watch from extreme temperatures, direct sunlight for prolonged periods, and strong magnetic fields.

- Store your watch in a cool, dry place when not in use, preferably in its original box or a watch case.

## Strap Care

The leather strap on your Timex watch is designed for comfort and durability.

- Avoid prolonged exposure to water, sweat, and direct sunlight, which can cause the leather to dry out, crack, or fade.
- If the strap gets wet, gently pat it dry with a soft cloth and allow it to air dry naturally, away from direct heat.
- Periodically clean the strap with a leather-specific cleaner and conditioner to maintain its suppleness and appearance.





Figure 4: Watch strap and buckle detail.

## TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions before seeking professional service.

Problem	Possible Cause	Solution
Watch stops or runs intermittently.	Low battery.	Replace the battery. This should be done by a qualified watch technician.
Date changes at noon instead of midnight.	AM/PM setting is incorrect.	Advance the time by 12 hours.
Chronograph hands do not reset to zero.	Minor misalignment.	Consult the full instruction manual for specific chronograph hand calibration steps, or seek professional service.
Condensation inside the crystal.	Compromised water resistance.	Immediately take the watch to a qualified service center. Do not attempt to dry it yourself.

## SPECIFICATIONS

Feature	Detail
Model Number	TWG030100JR
Case Diameter	42mm
Strap Length	8 inch (brown strap)
Dial Color	Blue
Lens Material	Mineral Glass

Feature	Detail
Water Resistance	Up to 50 meters (164 feet)
Movement Type	Quartz Chronograph
ASIN	B0BJRYN9JM
Manufacturer	Timex



Figure 5: Key durability features of Timex watches.

## WARRANTY AND SUPPORT

Your Timex watch is covered by a limited warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Timex website. For customer support, service, or to purchase genuine Timex parts, please contact Timex customer service through their official website or authorized service centers.

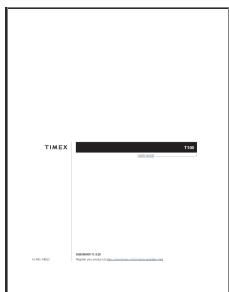
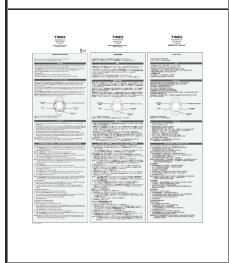
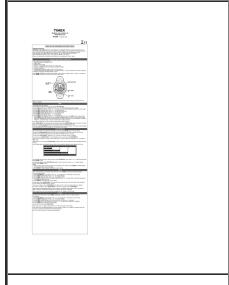
- Official Timex Website: [www.timex.com](http://www.timex.com)
- Timex Store on Amazon: [Timex Amazon Store](http://Timex Amazon Store)

© 2025 Timex. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

## Related Documents - TWG030100JR

	<a href="#"><u>Timex Kids Digital Watch User Guide - Operation and Features</u></a> Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.
--	--

	<p><a href="#"><u>Timex T100 User Guide: Operation, Features, and Maintenance</u></a></p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p>
	<p><a href="#"><u>Timex W-191-AS Watch User Manual and Instructions</u></a></p> <p>Detailed instructions and user guide for the Timex W-191-AS digital watch, covering all features including time/date setting, chronograph, timer, interval timer, alarms, and INDIGLO night-light functionality. Includes warranty information.</p>
	<p><a href="#"><u>Timex W-209 Watch User Manual: Features, Operation, and Warranty</u></a></p> <p>Comprehensive guide to operating your Timex W-209 watch, covering time setting, chronograph, timer, alarms, occasions, INDIGLO night-light, water resistance, battery, and international warranty information.</p>
	<p><a href="#"><u>Timex Kids Digital Watch User Guide</u></a></p> <p>Comprehensive user guide for the Timex Kids Digital Watch (W33 791095007), covering operations, features, water resistance, and maintenance in multiple languages.</p>
	<p><a href="#"><u>Timex Watch User Manual: Features, Operation, and Care</u></a></p> <p>Comprehensive user manual for Timex watches, detailing features like analog and digital time, multiple time zones, alarms, chronographs, timers, water resistance, and bracelet adjustment.</p>