

[manuals.plus](#) /› [De'Longhi](#) /› [DeLonghi EC 785.AE Dedica Espresso Machine User Manual](#)

De'Longhi EC 785.AE Dedica

DeLonghi EC 785.AE Dedica Espresso Machine User Manual

Model: EC 785.AE Dedica (0132106258)

1. INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your DeLonghi EC 785.AE Dedica espresso machine. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance corresponds to your mains voltage.
- Keep the appliance out of reach of children.
- Do not touch hot surfaces. Use handles or knobs.
- Unplug from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug.
- Use only original DeLonghi accessories and spare parts.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your DeLonghi EC 785.AE Dedica espresso machine.



Figure 1: The DeLonghi EC 785.AE Dedica espresso machine from an angled perspective, highlighting its compact design and main components like the portafilter, steam wand, and control panel.





Figure 2: A direct front view of the DeLonghi EC 785.AE Dedica espresso machine, detailing the control buttons, portafilter attachment, and steam wand. The 'Dedica' branding is visible on the drip tray.



Figure 3: The DeLonghi EC 785.AE Dedica espresso machine in operation, with two freshly brewed espresso shots in glass cups on the drip tray and a glass of frothed milk (latte) beside it, demonstrating its beverage capabilities.

Key Components:

- **Water Tank:** Removable tank for fresh water.
- **Control Panel:** Buttons for power, single espresso, double espresso, and steam.
- **Portafilter:** Holds ground coffee for brewing.
- **Steam Wand/Milk Frother:** For frothing milk and dispensing hot water.
- **Drip Tray:** Collects excess water and coffee drips.
- **Cup Warmer:** Top surface to pre-heat cups.

4. SETUP

4.1 Unpacking and Initial Cleaning

1. Remove all packaging materials.
2. Wash the water tank, portafilter, and drip tray with warm water and mild detergent. Rinse thoroughly.
3. Wipe the machine body with a damp cloth.

4.2 Filling the Water Tank

- Remove the water tank from the back of the machine.
- Fill the tank with fresh, cold drinking water up to the MAX level indicator.
- Replace the water tank securely.

4.3 First Use and Priming

1. Plug the appliance into a suitable power outlet.
2. Place a container under the portafilter spout and the steam wand.
3. Press the power button to turn on the machine. The lights will flash during heating.
4. Once the lights are steady, press the single espresso button to dispense water through the portafilter.
Repeat this process until water flows smoothly.
5. Turn the steam knob to dispense water through the steam wand for a few seconds. Close the knob.
6. The machine is now primed and ready for use.

5. OPERATING INSTRUCTIONS

5.1 Making Espresso

1. Ensure the machine is on and heated (lights steady).
2. Insert the appropriate filter basket into the portafilter (single or double shot).
3. Fill the filter basket with finely ground espresso coffee. Level the coffee and tamp it firmly.
4. Attach the portafilter to the group head by inserting it from the left and rotating it to the right until it is securely locked.
5. Place one or two cups under the portafilter spouts.
6. Press the single or double espresso button to start brewing. The machine will automatically stop when the programmed volume is reached.
7. To stop brewing manually, press the button again.

5.2 Frothing Milk

1. Press the steam button. The light will flash until the machine reaches steam temperature, then become steady.
2. Fill a pitcher with cold milk (dairy or non-dairy) to about one-third full.
3. Position the steam wand just below the surface of the milk.
4. Turn the steam knob to release steam. Move the pitcher up and down to create foam.
5. Once desired foam and temperature are achieved, turn the steam knob off.
6. Clean the steam wand immediately after use with a damp cloth to prevent milk residue from drying.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance ensure optimal performance and longevity of your espresso machine.

6.1 Daily Cleaning

- **Portafilter:** After each use, remove the portafilter, discard spent coffee grounds, and rinse thoroughly under running water.
- **Drip Tray:** Empty and clean the drip tray daily or when the 'Full' indicator appears. Wash with warm, soapy water.
- **Steam Wand:** Always wipe the steam wand immediately after frothing milk. Periodically, remove the nozzle and rinse it to clear any blockages.
- **Machine Body:** Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners.

6.2 Descaling

Descaling is crucial to remove mineral buildup and maintain machine efficiency. The frequency depends on water hardness and usage. The machine may indicate when descaling is needed.

1. Use a suitable DeLonghi descaling solution. Follow the instructions on the descaler packaging.
2. Empty the water tank and fill it with the descaling solution mixed with water as per instructions.
3. Place a large container under the portafilter and steam wand.
4. Initiate the descaling cycle as described in the full product manual (usually by pressing and holding specific buttons).
5. After the descaling solution has run through, rinse the water tank and fill it with fresh water. Run several cycles of fresh water through the machine to thoroughly rinse it.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
No coffee dispenses.	No water in tank; machine not primed; coffee too finely ground/tamped too hard; clogged filter.	Fill water tank; prime the machine; use coarser grind/lighter tamp; clean filter basket.
Coffee is too weak.	Coffee too coarsely ground; not enough coffee; tamped too lightly.	Use finer grind; increase coffee quantity; tamp more firmly.
Water leaks from machine.	Water tank not correctly inserted; drip tray full; portafilter not properly attached.	Ensure water tank is secure; empty drip tray; re-attach portafilter correctly.
Steam wand not frothing milk.	Steam wand clogged; not enough steam pressure.	Clean steam wand nozzle; ensure machine is at steam temperature.

8. SPECIFICATIONS

Technical details for the DeLonghi EC 785.AE Dedica espresso machine.

Feature	Detail
Brand	De'Longhi
Model Number	0132106258

Feature	Detail
Type of Coffee Maker	Espresso Machine
Operating Mode	Semi-automatic
Material	Metal
Product Dimensions (L x W x H)	37P x 39I x 20H centimeters
Item Weight	1 Kilograms <i>(Note: This weight may refer to packaging or a component, actual product weight may vary.)</i>

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase spare parts and accessories, please refer to the warranty card included with your product or visit the official De'Longhi website. Contact customer service for assistance with any issues not covered in this manual.

Related Documents - EC 785.AE Dedica

	<p><u>De'Longhi Dedica Maestro EC900 Coffee Machine User Manual</u></p> <p>Comprehensive user manual for the De'Longhi Dedica Maestro EC900 coffee machine, covering setup, operation, maintenance, troubleshooting, and technical specifications.</p>
	<p><u>De'Longhi Dedica Arte EC885 Coffee Maker User Manual</u></p> <p>Comprehensive user manual for the De'Longhi Dedica Arte EC885 coffee maker, covering setup, operation, maintenance, and troubleshooting. Learn how to make espresso, cappuccino, and hot water.</p>
	<p><u>De'Longhi EC885 DEDICA ARTE Espresso Machine User Manual</u></p> <p>This user manual provides comprehensive instructions for operating, maintaining, and troubleshooting the De'Longhi EC885 DEDICA ARTE espresso machine. It covers parts identification, initial setup, brewing espresso and cappuccino, cleaning procedures, and common issue resolution.</p>



[De'Longhi EC885 Dedica Arte Coffee Maker User Manual](#)

Comprehensive user manual for the De'Longhi EC885 Dedica Arte coffee maker, covering setup, operation, cleaning, and troubleshooting in English.



[De'Longhi Dedica Arte EC885 Coffee Maker User Manual](#)

Comprehensive user manual for the De'Longhi Dedica Arte EC885 coffee maker, detailing setup, operation, cleaning, descaling, troubleshooting, and indicator light explanations.



[De'Longhi EC885 Dedica Arte Coffee Maker User Manual](#)

Comprehensive user manual for the De'Longhi EC885 Dedica Arte coffee maker, detailing setup, operation, maintenance, cleaning, and troubleshooting for optimal coffee brewing.