

IBELL WIND60

IBELL WIND60 High Pressure Washer User Manual

Model: WIND60

1. INTRODUCTION

Thank you for choosing the IBELL WIND60 High Pressure Washer. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new pressure washer. Please read these instructions carefully before use and retain them for future reference.

The IBELL WIND60 is designed for effective cleaning of various surfaces, including vehicles, patios, driveways, and outdoor furniture, utilizing a powerful 1600W induction motor and 125 bar pressure.

2. SAFETY INSTRUCTIONS

WARNING: Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Electrical Safety:** Ensure the power supply matches the voltage specified on the product label. Always use a grounded outlet and avoid using extension cords unless absolutely necessary and rated for outdoor use. Do not operate the unit with wet hands or while standing in water.
- **Water Connection:** Connect the pressure washer only to a potable water supply. Ensure all connections are secure and leak-free. Do not run the pump without water.
- **Operating Pressure:** Never direct the high-pressure spray at people, pets, or electrical equipment. The high pressure can cause serious injury.
- **Personal Protective Equipment:** Wear appropriate eye protection (safety glasses or goggles) and protective clothing during operation.
- **Children and Pets:** Keep children and pets away from the operating area. This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities.
- **Maintenance:** Disconnect the power plug from the outlet before performing any maintenance or cleaning.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- IBELL WIND60 High Pressure Washer Unit
- Spray Gun
- 5-meter High-Pressure Outlet Hose
- Water Inlet Connector
- Water Inlet Filter
- Foam Bottle
- Adjustable Nozzle



ACCESSORIES



Spray Gun



Nozzles & Turbo Nozzle



Pressure Hose



Hose



Inlet connector



Bucket Filter & Tap connector



Inlet Filter



Foam Bottle

Image: Included accessories for the IBELL WIND60 High Pressure Washer, showing the spray gun, nozzles, hoses, inlet connectors, filters, and foam bottle.

4. PRODUCT FEATURES

The IBELL WIND60 High Pressure Washer is equipped with several features designed for efficient and safe cleaning:

- **1600W Induction Motor:** Provides powerful and consistent cleaning performance with reduced noise and extended lifespan.
- **125 Bar Max Pressure:** Delivers strong water pressure to tackle stubborn dirt and grime.
- **6 L/min Flow Rate:** Ensures efficient water usage while maintaining cleaning power.
- **5-Meter High-Pressure Hose:** Offers extended reach for various cleaning tasks.
- **IPX5 Waterproof Rating:** Provides protection against water jets from any direction.
- **Automatic Shut-off System:** The pump automatically shuts off when the trigger is not engaged, saving energy and prolonging pump life.
- **Thermal Protector:** Protects the motor from overheating during prolonged use.
- **Portable Design:** Lightweight build with wheels for easy transport and storage.



The image shows a black and orange high-pressure washer with a long handle and a trigger gun. The brand name 'IBELL' and model 'WIND60' are visible on the device. The background is a large orange graphic with the text 'IBELL WIND60'.

-  **INDUCTION MOTOR**
-  **MOTOR POWER 1600 W**
-  **RATED PRESSURE 125 BAR**
-  **MAX.FLOW RATE 6 L/MIN**

Image: Overview of key features including induction motor, 1600W motor power, 125 bar rated pressure, and 6 L/min max flow rate.



Image: Illustration of the high-powered motor, highlighting 1600 Watts and 120 Pressure Bar capabilities.

5. SETUP

Follow these steps to set up your IBELL WIND60 High Pressure Washer:

1. **Assemble the Handle:** Attach the handle to the main unit if it is not already pre-assembled. Ensure it clicks securely into place.
2. **Connect the High-Pressure Hose:** Connect one end of the 5-meter high-pressure hose to the high-pressure outlet on the unit and the other end to the spray gun. Tighten all connections firmly by hand.
3. **Connect the Water Supply:** Attach the water inlet connector to the water inlet on the pressure washer. Connect a standard garden hose (not included) to the inlet connector and to a potable water source. Ensure the water inlet filter is properly installed to prevent debris from entering the pump.
4. **Connect the Spray Gun:** Attach the adjustable nozzle to the spray gun. If using the foam bottle, attach it as per its specific instructions.
5. **Connect Power:** Plug the power cord into a grounded electrical outlet.

Deep Clean, Fast Results

Conquer Stubborn Dirt with High-Performance Pressure.



Equipped with Sturdy Wheels for Easy Movement Around Your Home



Unleash the Ultimate Power Washer For Sparkling Clean Surfaces

Image: Close-up of the pressure washer's sturdy wheels for easy movement and the high-performance nozzle.

6. OPERATING INSTRUCTIONS

Before starting, ensure all connections are secure and the water supply is turned on.

1. **Purge Air from the System:** Squeeze the trigger on the spray gun to allow water to flow through the system and expel any trapped air. Continue until a steady stream of water emerges.
2. **Start the Unit:** Turn the power switch to the 'ON' position. The motor will start, and the pump will build pressure.
3. **Adjust Nozzle:** Rotate the adjustable nozzle to select the desired spray pattern, from a concentrated jet for tough spots to a wider fan for general cleaning.
4. **Apply Detergent (Optional):** If using the foam bottle, fill it with appropriate pressure washer detergent. Attach it to the spray gun as instructed. The pressure washer will draw detergent and mix it with water.
5. **Begin Cleaning:** Hold the spray gun firmly and direct the spray at the surface to be cleaned, maintaining a safe distance. Move the spray gun steadily to ensure even cleaning.
6. **Automatic Shut-off:** When the trigger is released, the motor will automatically shut off. It will restart when the trigger is squeezed again.
7. **After Use:** Turn off the power switch, then turn off the water supply. Squeeze the trigger to release any remaining pressure in the system before disconnecting hoses and storing the unit.



**DEEP
CLEAN
EVERY
DRIVE**

Image: A person using the IBELL WIND60 High Pressure Washer to clean a car, demonstrating its deep cleaning capability.

MUTIPURPOSE USE



Image: Various applications of the pressure washer, including cleaning cars, bikes, solar panels, patios, and fences.

Your browser does not support the video tag.

Video: An overview demonstrating the IBELL WIND60 High Pressure Washer's features and various cleaning applications.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your pressure washer.

- **Clean Water Inlet Filter:** Regularly check and clean the water inlet filter to prevent blockages and ensure a steady water flow to the pump.
- **Drain Water for Storage:** Before storing, especially in freezing temperatures, ensure all water is drained from the pump, hoses, and spray gun to prevent damage. Run the unit for a few seconds without water to clear residual water.
- **Clean Nozzles:** If the spray pattern becomes irregular or pressure drops, clean the nozzle opening with the included nozzle cleaning tool or a thin wire.
- **Store Properly:** Store the pressure washer in a dry, frost-free location. Coil hoses neatly and store the spray

gun and accessories in their designated holders on the unit.

Smart Protection for Every Wash



IPX5 Waterproof

Automatic Shut-off

Thermal Protector

Protective Motor Cover

Image: Visual representation of the smart protection features including IPX5 waterproof rating, automatic shut-off, thermal protector, and protective motor cover.

8. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Unit does not start	No power supply; Power switch off; Thermal overload activated	Check power connection/outlet; Turn power switch ON; Allow unit to cool down.
Low or no pressure	Insufficient water supply; Clogged water inlet filter; Air in pump; Clogged nozzle	Ensure water supply is fully open; Clean water inlet filter; Purge air from system (see Operating Instructions); Clean nozzle.

Problem	Possible Cause	Solution
Water leaks	Loose connections; Damaged O-rings/seals	Tighten all connections; Replace damaged O-rings/seals.
Motor runs continuously when trigger is released	Air in pump; Internal leak	Purge air from system; Contact customer support if problem persists.

9. SPECIFICATIONS

Specification	Value
Brand	IBELL
Model Number	WIND60
Power Source	Corded Electric
Motor Type	Induction Motor
Motor Power	1600W
Maximum Pressure	125 Bars
Maximum Flow Rate	6 Liters Per Minute (7.5 Liters Per Minute in some specifications)
Hose Length	5 Metres
Item Weight	5 Kilograms
Product Dimensions (L x W x H)	30L x 30W x 30H Centimeters
Waterproof Rating	IPX5

10. WARRANTY AND SUPPORT

The IBELL WIND60 High Pressure Washer comes with a **12-month warranty**. This includes a 6-month standard warranty and an additional 6-month warranty upon registration. Registration must be completed within 30 days from the date of purchase to avail the extended warranty.

For warranty claims, technical support, or spare parts, please contact IBELL customer service through their official website or the retailer where the product was purchased. Please have your purchase receipt and product model number ready when contacting support.



