

CUSIMAX E23A

CUSIMAX 24QT 10-in-1 Air Fryer Toaster Oven Combo Instruction Manual

Model: E23A

[Safety Instructions](#) [Product Overview](#) [Setup](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. SAFETY INSTRUCTIONS

Please read all instructions carefully before using the CUSIMAX Air Fryer Toaster Oven. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** This appliance operates at 1700W. Ensure your electrical outlet can support this wattage to prevent circuit overload. Always plug the appliance into a grounded outlet. Unplug the oven from the wall outlet when not in use.
- **Heat Warning:** The exterior surfaces, especially the back of the appliance, can become very hot during operation (up to 425°F). Allow adequate space (at least 2-4 inches) around the oven for proper ventilation and to prevent heat damage to surrounding surfaces. Do not touch hot surfaces directly; always use oven mitts or the provided rack handle.
- **General Use:** Use the appliance only for its intended household purpose. Do not operate if the appliance or cord is damaged. Keep children and pets away from the appliance during operation.
- **Door Safety:** If the door is opened during operation, the heating tube will stop heating and the fan motor will continue to run. The program will be canceled if the door remains open for an extended period.

2. PRODUCT OVERVIEW

The CUSIMAX 24QT 10-in-1 Air Fryer Toaster Oven Combo is a versatile countertop appliance designed to simplify your cooking experience. It combines multiple functions into one compact unit, offering convenience and efficiency.

2.1 Key Features

- **10-in-1 Functionality:** Offers French Fry, Pizza, Toast, Bake, Air Roast, Air Broil, Rotisserie, Grilled Fish, Thaw, and Vegetable modes.
- **Faster & Healthier Cooking:** Utilizes 1700W power and 360° air convection technology for even cooking and crispy

results with up to 75% less fat.

- **Simple & Thoughtful Design:** Features intuitive control knobs, an LED digital screen, and a built-in cooking light for easy monitoring.
- **24.3QT Extra-Large Capacity:** Suitable for family meals, capable of roasting a whole chicken or preparing large batches of food.

2.2 Components and Accessories

The appliance comes with the following accessories to enhance your cooking versatility:


- **Air Fryer Basket:** Ideal for air frying items like French fries and chicken wings.
- **Wire Rack:** Can be used in three rack positions (top, middle, bottom) for various cooking needs.
- **Baking Tray:** Suitable for baking and can be placed in any rack position.
- **Crumb Tray:** Slides out from the bottom front of the oven for easy cleaning. Always ensure it is placed underneath the heating elements when the oven is in use.
- **Rotisserie Forks:** Used with the rotisserie rod for roasting whole poultry or large cuts of meat.
- **Rotisserie Handle:** For safely inserting and removing the rotisserie assembly.
- **Rack Handle:** For safely removing hot racks, baskets, and trays.




Figure 1: CUSIMAX 10-in-1 Air Fryer Toaster Oven Combo (Model E23A).

Package Included

 All accessories are dishwasher safe

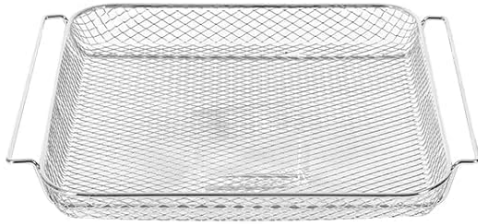

Air Fryer Basket

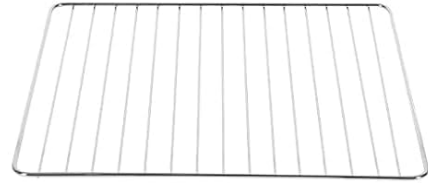 


Wire Rack




Baking Tray



 Crumb Tray

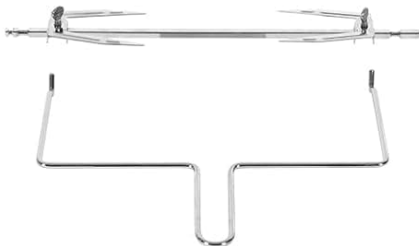

**Rotisserie Forks
Rotisserie Handle**

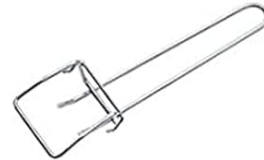 

Rack Handle

Figure 2: All included accessories: Air Fryer Basket, Wire Rack, Baking Tray, Crumb Tray, Rotisserie Forks, Rotisserie Handle, and Rack Handle.

3. SETUP

Before first use, ensure all packaging materials are removed. Place the Air Oven on a flat, stable, level surface, at least 2 to 4 inches away from any walls or other objects to allow for proper ventilation.

1. **Unpack:** Carefully remove the air fryer oven and all accessories from the packaging.
2. **Clean:** Wash all accessories (Air Fryer Basket, Wire Rack, Baking Tray, Rotisserie Forks, Rotisserie Handle, Rack Handle) with warm, soapy water. Wipe the interior and exterior of the oven with a damp cloth. Dry thoroughly.
3. **Insert Crumb Tray:** Slide the removable Crumb Tray into the bottom front of the Air Oven. This tray collects crumbs and drips, making cleanup easier.
4. **Position Racks:** The oven features three rack positions (top, middle, bottom). Choose the appropriate position based on your cooking needs.



Figure 3: Interior view highlighting the 3-rack structure and built-in cooking light for monitoring food.

4. OPERATING INSTRUCTIONS

The CUSIMAX Air Fryer Toaster Oven is designed for ease of use with intuitive controls.

4.1 Control Panel Overview



Figure 4: Simple and clear control interface with Function knob, LED digital screen, Time/Temp knob, and control buttons.

- **Function Knob:** Turn to select desired cooking mode (French Fry, Pizza, Toast, Bake, Air Roast, Air Broil, Rotisserie, Grilled Fish, Thaw, Vegetable).
- **LED Digital Screen:** Displays selected function, time, and temperature.
- **Time/Temp Knob:** Turn to adjust cooking time (1-180 minutes) and temperature (140-450°F).
- **Control Buttons:**
 - **ROTISSERIE:** Activates/deactivates the rotisserie function.
 - **LAMP:** Turns the interior cooking light on/off.
 - **TEMP/TIMER:** Toggles between temperature and time adjustment.
 - **CONFIRM:** Confirms selected settings and starts the cooking program.

4.2 Basic Operation Steps

1. **Plug In:** Connect the power cord to a grounded electrical outlet. The display will show "OFF".
2. **Select Function:** Turn the Function knob to choose your desired cooking mode. The screen will display the default

time and temperature for that mode.

3. **Adjust Time/Temperature (Optional):** If needed, press the TEMP/TIMER button and use the Time/Temp knob to adjust the values.
4. **Start Cooking:** Press the CONFIRM button to begin cooking. The oven will start, and the indicator of the selected function will flash until the time expires.
5. **Monitor Food:** Use the built-in LAMP button to check the cooking status through the glass door.
6. **Finish Cooking:** When the set time has expired, the display screen will show "OFF". Carefully remove food using the Rack Handle or oven mitts.

4.3 Using the Rotisserie Function

The rotisserie function is ideal for evenly roasting whole chickens or other meats.

1. **Assemble:** Force the rotisserie shaft lengthwise through the meat. Slide the forks onto the shaft from either end into the meat, then lock in place with the set screws.
2. **Insert:** Using the Rotisserie Handle, carefully place the rotisserie assembly into the designated slots inside the oven.
3. **Activate:** Select a cooking function (e.g., Air Roast) and then press the ROTISSERIE button to activate rotation.
4. **Remove:** Once cooking is complete, use the Rotisserie Handle to safely remove the hot assembly from the oven.

Your browser does not support the video tag.

Video 1: Demonstration of the CUSIMAX Air Fryer Oven's rotisserie function with a whole chicken. This video shows the preparation and cooking process.

Your browser does not support the video tag.

Video 2: Overview of the CUSIMAX Air Fryer Oven, including a brief look at the rotisserie function and other features.

5. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your appliance.

- **Unplug:** Always unplug the appliance and allow it to cool completely before cleaning.
- **Dishwasher Safe Accessories:** The Air Fryer Basket, Wire Rack, Baking Tray, Crumb Tray, Rotisserie Forks, Rotisserie Handle, and Rack Handle are all dishwasher safe for convenient cleaning.
- **Interior Cleaning:** Wipe the interior with a damp cloth and mild detergent. Avoid abrasive cleaners or scouring pads that could damage the non-stick coating.
- **Exterior Cleaning:** Wipe the exterior with a damp cloth. Do not immerse the appliance in water.



Figure 5: Many accessories are dishwasher-safe for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your CUSIMAX Air Fryer Toaster Oven, refer to the common problems and solutions below. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker.
Food is not cooking evenly.	Overcrowding the basket/rack; incorrect temperature/time; food not flipped.	Avoid overcrowding; ensure proper air circulation. Adjust temperature/time as needed. Flip or shake food halfway through cooking.
Excessive heat radiating from the appliance.	Normal operation; insufficient clearance.	This is normal for high-wattage appliances. Ensure at least 2-4 inches of clearance around the unit for ventilation. Do not place directly under cabinets or near flammable materials.
Rotisserie function not working.	Rotisserie button not pressed; assembly not correctly installed.	Ensure the ROTISSERIE button is pressed after selecting a cooking mode. Verify the rotisserie assembly is correctly seated in the internal slots.

7. SPECIFICATIONS

- **Brand:** CUSIMAX
- **Model Name:** E23A
- **Color:** Black
- **Product Dimensions:** 18.5"D x 17.5"W x 17.5"H
- **Item Weight:** 23 pounds
- **Power Source:** AC adapter
- **Wattage:** 1700W
- **Control Type:** Knob
- **Door Style:** Side Swing
- **Door Material Type:** Stainless Steel
- **Capacity:** 24.3QT
- **Temperature Range:** 140-450°F
- **Time Range:** 1-180 minutes

8. WARRANTY AND SUPPORT

CUSIMAX is committed to providing outstanding products and customer service.

- **Warranty:** This CUSIMAX Air Fryer Toaster Oven is guaranteed for 12 Months from the date of purchase.
- **Customer Service:** Free Lifetime Customer Service is available. If you have any questions or require assistance during use, please contact CUSIMAX customer support via email.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question