

[Manuals.plus](#) /

› [Altec Lansing](#) /

› Altec Lansing Shockwave Wireless Speaker User Manual

Altec Lansing IMT7000

Altec Lansing Shockwave Wireless Speaker User Manual

Model: IMT7000 | Brand: Altec Lansing

1. INTRODUCTION

The Altec Lansing Shockwave Wireless Speaker is a powerful and versatile audio device designed for robust sound and portability. Featuring 60W peak power, multi-color LED party modes, and Party Sync capabilities, it delivers an immersive audio experience for various environments. Its durable construction and long-lasting battery make it ideal for both indoor and outdoor use.

Key Features:

- **Long Lasting Battery:** Up to 6 hours of continuous playback via Bluetooth.
- **Party Sync:** Connects with up to 50 other Party Sync enabled Altec Lansing speakers for synchronized audio.
- **Multi Color LEDs:** Over 9 LED light modes that react to music.
- **Carrying Strap:** Integrated strap for easy portability.
- **AUX Input:** Direct connection for MP3/MP4 players.
- **Built-in Smartphone Charger:** USB-A output for charging devices.
- **IP65 Water Repellent:** Designed to withstand splashes and dust.



Figure 1.1: Key Features of the Shockwave Speaker

2. WHAT'S IN THE BOX

Upon unboxing your Altec Lansing Shockwave Wireless Speaker, please ensure all the following components are present:

- Altec Lansing Shockwave Wireless Speaker
- AC Adapter
- User Manual (this document)

3. PRODUCT OVERVIEW

Top Panel Controls:

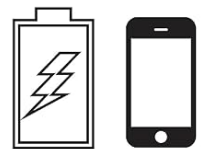


Figure 3.1: Top Panel Controls

- **Power Button:** Press and hold to power on/off.
- **Volume Up/Next Track:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track.
- **Play/Pause/Bluetooth Pairing:** Press to play/pause. Long press to enter Bluetooth pairing mode.
- **LED Light Control:** Cycle through various LED light modes.
- **AUX Mode:** Switch to AUX input mode.

- **Bass Control:** Adjust bass levels.
- **True Wireless Pairing:** Initiate pairing with another Shockwave speaker.

Rear Ports:



**BUILT-IN
SMARTPHONE
CHARGER**

Figure 3.2: Rear Connectivity Ports

- **DC IN (USB-C):** Power input for charging the speaker.
- **RESET:** Small pinhole button to reset the device.
- **AUX IN:** 3.5mm audio input for wired connections.
- **USB OUT:** USB-A port for charging external devices.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the Shockwave speaker. Connect the supplied AC adapter to the DC IN port on the rear of the speaker and plug it into a power outlet. The charging indicator light will illuminate. It will turn off or change color once fully charged.

4.2 Powering On/Off

Press and hold the **Power Button** on the top panel for approximately 3 seconds to turn the speaker on or off.

4.3 Bluetooth Pairing

1. Ensure the speaker is powered on and not connected to another device. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Altec Shockwave" from the list of devices.
4. Once connected, the Bluetooth indicator light on the speaker will become solid, and you will hear an audible confirmation.

4.4 Party Sync (True Wireless Pairing)

To connect two Altec Lansing Shockwave speakers for a stereo experience:



Figure 4.1: Party Sync Feature

1. Ensure both Shockwave speakers are powered on and not connected to any Bluetooth devices.
2. On one speaker (this will be your primary speaker), press the **True Wireless Pairing** button. The speaker will enter pairing mode.
3. On the second speaker, also press the **True Wireless Pairing** button.
4. The speakers will automatically connect to each other. You will hear a confirmation tone.
5. Once paired, connect your mobile device to the primary speaker via Bluetooth as described in Section 4.3. Audio will now play through both speakers in stereo.

5. OPERATING INSTRUCTIONS

5.1 Audio Playback

- **Play/Pause:** Press the **Play/Pause** button.
- **Volume Adjustment:** Short press the **Volume Up** or **Volume Down** buttons.
- **Next/Previous Track:** Long press the **Volume Up** (next) or **Volume Down** (previous) buttons.
- **Bass Control:** Press the **Bass Control** button to cycle through different bass modes.

5.2 LED Light Modes

The Shockwave speaker features multiple LED light modes that can enhance your listening experience. Press the **LED Light Control** button on the top panel to cycle through the available light patterns and colors.



Figure 5.1: Multi Light & Strobe Modes

5.3 AUX Input Usage

To play audio from a device without Bluetooth, use the AUX input:

1. Connect one end of a 3.5mm audio cable (not included) to the AUX IN port on the speaker's rear panel.
2. Connect the other end of the cable to the headphone jack or audio output of your external device.
3. Press the **AUX Mode** button on the top panel to switch to AUX input.
4. Control playback and volume directly from your connected device.

5.4 Using the Built-in Smartphone Charger

The Shockwave speaker can charge your mobile devices via its USB OUT port:

1. Connect your device's charging cable to the USB OUT port on the speaker's rear panel.
2. Ensure the speaker is powered on.
3. Your device will begin charging. Note that charging an external device will reduce the speaker's battery life.

6. MAINTENANCE

6.1 Cleaning

To clean the speaker, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals, cleaning solvents, or strong detergents, as they may damage the speaker's finish or internal components. Ensure all port covers are securely closed before cleaning if using a damp cloth.

6.2 Storage

When not in use for extended periods, store the speaker in a cool, dry place away from direct sunlight and extreme temperatures. It is recommended to charge the battery fully before storing and to recharge it every few months to maintain battery health.

6.3 Battery Care

- Avoid fully discharging the battery frequently.
- Do not expose the speaker to temperatures above 45°C (113°F) or below 0°C (32°F).
- Use only the provided AC adapter for charging.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Connect the speaker to the AC adapter and charge it fully.
No sound from speaker.	Volume is too low; Device not connected; Incorrect input mode.	Increase speaker and device volume; Re-pair Bluetooth or check AUX connection; Ensure correct input mode (Bluetooth/AUX) is selected.
Bluetooth pairing fails.	Speaker is already connected; Device is out of range; Interference.	Disconnect from other devices; Move device closer to speaker (within 10 meters); Turn off other Bluetooth devices nearby; Try resetting the speaker using the RESET pinhole.
Party Sync not working.	Speakers are too far apart; One speaker is already connected to a device.	Ensure speakers are within close proximity; Disconnect any Bluetooth devices from both speakers before initiating Party Sync.
LED lights not working.	Lights are turned off or in a static mode.	Press the LED Light Control button to cycle through modes.

8. SPECIFICATIONS

Feature	Detail
Model Name	Shockwave (IMT7000)
Brand	Altec Lansing
Speaker Type	Multi Room, Portable Bluetooth Speaker
Connectivity Technology	Bluetooth, USB, AUX
Wireless Communication Technology	Bluetooth, FM (Note: FM capability may vary by model version)
Speaker Maximum Output Power	150 Watts (Peak)
Battery Life	Up to 6 Hours (Bluetooth playback)
Power Source	Battery Powered (1 Lithium Ion battery included)
Product Dimensions (D x W x H)	9.65" x 8.74" x 14.45"
Item Weight	7.73 pounds
Water Resistance Level	Water Repellent (IP65 rating)
Bluetooth Range	10 Meters
Included Components	AC Adapter



Figure 8.1: Product Dimensions

9. WARRANTY AND SUPPORT

9.1 Manufacturer's Warranty

The Altec Lansing Shockwave Wireless Speaker comes with a **1 Year Manufacturer Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.

For warranty claims or service, please retain your proof of purchase.

9.2 Customer Support

For further assistance, technical support, or inquiries regarding your Altec Lansing Shockwave speaker, please visit the official Altec Lansing website or contact their customer service department.
You can find more information and support resources at the [Altec Lansing Store on Amazon](#).

© 2024 Altec Lansing. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0BJW9668Z>

More documents and user manuals: <https://manuals.plus/>