

Altec Lansing SoundRover 75 (IMT8100)

Altec Lansing SoundRover 75 Wireless Speaker User Manual

Brand: Altec Lansing | Model: SoundRover 75 (IMT8100)

1. INTRODUCTION

The Altec Lansing SoundRover 75 is a powerful 75W Bluetooth speaker designed for robust audio performance and portability. It features a long-lasting battery, multi-color LED party modes, and True Wireless Pairing capabilities, allowing you to connect two SoundRover 75 speakers for an enhanced stereo experience. A bonus microphone is included for karaoke or public address functions, making it ideal for various indoor and outdoor events.

This manual provides detailed instructions for setting up, operating, and maintaining your SoundRover 75 speaker to ensure optimal performance and longevity.

2. WHAT'S IN THE BOX

- Altec Lansing SoundRover 75 Wireless Speaker
- Microphone
- Charger (AC Power Adapter)
- User Manual (this document)

3. PRODUCT OVERVIEW



Figure 3.1: Front view of the SoundRover 75 speaker, showcasing its robust design and central LED ring.



Figure 3.2: Side view illustrating the integrated carrying handle and wheels for easy transport.

3.1 Control Panel and Ports



Figure 3.3: Detailed view of the rear control panel.

1. **MIC IN:** 6.35mm input for connecting the included microphone.
2. **AUX IN:** 3.5mm auxiliary input for connecting external audio devices.
3. **USB POWER OUT (5V 1A):** USB port for charging external devices like smartphones.
4. **MIC LEVEL:** Rotary knob to adjust the microphone volume.
5. **BASS:** Rotary knob to adjust the bass level of the audio output.
6. **TREBLE:** Rotary knob to adjust the treble level of the audio output.
7. **VOLUME:** Main rotary knob to adjust the overall speaker volume.
8. **POWER (ON/OFF):** Toggle switch to turn the speaker on or off.
9. **AC INPUT:** Port for connecting the AC power adapter to charge the speaker.
10. **ANTENNA:** Extendable antenna for FM radio reception.
11. **Display Screen:** Shows current mode (BT, FM, AUX) and volume level.
12. **Control Buttons:** (FM/LINE, ST/PAIR, LIGHT MODES, Previous Track, Play/Pause/FM Scan, Next Track) for mode selection, pairing, light control, and media playback.

4. SETUP

4.1 Charging the Speaker

Before first use, fully charge the SoundRover 75 speaker. Connect the included AC power adapter to the AC INPUT port on the rear control panel and plug the other end into a standard wall outlet. The battery indicator on the display will show charging status. A full charge provides up to 10 hours of playtime (4 hours with Bluetooth and LED lights active).

4.2 Bluetooth Pairing

1. Ensure the speaker is powered on.
2. Press the **MODE** button (if available, otherwise it should default to Bluetooth or cycle through modes until "BT" appears on the display) to select Bluetooth mode. The display will show "BT" and the Bluetooth indicator will flash, indicating it's ready for pairing.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "SoundRover 75" from the list of devices.
5. Once paired, the Bluetooth indicator on the speaker will stop flashing and remain solid, and you will hear an audible confirmation.

4.3 Microphone Connection



Figure 4.1: Speaker with the included microphone.

Plug the microphone cable into the **MIC IN** port on the rear control panel. Adjust the microphone volume using the **MIC LEVEL** knob.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

To turn the speaker on or off, use the **POWER** toggle switch located on the rear control panel.

5.2 Volume Control

Adjust the overall audio output volume using the large **VOLUME** rotary knob on the rear panel. Use the **BASS** and **TREBLE** knobs to fine-tune the sound profile.

5.3 LED Light Modes



Figure 5.1: Speaker showcasing its dynamic LED light display.

Press the **LIGHT MODES** button on the control panel to cycle through various LED light patterns, including modes that beat, strobe, and pulse to the music. Press and hold the button to turn the lights off or on.

5.4 True Wireless Pairing (TWS)

To pair two Altec Lansing SoundRover 75 speakers for a stereo experience:

1. Ensure both SoundRover 75 speakers are powered on and in Bluetooth mode, but not yet connected to any device.
2. On one speaker, double-press the **ST/PAIR** button. The speaker will enter pairing mode and search for another compatible speaker.
3. The two speakers will automatically connect to each other. Once connected, one speaker will act as the master (left channel) and the other as the slave (right channel).
4. Now, connect your mobile device to the master speaker via Bluetooth as described in Section 4.2. Audio will play in stereo across both speakers.



Figure 5.2: Two SoundRover 75 speakers demonstrating True Wireless Pairing.

5.5 Microphone Usage

After connecting the microphone (Section 4.3), ensure the microphone's ON/OFF switch is set to ON. Speak or sing into the microphone and adjust the **MIC LEVEL** knob on the speaker's rear panel to control the microphone's volume relative to the music.

6. MAINTENANCE

6.1 Cleaning

Wipe the speaker's exterior with a soft, dry cloth. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish. Avoid getting moisture into any openings.

6.2 Battery Care

- To maximize battery life, avoid fully discharging the battery frequently.
- Charge the speaker regularly, even if not in use, to maintain battery health.
- Store the speaker in a cool, dry place when not in use for extended periods.

6.3 Storage

When storing the speaker, ensure it is turned off and disconnected from the power source. Store it in a clean, dry environment away from extreme temperatures and direct sunlight. Utilize the built-in handle and wheels for easy relocation.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted; Power switch is off.	Charge the speaker using the AC adapter; Ensure the POWER switch is in the ON position.
No sound from speaker.	Volume is too low; Incorrect input mode; Device not connected.	Increase speaker volume and source device volume; Press MODE button to select correct input (BT/AUX); Ensure Bluetooth device is paired or AUX cable is connected.
Bluetooth device cannot pair.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode and indicator is flashing; Move device closer to speaker; Turn off other Bluetooth devices nearby.
Microphone not working.	Microphone not connected; MIC LEVEL too low; Microphone switch off.	Ensure microphone is securely plugged into MIC IN; Increase MIC LEVEL knob; Check microphone's ON/OFF switch.
LED lights not working.	Lights are turned off.	Press the LIGHT MODES button to activate or cycle through modes.
True Wireless Pairing fails.	Speakers not in TWS pairing mode; Already connected to a device.	Ensure both speakers are in Bluetooth mode and not connected to any device before initiating TWS pairing. Double-press ST/PAIR on one speaker.

8. SPECIFICATIONS




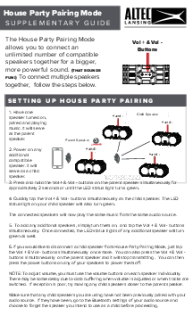
Model Name	SoundRover 75
Item Model Number	IMT8100
Brand	Altec Lansing
Speaker Type	Portable Speaker
Speaker Maximum Output Power	75 Watts
Connectivity Technology	Bluetooth
Bluetooth Range	50 Feet (15.24 Meters)
Battery Life	Up to 10 Hours (4 Hours with Bluetooth and LED lights)
Included Components	Microphone, Charger
Product Dimensions	16"D x 13"W x 22"H
Item Weight	21.7 pounds
Water Resistance Level	Water Resistant
UPC	021331053947



9. WARRANTY AND SUPPORT

The Altec Lansing SoundRover 75 Wireless Speaker comes with a Limited Warranty. For detailed warranty information, terms, and conditions, please refer to the warranty card included with your product or visit the official Altec Lansing website.

For further support, troubleshooting assistance, or to access additional resources, please visit the official Altec Lansing store or support page:

[Visit the Altec Lansing Store](#)

	<p>Altec Lansing SoundRover IMT8100 Quick Start Guide</p> <p>Quick start guide for the Altec Lansing SoundRover IMT8100 wireless party speaker, covering setup, connections, controls, audio modes, light modes, speaker pairing, microphone use, safety, and specifications.</p>
	<p>Altec Lansing IMT8000 Party Speaker Quick Start Guide</p> <p>Concise guide for the Altec Lansing IMT8000 portable party speaker, covering setup, controls, audio modes, microphone use, safety precautions, specifications, FCC statement, and warranty information.</p>
	<p>SoundRover IMT7002 Wireless Party Speaker Quick Start Guide 180W Peak Power</p> <p>Quick start guide for the Altec Lansing SoundRover IMT7002 Wireless Party Speaker, covering setup, controls, audio modes, light modes, True Wireless pairing, microphone usage, specifications, FCC statement, and warranty.</p>
	<p>Altec Lansing House Party Pairing Mode: Supplementary Guide for Multi-Speaker Connection</p> <p>Detailed supplementary guide from Altec Lansing on how to use House Party Pairing Mode to connect multiple compatible speakers for enhanced audio. Includes step-by-step setup instructions and important notes.</p>

 <p>PARTY SPEAKER PORTABLE PARTY ON THE GO</p> <p>UP TO 8 HOURS PLAY TIME</p> <p>Bluetooth</p>	<p>Altec Lansing IMT7006 Portable Party Speaker Quick Start Guide</p> <p>This guide provides essential information for setting up and using the Altec Lansing IMT7006 portable party speaker, including unboxing, controls, connectivity options, light modes, microphone and tripod usage, specifications, safety precautions, and warranty details.</p>
 <p>SOUNDROVER PRO650 BI-AMPLIFIED ACTIVE SPEAKER WALL POWERED FOR 650W PEAK POWER</p> <p>WITH BUILT IN MIXER AND LIGHTING EFFECT</p> <p>Bluetooth</p> <p>ALTEC LANSING</p>	<p>Altec Lansing Soundrover Pro 650: Quick Start Guide and Features</p> <p>Comprehensive guide to the Altec Lansing Soundrover Pro 650 bi-amplified active speaker, covering setup, connections, audio modes, lighting effects, true wireless pairing, and specifications.</p>