



**FFHT2131QMO**

# Refrigerator Door Handle Set Replacement User Manual

Model Numbers: FFHT2131QMO, FFTR1821QB3, FFTR1821QB

Brand: Generic

## INTRODUCTION

---

This manual provides detailed instructions for the installation, maintenance, and troubleshooting of your new Generic Refrigerator Door Handle Set. These handles are designed as direct replacements for various Frigidaire refrigerator models, ensuring a seamless fit and restoration of functionality. Please read this manual thoroughly before beginning installation.



Image: A pair of black glossy refrigerator door handles, designed for replacement on compatible Frigidaire models. Each handle features a sleek, curved design and includes pre-attached mounting brackets for secure installation.

## SETUP AND INSTALLATION

---

Before you begin, ensure you have the necessary tools and take appropriate safety precautions.

### Safety Precautions

- **Unplug the Refrigerator:** Always disconnect power to the refrigerator before performing any maintenance or installation.
- **Wear Gloves:** Protect your hands from sharp edges or pinch points.
- **Handle with Care:** Avoid dropping the new handles to prevent damage.

### Tools Required

- Phillips Head Screwdriver
- Flat Head Screwdriver (optional, for prying if needed)

### Installation Steps

1. **Remove Old Handle:** Locate the screws securing the existing handle. These are typically found on the inside edge of the door or under decorative caps. Use a Phillips head screwdriver to loosen and remove these screws. Carefully pull the old handle away from the door.

- Clean Mounting Area:** Wipe down the area where the old handle was attached to remove any dust or residue.
- Align New Handle:** Position the new replacement handle over the mounting holes on the refrigerator door. Ensure the handle is oriented correctly (e.g., the curved part facing outwards).
- Secure New Handle:** Insert the screws provided with your new handle (or reuse the original screws if compatible and in good condition) into the mounting holes. Tighten the screws firmly but do not overtighten, as this can strip the threads or crack the handle.
- Test Handle:** Gently pull on the newly installed handle to ensure it is securely attached and does not wobble.
- Repeat for Second Handle:** If replacing both handles, repeat the process for the freezer door or second refrigerator door handle.
- Restore Power:** Once both handles are securely installed, plug the refrigerator back into the power outlet.

## USAGE

---

The refrigerator door handles are designed for straightforward operation. Simply grasp the handle firmly and pull to open the refrigerator or freezer door. Push the door gently to close it. Ensure the door seals completely after closing to maintain optimal cooling efficiency.

## MAINTENANCE

---

Proper maintenance will extend the life and appearance of your new refrigerator handles.

- Cleaning:** Wipe the handles regularly with a soft cloth dampened with mild soap and water. Avoid abrasive cleaners, solvents, or harsh chemicals, as these can damage the glossy finish.
- Inspection:** Periodically check the handle's attachment points to ensure screws remain tight. If a handle feels loose, gently tighten the screws.
- Avoid Excessive Force:** Do not use excessive force when opening or closing the doors, as this can put undue stress on the handles and their mounting points.

## TROUBLESHOOTING

---

### Common Issues and Solutions

Problem	Possible Cause	Solution
Handle feels loose or wobbly.	Mounting screws are loose.	Tighten the mounting screws with a Phillips head screwdriver. Do not overtighten.
Difficulty installing the new handle.	Incorrect alignment or incompatible model.	Ensure the handle is correctly aligned with the mounting holes. Verify your refrigerator model number against the compatibility list in the specifications section. If issues persist, contact customer support.
Handle appears scratched or damaged after installation.	Accidental damage during installation or improper cleaning.	Handle with care during installation. Use only mild cleaners and soft cloths for maintenance. If the handle was damaged upon arrival, refer to the warranty information.

## SPECIFICATIONS

---

<b>Feature</b>	<b>Detail</b>
<b>Product Type</b>	Refrigerator Door Handle Set (2 Pack)
<b>Brand</b>	Generic
<b>Color</b>	Black Gloss finish
<b>Material</b>	Stainless Steel
<b>Length</b>	Approximately 17 inches
<b>Item Weight</b>	1 pound (per set)
<b>Product Dimensions</b>	1 x 1 x 1 inches (packaging/approximate)
<b>Special Feature</b>	Easy to Install

Feature	Detail
<b>Compatible Frigidaire Models</b>	<p>FFHI1817LB0, FFHI1817LB1, FFHI1817LB2, FFHI1817LB3, FFHI1817LB4, FFHI1817LB6, FFHI1817LB8, FFHI1817LB9, FFHI1817LBA, FFHI1817LBB, FFHI1817LBC, FFHI1826LB0, FFHI1826LB1, FFHI1826LB2, FFHI1826LB3, FFHI1826LB4, FFHI1826LB6, FFHI1826LB7, FFHI1826LB8, FFHI1826LB9, FFHI1826LBA, FFHI1826LBB, FFHI1826LBC, FFHI1831QE0, FFHI1831QE1, FFHI1831QE2, FFHI1831QE3, FFHI1831QE4, FFHI1831QE5, FFHI1831QE6, FFHI2117LB0, FFHI2117LB2, FFHI2117LB3, FFHI2126LB0, FFHI2126LB1, FFHI2126LB2, FFHI2126LB5, FFHI2126LB6, FFHI2126LB7, FFHI2126PB0, FFHI2126PB1, FFHI2126PB2, FFHI2126PB3, FFHI2126PB4, FFHI2131QE0, FFHI2131QE1, FFHI2131QE2, FFHI2131QE3, FFHT1514QB0, FFHT1514QB1, FFHT1514QB2, FFHT1514QB3, FFHT1514QB4, FFHT1514QB5, FFHT1514QS0, FFHT1514QS1, FFHT1514QS2, FFHT1514QS3, FFHT1514QS4, FFHT1514QS5, FFHT1614QB0, FFHT1614QB1, FFHT1614QB2, FFHT1614QB3, FFHT1614QB4, FFHT1614QB6, FFHT1621QB0, FFHT1621QB1, FFHT1621QB2, FFHT1621QB3, FFHT1621QB4, FFHT1621QB5, FFHT1621QB6, FFHT1621QS0, FFHT1621QS1, FFHT1621QS2, FFHT1621QS3, FFHT1621QS4, FFHT1621QS5, FFHT1621QS6, FFHT1814LB0, FFHT1814LB1, FFHT1814LB2, FFHT1814LB3, FFHT1814LB4, FFHT1814LB5, FFHT1814LB6, FFHT1814LB7, FFHT1814LB8, FFHT1814LB9, FFHT1814LBA, FFHT1814LBB, FFHT1814LBC, FFHT1814LM0, FFHT1814LM1, FFHT1814LM2, FFHT1814LM3, FFHT1814LM4, FFHT1814LM5, FFHT1814LM6, FFHT1814LM7, FFHT1814LM8, FFHT1814LM9, FFHT1814LMA, FFHT1814LMB, FFHT1814QB0, FFHT1814QB1, FFHT1814QB2, FFHT1814QB3, FFHT1816LK0, FFHT1816LK1, FFHT1816LK3, FFHT1816LK4, FFHT1816LK5, FFHT1816LK6, FFHT1816LK7, FFHT1816LS0, FFHT1816LS1, FFHT1816LS3, FFHT1816LS4, FFHT1816LS5, FFHT1816LS6, FFHT1816LS7, FFHT1816PS0, FFHT1816PS1, FFHT1816PS2, FFHT1816PS3, FFHT1816PS4, FFHT1817LB0, FFHT1817LB1, FFHT1817LB2, FFHT1817LB3, FFHT1817LB4, FFHT1817LB5, FFHT1817LB6, FFHT1817LB7, FFHT1817LB8, FFHT1817LB9, FFHT1817LBA, FFHT1817LBB, FFHT1817LBC, FFHT1821QB0, FFHT1821QB1, FFHT1821QB2, FFHT1821QB3, FFHT1821QB4, FFHT1826LB0, FFHT1826LB1, FFHT1826LB2, FFHT1826LB3, FFHT1826LB4, FFHT1826LB5, FFHT1826LB6, FFHT1826LB7, FFHT1826LB9, FFHT1826LBA, FFHT1826LBB, FFHT1826LBC, FFHT1826LBD, FFHT1826LK0, FFHT1826LK4, FFHT1826LK6, FFHT1826LM0, FFHT1826LM1, FFHT1826LM2, FFHT1826LM3, FFHT1826LM4, FFHT1826LM5, FFHT1826LM6, FFHT1826LM7, FFHT1826LM8, FFHT1826LM9, FFHT1826LMA, FFHT1826LMB, FFHT1826LMC, FFHT1826LMD, FFHT1826LS0, FFHT1826LS4, FFHT1826LS6, FFHT1831QE0, FFHT1831QE1, FFHT1831QE2, FFHT1831QE3, FFHT1831QE4, FFHT1831QE5, FFHT1831QE6, FFHT1831QM0, FFHT1831QM1, FFHT1831QM2, FFHT1831QM3, FFHT1831QM4, FFHT1831QM5, FFHT1831QM6, FFHT2021QB0, FFHT2021QB1, FFHT2021QB2, FFHT2116LK0, FFHT2116LK1, FFHT2116LK2, FFHT2116LS0, FFHT2116LS1, FFHT2116LS2, FFHT2117LB0, FFHT2117LB1, FFHT2117LB2, FFHT2117LB3, FFHT2117LB5, FFHT2117LB7, FFHT2117LB8, FFHT2126LB0, FFHT2126LB1, FFHT2126LB3, FFHT2126LB4, FFHT2126LB5, FFHT2126LB7, FFHT2126LM0, FFHT2126LM3, FFHT2126LM4, FFHT2126LM5, FFHT2126LM7, FFHT2126LM8, FFHT2126PB0, FFHT2126PB1, FFHT2126PB2, FFHT2126PB3, FFHT2126PM0, FFHT2126PM1, FFHT2126PM2, FFHT2126PM3, FFHT2126PS0, FFHT2131QE0, FFHT2131QE1, FFHT2131QE2, FFHT2131QE3, FFHT2131QM0, FFHT2131QM1, FFHT2131QM2, FFHT2131QM3, FFTI2126NB1, FFTI2126NB2, FFTI2126NB6, FFTI2126NB7, FFTR1514QB0, FFTR1514QB1, FFTR1514QB2, FFTR1514QB3, FFTR1514QB4, FFTR1514QB5, FFTR1514QB7A, FFTR1514QB8A, FFTR1614QB0, FFTR1614QB1, FFTR1614QB2, FFTR1621QB0, FFTR1621QB1, FFTR1621QB2, FFTR1621QB3, FFTR1621QB4, FFTR1814LB0, FFTR1814LB1, FFTR1814LB2, FFTR1814LB3, FFTR1814LB4, FFTR1814LB5, FFTR1814LB7, FFTR1814LB8, FFTR1814LB9, FFTR1814LBA, FFTR1814LBB, FFTR1814LBD, FFTR1814LBE, FFTR1814LBF, FFTR1814LBG, FFTR1814LBH, FFTR1814LBJ, FFTR1814LBL, FFTR1814LBM, FFTR1814LBN, FFTR1814LM0, FFTR1814LM1, FFTR1814LM2, FFTR1814LM3, FFTR1814LM4, FFTR1814LM5, FFTR1814LM6, FFTR1814LM7</p>

*Note: This list is extensive. Please use Ctrl + F (or Cmd + F on Mac) to search for your specific model number within this document.*

## **WARRANTY AND SUPPORT**

---

Your Generic Refrigerator Door Handle Set comes with a commitment to quality and customer satisfaction.

### **Warranty Information**

- **Product Warranty:** This product is covered by a **60-day warranty** from the date of purchase against manufacturing defects.
- **Money-Back Guarantee:** We offer a **90-day money-back guarantee** from the date of purchase. If you are not satisfied with our product, a refund will be issued.

### **Customer Support**

If you have any questions regarding compatibility, installation, or require assistance with your product, please do not hesitate to contact us. We are committed to resolving your concerns within 24 hours.

#### **Contact Information:**

**Email:** [support@genericparts.com](mailto:support@genericparts.com)

**Website:** [www.genericparts.com/support](http://www.genericparts.com/support)

*Please have your model number and purchase date ready when contacting support.*