

Yescom 11LST005-2FTB-WARM

Yescom Munchkin 2ft LED Spiral Tree Light Instruction Manual

Model: 11LST005-2FTB-WARM

INTRODUCTION

Thank you for purchasing the Yescom Munchkin 2ft LED Spiral Tree Light. This battery-powered decorative light features 79 warm white LEDs and a star finial, designed for both indoor and outdoor use. This manual provides essential information for safe setup, operation, and maintenance of your product.

Important Safety Information

- Do not operate without batteries.
- Use only in light rain; bring indoors during heavy rain or snow to prevent damage.
- Ensure all connections are secure before operation.
- Keep away from open flames and heat sources.
- This product is for decorative purposes only and is not a toy. Keep out of reach of children.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly:

- 1x Coiled Strip (with LED String Light attached)
- 1x Battery Box (Batteries are not included)
- 3x Ground Stakes
- 3x Supporting Legs
- 1x Star Finial
- 1x Stand
- 2x Poles
- 1x Remote Control

- 1x Manual

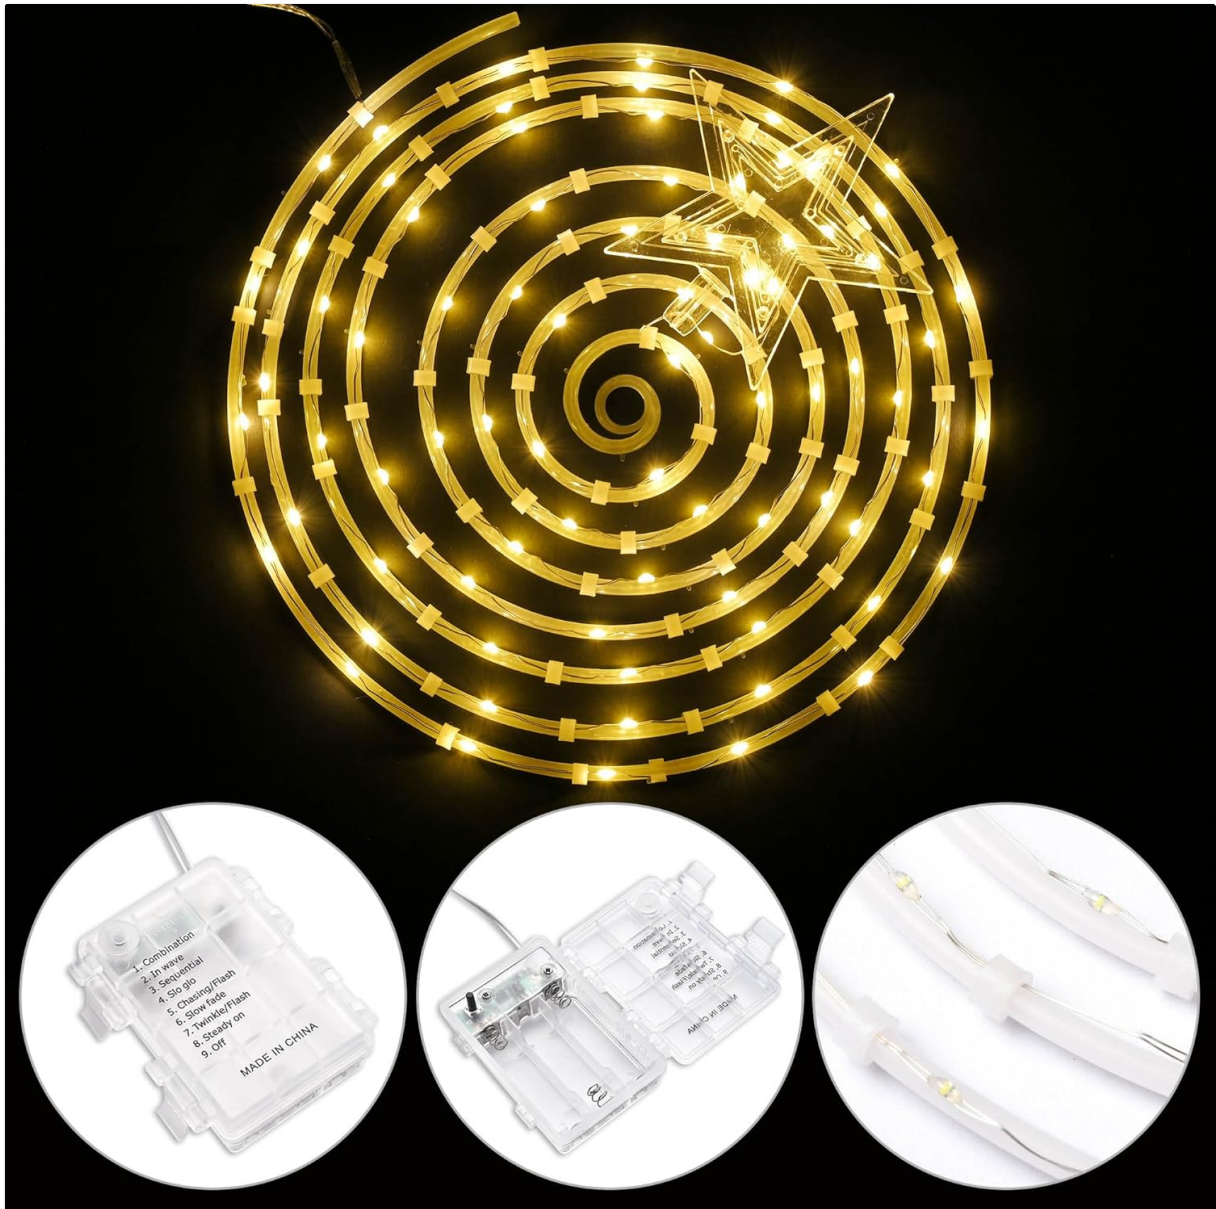


Image: Coiled LED light strip, battery box, and a detailed view of the individual LEDs.

SETUP INSTRUCTIONS

Follow these steps to assemble your LED Spiral Tree Light:

1. **Assemble the Base:** Connect the supporting legs to the stand to form a stable circular base. Secure with the provided screw.
2. **Fixate the Pole:** Insert the two pole sections together to form a single pole. Insert the assembled pole into the center of the base and secure it.
3. **Attach the Coiled Strip:** Carefully uncoil the LED light strip. Place the bottom ring of the coiled strip onto the base. Secure the coiled strip to the pole using the integrated clips or ties, ensuring it forms a spiral shape.
4. **Insert the Star Finial:** Place the star finial onto the top of the pole.
5. **Install Batteries:** Open the battery box and insert the required batteries (not included). Close the battery box securely.
6. **Positioning:** For outdoor use, utilize the ground stakes to enhance stability, especially in windy

conditions.

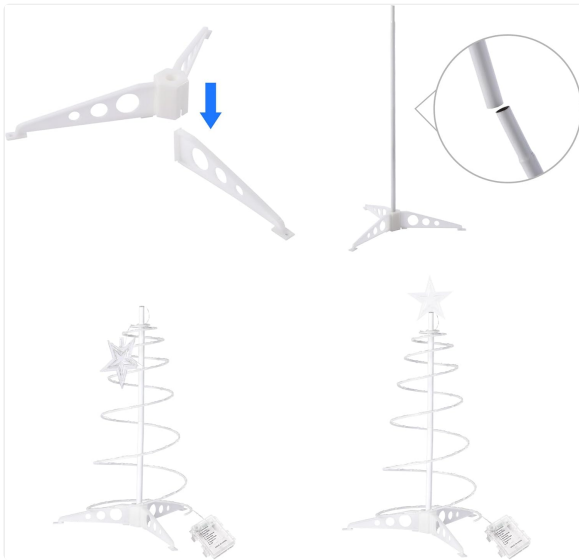


Image: Visual guide for assembling the base and connecting the pole sections.



Image: The fully assembled LED spiral tree light, showing the remote and ground stakes.

Installation Video

For a visual guide on the installation process, please watch the video below:

Your browser does not support the video tag.

Video: Step-by-step instructions for assembling the Yescom LED Spiral Tree Light.

OPERATING INSTRUCTIONS

Your LED Spiral Tree Light is operated using the included remote control.



Image: Remote control with various function buttons.

- **Power ON/OFF:** Press the 'ON' button to turn the lights on, and 'OFF' to turn them off.
- **Lighting Modes:** Press the 'MODE' button or numbers 1-8 to cycle through the 8 available lighting modes:
 - a. Combination
 - b. In Wave
 - c. Sequential
 - d. Slo-glo
 - e. Chasing
 - f. Slow Fade
 - g. Twinkle
 - h. Steady On
- **Timer Function:** Press the 'TIMER' button to activate the built-in smart timer. The lights will stay on for 6 hours and then automatically turn off for 18 hours, repeating the cycle daily.
- **Dimming:** Use the 'DIM +' and 'DIM -' buttons to adjust the brightness of the LEDs.

MAINTENANCE

- **Battery Replacement:** When lights dim or stop working, replace the batteries in the battery box.

Ensure correct polarity.

- **Cleaning:** Wipe the light and components with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, disassemble the light and store it in a cool, dry place away from direct sunlight.
- **Weather Protection:** While water-resistant for light rain, prolonged exposure to heavy rain or snow is not recommended. Bring the unit indoors during severe weather conditions.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights do not turn on.	<ol style="list-style-type: none">1. Batteries are dead or incorrectly inserted.2. Remote control battery is dead.3. Unit is in timer mode and currently off.	<ol style="list-style-type: none">1. Replace batteries in the battery box, ensuring correct polarity.2. Replace the battery in the remote control.3. Press 'ON' button on remote to override timer or wait for next cycle.
Lights are dim.	<ol style="list-style-type: none">1. Batteries are low.2. Dimming function is active.	<ol style="list-style-type: none">1. Replace batteries.2. Use 'DIM +' button on remote to increase brightness.
Remote control not working.	<ol style="list-style-type: none">1. Remote battery is dead.2. Obstruction between remote and receiver.3. Remote is too far from the unit.	<ol style="list-style-type: none">1. Replace remote battery.2. Ensure clear line of sight.3. Move closer to the light unit.
Light unit falls over easily.	Insufficient stability, especially outdoors.	Ensure ground stakes are fully inserted into the ground. Place on a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Model Number	11LST005-2FTB-WARM
Overall Dimension (Dia. x H)	10 5/8" x 27 9/16" (27 x 70 cm)
Pole Diameter	5/8" (1.55 cm)
Each Pole Length	11 13/16" (30 cm)
Luminous Flux	3 lm
LED Quantity	79 pcs
LED Lifespan	50,000 hrs
Power Consumption	1.896 W
IP Rating	IP44 (Water Resistant)

Feature	Detail
Net Weight	0.99 Lb (0.45 kg)
Power Source	Battery Powered
Light Color	Warm White
Frame Material	Metal

27 9/16" (70 cm)



10 5/8" (27 cm)

Image: Product dimensions.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact Yescom customer service directly. Refer to the product packaging or the official Yescom website for the most current contact details and warranty

policies.

You can visit the Yescom store online for additional product information: [Yescom Store](#)