

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Timex](#) /

› [Timex Men's Expedition 41mm Watch User Manual](#)

Timex TW4B285009J

Timex Men's Expedition 41mm Watch User Manual

Model: TW4B285009J

PRODUCT OVERVIEW

The Timex Men's Expedition 41mm Watch is a durable digital timepiece designed for outdoor use. It features a chronograph, alarm, and timer functions, making it suitable for various activities.

Key features include:

- Adjustable strap fits up to 8 inch wrist circumference.
- 100-hour chronograph with lap & split times; 24-hour countdown timer; month, day & date calendar.
- 3 daily, weekday or weekend alarms with 5-minute backup; 24-hour military time mode; 2 time zones.
- Indiglo light-up watch dial for low-light conditions.
- Water-resistant to 100m (330 ft), suitable for snorkeling and swimming, but not diving.

WATCH ANATOMY





Figure 1: Front view of the Timex Expedition watch, highlighting the digital display and function buttons.



Figure 2: Side profile of the watch, illustrating its thickness and strap attachment.





Figure 3: Rear view of the watch strap and buckle mechanism.



Figure 4: Detailed view of the watch's stainless steel case back, indicating water resistance and manufacturing details.



Figure 5: Angled rear view of the watch, providing a comprehensive look at the strap and case.

INITIAL SETUP

Setting Time and Date

1. Press the **MODE** button repeatedly until the time setting mode is displayed (usually indicated by flashing digits).
2. Use the **SET** button to cycle through the settings (hours, minutes, seconds, month, day, year).
3. Use the **START/SPLIT** or **STOP/RESET** buttons to adjust the flashing value up or down.
4. Once all settings are correct, press **MODE** to exit the setting mode.

Activating Indiglo Night-Light

To activate the Indiglo night-light, press and hold the **INDIGLO** button (often the top right button or a dedicated button, refer to watch face for exact label). The display will illuminate for a few seconds.

OPERATING INSTRUCTIONS

Chronograph Function

1. Press **MODE** until the chronograph display appears.
2. Press **START/SPLIT** to begin timing.
3. Press **START/SPLIT** again to record lap/split times without stopping the main timer.
4. Press **STOP/RESET** to pause the chronograph. Press again to resume.

5. To reset, press **STOP/RESET** while the chronograph is paused.

Alarm Function

1. Press **MODE** until the alarm display appears.
2. Use **SET** to select the alarm to set (Alarm 1, 2, or 3).
3. Use **START/SPLIT** or **STOP/RESET** to adjust the alarm time.
4. Press **MODE** to confirm and exit.
5. To activate/deactivate an alarm, press the designated alarm button (refer to watch face or manual for specific button).

Countdown Timer

1. Press **MODE** until the countdown timer display appears.
2. Use **SET** to adjust the desired countdown time.
3. Press **START/SPLIT** to begin the countdown.
4. The watch will emit an alert sound when the timer reaches zero.
5. Press **STOP/RESET** to pause or reset the timer.

CARE AND MAINTENANCE

Water Resistance

This watch is water-resistant to 100 meters (330 feet). This means it is suitable for showering, swimming, and snorkeling. It is **not** suitable for scuba diving or high-impact water sports. Do not press any buttons while the watch is submerged or wet, as this can compromise the water resistance.

Cleaning

Clean the watch case and strap regularly with a soft, damp cloth. For stubborn dirt, a mild soap solution can be used, followed by rinsing with clean water and thorough drying. Avoid using harsh chemicals or abrasive materials.

Battery Replacement

The watch uses 1 Lithium Metal battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is dim or blank.	Low battery.	Replace battery.
Buttons are unresponsive.	Watch may be in a locked mode or require a reset.	Try pressing all buttons simultaneously for a few seconds to perform a soft reset. If issue persists, consult support.

Problem	Possible Cause	Solution
Time is incorrect.	Time needs to be reset after battery change or accidental adjustment.	Follow "Setting Time and Date" instructions.
Water inside the watch.	Seal compromised, buttons pressed underwater.	Immediately take to a qualified watch repair center. Do not attempt to dry it yourself.

PRODUCT SPECIFICATIONS

Model Number: TW4B285009J

Brand: Timex

Water Resistance: 100m (330 ft)

Battery Type: 1 Lithium Metal battery (included)

Display Type: Digital

Functions: Chronograph, Alarm, Countdown Timer, Indiglo Night-Light, Month/Day/Date Calendar, 24-hour military time, 2 time zones.

Case Dimensions: Approximately 41mm

Package Dimensions: 3.5 x 3.03 x 2.52 inches

Item Weight: 2.82 ounces

First Available: October 21, 2022

WARRANTY AND SUPPORT

Timex watches typically come with a limited manufacturer's warranty covering defects in materials and workmanship. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage details.

For technical support, service, or warranty claims, please visit the official Timex website or contact their customer service department. Keep your proof of purchase for any warranty-related inquiries.

Official Timex Website: www.timex.com