

## DELSEY PARIS Carrousel Hardside Expandable Luggage 2-Piece Set (21/28)

# DELSEY PARIS Carrousel Hardside Expandable Luggage (21/28) Instruction Manual

Model: Carrousel Hardside Expandable Luggage 2-Piece Set (21/28)

## 1. PRODUCT OVERVIEW

The DELSEY PARIS Carrousel Hardside Expandable Luggage is designed for secure and confident travel. This 2-piece set (21/28 inch) combines durability with practical features, ensuring your belongings are well-protected and organized.

### Key Features:

- **Durable Construction:** Made from lightweight and shock-resistant polycarbonate, highly resilient against cracking or breaking.
- **Enhanced Security:** Features a patented SECURITECH zip, proven to be three times more resistant than standard zippers, and an integrated 3-dial TSA-approved combination lock.
- **Effortless Mobility:** Equipped with dual-density, silent-core double spinner wheels for a smooth and quiet rolling experience.
- **Expandable Capacity:** Expands up to 2 inches, providing additional packing space when needed.
- **Organized Interior:** Includes tie-down straps, a zipped divider with a lined pocket, and shoe pockets for optimal organization.
- **Easy Maintenance:** The interior lining is removable and machine washable for convenient cleaning.
- **Elegant Design:** Accented with vegan leather and contrast stitching for a sophisticated appearance.



Figure 1: Front view of the DELSEY PARIS Carrousel Hardside Expandable Luggage.







Figure 2: Angled view showcasing the luggage design and vegan leather trim.

## 2. SETUP

---

### 2.1 Setting the TSA Combination Lock

Your DELSEY PARIS luggage comes with an integrated 3-dial TSA-approved combination lock. Follow these steps



to set your personal combination:

1. The lock is preset to 0-0-0 at the factory.
2. Locate the small reset button (usually recessed) next to the dials. Use a pen or a pointed object to press and hold this button.
3. While holding the reset button, rotate the dials to your desired 3-digit combination.
4. Release the reset button. Your new combination is now set.
5. Test your new combination by scrambling the dials and then entering your set combination to open the lock.

**Important:** Remember your combination. *DELSEY PARIS* cannot open your luggage if you forget your code.



Figure 3: Detail of the integrated TSA combination lock.

## 2.2 Adjusting the Telescopic Handle

The telescopic handle can be adjusted to multiple heights for comfortable maneuvering. Press the button located on the top of the handle to extend or retract it. Ensure the handle is fully extended or retracted before moving the luggage.







## 3. OPERATING INSTRUCTIONS

---

### 3.1 Using the Spinner Wheels

The luggage is equipped with dual-density, silent-core double spinner wheels. These wheels allow for 360-degree rotation, enabling you to push, pull, or roll the luggage effortlessly in any direction. For optimal performance, ensure all wheels are free from debris.







Figure 5: Detail of the dual-density spinner wheels.

### 3.2 Expanding the Luggage

To expand the luggage and gain additional packing space, locate the expansion zipper running along the perimeter of the suitcase. Unzip this zipper to release the extra capacity. Zip it back up to return to the standard size.

### 3.3 Organizing the Interior

The interior features a zipped divider, mesh pockets, and shoe pockets to help keep your belongings organized. Use the tie-down straps to secure your clothes and prevent them from shifting during transit.



Figure 6: Interior view showing organizational features.

## 4. MAINTENANCE

---

### 4.1 Cleaning the Exterior

To clean the polycarbonate exterior, wipe it with a soft cloth dampened with mild soap and water. Avoid abrasive



cleaners or solvents, as these can damage the finish.

### 4.2 Cleaning the Interior Lining

The interior lining is removable and machine washable. Unzip the lining from the interior of the luggage, wash it on a gentle cycle with cold water, and air dry. Ensure the lining is completely dry before reattaching it to prevent mildew.

### 4.3 Wheel Maintenance

Periodically check the spinner wheels for any accumulated dirt or debris. Clean them gently with a damp cloth to ensure smooth operation. Avoid using lubricants that may attract more dirt.

## 5. TROUBLESHOOTING

### 5.1 Lock Not Opening

- Ensure you are entering the correct 3-digit combination.
- If you have forgotten your combination, DELSEY PARIS cannot assist in opening the lock. It is crucial to remember your set code.
- Verify that the zipper pullers are correctly inserted into the lock mechanism.

### 5.2 Sticking Wheels

- Check for any hair, lint, or debris caught in the wheel axles. Carefully remove any obstructions.
- Clean the wheels and their housing with a damp cloth.

### 5.3 Zipper Issues

- If a zipper is stuck, avoid forcing it. Gently pull the fabric away from the zipper teeth and try to move the slider.
- Ensure the zipper is aligned correctly along its track.

## 6. SPECIFICATIONS

| Feature                     | Detail                          |
|-----------------------------|---------------------------------|
| Brand Name                  | DELSEY PARIS                    |
| Model Number                | 40208797511                     |
| Size                        | 2-Piece Set (21/28)             |
| Item Dimensions (L x W x H) | 19.5"L x 12.5"W x 30"H          |
| Item Weight                 | 12.6 Pounds                     |
| Material Type               | Polycarbonate (PC)              |
| Shell Type                  | Hard                            |
| Wheel Type                  | Spinner (8 wheels)              |
| Lock Type                   | Combination Lock (TSA Approved) |

|                        |                                                                            |
|------------------------|----------------------------------------------------------------------------|
| Capacity               | 161 Liters                                                                 |
| Water Resistance Level | Water Resistant                                                            |
| Special Features       | Expandable, TSA Lock, Telescopic Handle, Tie Down Straps, Zippered Divider |

## 7. WARRANTY INFORMATION

---

For detailed warranty information regarding your DELSEY PARIS Carrousel luggage, please refer to the official DELSEY PARIS website or the warranty card included with your purchase. Warranty terms and conditions may vary and typically cover manufacturing defects. Damage caused by airline handling or misuse is generally not covered under the manufacturer's warranty.

## 8. CUSTOMER SUPPORT

---

Should you require further assistance, have questions, or need to report an issue, please contact DELSEY PARIS customer support through their official website. You can find contact details and FAQs on the [DELSEY PARIS Store on Amazon](#) or their main corporate website.

## 9. PRODUCT VIDEOS

---

### 9.1 DELSEY PARIS Carrousel Collection Overview

Your browser does not support the video tag.

Video 1: An overview of the DELSEY PARIS Carrousel Collection, highlighting its design and features.

### 9.2 DELSEY PARIS Carrousel Hardside Expandable Luggage Features

Your browser does not support the video tag.

Video 2: A closer look at the hardside expandable features of the DELSEY PARIS Carrousel luggage.