

[manuals.plus](#) /› [FULLJA](#) /› [FULLJA 11 Inch WiFi Digital Picture Frame User Manual](#)**FULLJA 222**

FULLJA 11 Inch WiFi Digital Picture Frame User Manual

Brand: FULLJA | Model: 222

1. INTRODUCTION

Thank you for choosing the FULLJA 11 Inch WiFi Digital Picture Frame. This smart cloud digital photo frame is designed to help you easily share and display your cherished photos and videos with family and friends. Featuring a vibrant IPS touch screen and smart motion sensor, it offers a user-friendly experience for preserving and reliving your precious memories.



The FULLJA 11 Inch WiFi Digital Picture Frame, showcasing its sleek design and the Vphoto app for easy photo sharing.

2. SETUP GUIDE

Follow these steps to set up your FULLJA Digital Picture Frame and begin sharing memories:

- Plug In:** Connect the power adapter to the frame and a power outlet. The frame will automatically power on.
- Connect to WiFi:** On the frame's touch screen, navigate to settings and connect to your home WiFi network. The frame supports both 2.4 GHz and 5GHz networks.
- Download Vphoto App:** Download the "Vphoto" app from your smartphone's app store (available for iOS and Android).
- Bind Frame to App:** Open the Vphoto app and follow the on-screen instructions to scan the QR code displayed on your frame. This will bind your app to the frame. Alternatively, you can use a connection code for remote binding.
- Share via Vphoto:** Once bound, you can easily upload photos and videos directly from your smartphone to the frame using the Vphoto app.
- Alternative Sharing:** Photos and videos can also be sent to the frame via email (the frame's unique email address is found in settings) or by connecting a computer via Micro USB cable. The frame also supports

direct media playback from a TF/Micro SD memory card.

User-friendly & Easy Setup

Only a few steps to complete the setup and share via APP or Email easily with WiFi

Or share by the Micro USB cable connecting Computer without WiFi



APP



Mail



Micro USB



User-friendly setup allows sharing via app, email, or Micro USB connection.

FULLJA 11" 2K Smart Digital Photo Frames **Record Your Good Times**



Visual representation of the five key setup steps for the digital frame.

3. OPERATING INSTRUCTIONS

3.1 Touch Screen Navigation


The frame features an intuitive touch screen interface. You can easily browse through photos and videos, delete files, adjust brightness, or pause the slideshow with a simple tap of your finger.

3.2 Photo and Video Display

The 2K (2176x1600 resolution) IPS display ensures clear and vivid photo quality with wide viewing angles and accurate color reproduction. You can customize slideshow modes, sorting options, and choose to display captions for your memories.

Wide Full Viewing Angle Screen

Our 2K IPS display delivers crisp and clear picture quality from every angle.

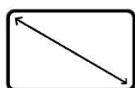

11"inch Screen Size



2K Resolution
2176*1600

4:3

4:3

IPS

IPS Display

The 2K IPS display provides a wide full viewing angle, ensuring clear images from any perspective.

3.3 Smart Motion Sensor

The integrated motion sensor allows the digital frame to automatically turn on when you approach and turn off when you leave, contributing to energy saving.

Smart Motion Sensor Function

The digital frame will automatically turn on and off when you approach and leave for energy-saving



The smart motion sensor function automatically turns the frame display on or off.

3.4 Additional Features

- **Clock and Calendar:** The frame can display the current time and date, and includes an alarm clock function.
- **Music Playback:** Music can be played in the background during slideshows.
- **Sleep Mode:** Schedule specific times for the frame to automatically turn off its display.
- **Notifications:** Receive an audible chime when new pictures are received.

4. MAINTENANCE

To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:

- **Cleaning the Screen:** Use a soft, dry, lint-free cloth to gently wipe the screen. Avoid using abrasive cleaners, solvents, or spray directly onto the screen.

- **Cleaning the Frame Body:** Wipe the frame body with a soft, slightly damp cloth. Ensure no moisture enters the device.
- **Storage:** When not in use for extended periods, store the frame in a cool, dry place away from direct sunlight and extreme temperatures.
- **Power Off:** Always power off the device properly before unplugging or performing any cleaning.

5. TROUBLESHOOTING

If you encounter any issues with your FULLJA Digital Picture Frame, please refer to the following common solutions:

- **Frame Does Not Power On:**
 - Ensure the power adapter is securely connected to both the frame and a working power outlet.
 - Verify the power outlet is functional by plugging in another device.
- **Cannot Connect to WiFi:**
 - Double-check your WiFi password.
 - Ensure the frame is within range of your WiFi router.
 - Restart your WiFi router and the digital frame.
 - Confirm your router supports 2.4 GHz or 5GHz networks, and that the frame is attempting to connect to a compatible band.
- **Photos/Videos Not Appearing on Frame:**
 - Ensure the frame is connected to WiFi if sharing via app or email.
 - Verify that the Vphoto app is correctly bound to your frame (check the connection code/QR code).
 - When transferring via app, note that some apps may have limits (e.g., 50 photos at a time).
 - If using email, ensure the connection code is in the subject line unless the sender's email is already approved.
 - For Micro USB or TF/SD card, ensure files are in supported formats and the storage device is properly inserted/connected.
- **Videos Do Not Sync with Pictures in Slideshow:**
 - The frame is designed to play videos and pictures separately. Videos typically need to be watched individually and do not seamlessly integrate into a continuous photo slideshow.
- **Initial Setup Issues (Frame Locks Up):**
 - During initial setup, ensure you complete the steps (device name, location, time zone) in the exact order presented on the screen.
 - If the frame locks up, perform a factory reset (refer to the settings menu for this option) and restart the setup process, carefully following the on-screen prompts in sequence.
- **Power Cord Appears Short:**
 - If the provided power cord is too short for your desired placement, consider using a compatible extension cord or sourcing a longer 5V/2A power cable with the correct connector tip.
- **App Progress Bar in Chinese:**

- This is a known minor display issue within the app's interface. It does not affect the functionality of the transfer process.

6. SPECIFICATIONS


Brand	FULLJA
Model Number	222
Screen Size	11 Inches
Resolution	2176 x 1600 (2K Ultra HD)
Display Type	IPS Touch Screen
Internal Storage	16GB
Connectivity	Dual WiFi (2.4 GHz & 5GHz), Micro USB, TF/Micro SD Card Slot
Compatible Devices	Personal Computer, Smartphone, Tablet
Color	Black
Product Dimensions	9.84 x 12.2 x 0.99 inches
Item Weight	1.83 pounds

7. WARRANTY AND SUPPORT

Your FULLJA Digital Picture Frame comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures product quality. For technical support, after-sales service, or any inquiries regarding your product, please contact FULLJA customer support through the contact information provided in your product packaging or on the official FULLJA website. Please retain your proof of purchase for warranty claims.

Related Documents - 222

	FULLJA Digital Photo Frame User Manual: Setup, Features, and Troubleshooting Comprehensive user manual for the FULLJA Digital Photo Frame. Learn about setup, features, WiFi connectivity, app integration, media playback, settings, troubleshooting, and technical specifications.
---	--

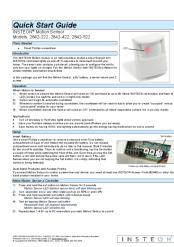 <small>Digital Photo Frame</small> <small>User Manual</small>	<p><u>FULLJA Digital Photo Frame User Manual - Features, Setup, and Troubleshooting</u></p> <p>Comprehensive user manual for the FULLJA Digital Photo Frame (JT101M). Learn about setup, features, Wi-Fi connection, app usage, media playback, settings, troubleshooting, and technical specifications.</p>
 <small>INSTEON</small>	<p><u>Insteon Motion Sensor Owner's Manual</u></p> <p>A comprehensive guide to the Insteon Motion Sensor, covering installation, basic linking, app configuration for iOS and Android, local programming, factory reset, specifications, troubleshooting, and warranty information.</p>
 <small>INSTEON</small>	<p><u>INSTEON Motion Sensor Quick Start Guide: Models 2842-222, 2842-422, 2842-522</u></p> <p>A quick start guide for the INSTEON Motion Sensor (models 2842-222, 2842-422, 2842-522). Learn how to install, set up, configure, and troubleshoot this smart home motion detector for automated lighting and security.</p>
 <small>INSTEON</small>	<p><u>INSTEON Motion Sensor Quick Start Guide Models 2842-222, 2842-422, 2842-522</u></p> <p>INSTEON Motion Sensor Quick Start Guide: Learn how to install, set up, and operate your INSTEON Motion Sensor (Models 2842-222, 2842-422, 2842-522) for smart home automation, including placement tips, troubleshooting, and advanced settings.</p>
 <small>Miele</small>	<p><u>Miele Dishwasher Operating Instructions: Model HG07-W and Series G 7311/G 7316</u></p> <p>Official operating manual for Miele dishwashers, including models HG07-W, G 7311, and G 7316. This guide provides comprehensive information on setup, safe operation, program selection, cleaning, maintenance, and troubleshooting for Miele appliances.</p>

Documents - FULLJA – 222

no relevant documents