

Intenso 3717474

Intenso Video Scooter BT MP3 Player User Manual

Model: 3717474

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Intenso Video Scooter BT MP3 Player. Please read this manual thoroughly before operating the device and retain it for future reference. This device allows you to play music (MP3), videos (MP4), and view images on its 1.8-inch color display, with the added convenience of Bluetooth connectivity.

2. PRODUCT OVERVIEW

The Intenso Video Scooter BT is a compact and portable media player designed for on-the-go entertainment. It features a 1.8-inch color display, 16 GB of internal storage, and Bluetooth for wireless audio streaming.



Figure 2.1: The Intenso Video Scooter BT MP3 Player in blue, shown with the included headphones connected. The microUSB port for charging and data transfer, and the microSD card slot for expandable storage, are visible on the side.





Figure 2.2: A close-up view of the Intenso Video Scooter BT MP3 Player's front panel, displaying the 1.8-inch screen and the navigation buttons. The central button is for play/pause/confirm, surrounded by directional controls, and dedicated buttons for menu, back, and volume.

Package Contents:

- Intenso Video Scooter BT MP3 Player
- Headphones
- USB Cable
- User Manual (this document)

3. SETUP

3.1 Charging the Device

1. Connect the small end of the included USB cable to the microUSB port on the player.
2. Connect the large end of the USB cable to a powered USB port on a computer or a compatible USB wall adapter (not included).
3. The battery indicator on the screen will show charging status. A full charge typically takes approximately 2-3 hours.

3.2 Inserting a MicroSD Card

The device supports microSDHC cards for expanded storage. To insert a card:

1. Locate the microSD card slot on the side of the player.
2. Gently insert the microSD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

3.3 Connecting to a Computer and Transferring Files

1. Ensure the player is powered on.
2. Connect the player to your computer using the supplied USB cable.
3. The player will appear as a removable disk drive on your computer.
4. Drag and drop your desired MP3 music, MP4 videos, or image files into the appropriate folders on the player or inserted microSD card.
5. Safely eject the device from your computer before disconnecting the USB cable.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the power button (often integrated with the play/pause button or a dedicated side button) for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the power button again until the device shuts down.

4.2 Menu Navigation

Use the directional buttons around the central 'Play/Pause/Confirm' button to navigate through menus. The 'Menu' button (often represented by three horizontal lines) typically brings up options or returns to the main menu. The 'Back' button (often a curved arrow) returns to the previous screen.

4.3 Music Playback

1. From the main menu, select 'Music'.
2. Browse through your music library by artist, album, genre, or all songs.
3. Select a song and press the central 'Play/Pause' button to begin playback.
4. Use the left/right directional buttons to skip tracks.
5. Use the volume buttons (often '+' and '-') to adjust the audio level.
6. Press the 'Play/Pause' button to pause or resume playback.

4.4 Video Playback

1. From the main menu, select 'Video'.
2. Browse and select the desired video file.

3. Press the central 'Play/Pause' button to start playback.

4.5 Bluetooth Connectivity

To pair your Intenso Video Scooter BT with Bluetooth headphones or speakers:

1. From the main menu, navigate to 'Bluetooth'.
2. Ensure your Bluetooth audio device is in pairing mode.
3. Select 'Search for Devices' on the player.
4. Once your device appears in the list, select it to pair.
5. After successful pairing, audio will be routed to the connected Bluetooth device.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or solvents.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Check the official Intenso website periodically for any available firmware updates to ensure optimal performance.

6. TROUBLESHOOTING

Device Does Not Turn On:

- Ensure the battery is charged. Connect the player to a power source and allow it to charge for at least 30 minutes before attempting to power on again.
- If the device is unresponsive, locate the 'RESET' pinhole (if present, often on the side or back) and gently press it with a thin object (e.g., a paperclip) to restart the device.

No Sound:

- Check the volume level.
- Ensure headphones are properly connected or that Bluetooth headphones/speakers are paired and connected.
- Test with different headphones to rule out a faulty pair.

Bluetooth Connection Issues:

- Ensure both the player and the Bluetooth audio device are sufficiently charged.
- Make sure both devices are within close proximity (typically within 10 meters) and free from obstructions.
- Try unpairing and re-pairing the devices.
- Restart both the player and the Bluetooth audio device.

Files Not Appearing or Playing:

- Verify that the files are in a supported format (MP3 for audio, MP4 for video).
- Ensure files were transferred correctly to the device's internal storage or the microSD card.
- If using a microSD card, ensure it is properly inserted and not corrupted.


7. SPECIFICATIONS

Model Name	Video Scooter BT
Item Model Number	3717474
Brand	Intenso
Memory Storage Capacity	16 GB
Screen Size	1.8 Inches
Connectivity Technology	USB, Bluetooth
Compatible Devices	Bluetooth Devices
Media Type	MP3, MP4
Special Feature	MP3 Playback, Video Playback
Product Dimensions	6.3 x 3.54 x 1.97 inches
Item Weight	0.917 ounces
Batteries	1 Lithium Polymer battery (included)

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your product or visit the official Intenso website. Keep your proof of purchase for warranty claims.

Related Documents - 3717474

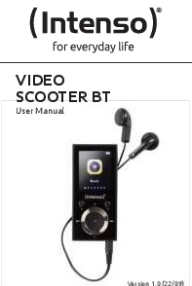 (Intenso) for everyday life VIDEO SCOOTER BT User Manual Version 1.0 (2/2016)	Intenso Video Scooter BT Bedienungsanleitung - Handbuch und Anweisungen Erhalten Sie detaillierte Anweisungen und Sicherheitshinweise für den Intenso Video Scooter BT MP3-Player. Erfahren Sie mehr über Einrichtung, Bedienung, Bluetooth und technische Spezifikationen.
 (Intenso) for everyday life POWERBANK P10000 User Manual Version 1.0	Intenso Powerbank P10000 User Manual: Portable Charging Guide Comprehensive user manual for the Intenso Powerbank P10000. Learn how to use, charge, and maintain your portable charger for reliable power on the go.

(Intenso) for everyday life POWERBANK XC10000 User Manual  Version 1.1	Intenso Powerbank XC10000 User Manual User manual for the Intenso Powerbank XC10000, detailing its features, operation, safety guidelines, technical specifications, and warranty information. Learn how to charge your devices efficiently and safely with this portable power solution.
(Intenso) for everyday life POWER BANK MW5000 User Manual  Version 1.0 (2018)	Intenso Power Bank MW5000 Benutzerhandbuch Entdecken Sie die Intenso Power Bank MW5000 mit diesem umfassenden Benutzerhandbuch. Erfahren Sie mehr über sichere Anwendung, Ladefunktionen, technische Daten und mehr.
(Intenso) for everyday life POWERBANK XC10000 User Manual  Version 1.1	Intenso Powerbank XC10000 User Manual User manual for the Intenso Powerbank XC10000, detailing its features, operation, safety guidelines, technical specifications, and warranty information for this portable charging device.
(Intenso) for everyday life POWER BANK HE25000 User Manual  Version 1.2 (2018)	Intenso Power Bank HE25000 Benutzerhandbuch Benutzerhandbuch für die Intenso Power Bank HE25000 mit Details zu Funktionen, Bedienung, Sicherheitshinweisen und technischen Daten. Erfahren Sie, wie Sie Ihre Geräte effizient mit dieser Hochleistungs-Powerbank aufladen.

[illegible]

[\[pdf\]](#) Decleration of Conformity

Microsoft Word declaration of conformity de MP3 VideoScooterBT Seriennummern Download Video

Scooter BT Intenso Konformitaetserklaerung Deutsch 3717470 3717472 3717473 3717474 ID 330458

intenso 2024 03 |||

EU-KONFORMITÄTSERKLÄRUNG Gem der Norm EN ISO/IEC 17050-1 No Erklärung:
Name und Anschrift des Herstellers: ummern: 1662209003GB16, 1662307003GB16
3717473 pink Seriennummern: 1662209004GB16, 1662307004GB16 **3717474** blue
Seriennummern: 1662209005GB16, 1662307005GB16 DER OBEN
BESCHRIEBENE GEGENSTAND DER E...

lang:en score:31 filesize: 471.82 K page_count: 1 document date: 2024-02-19

[illegible]


[\[pdf\]](#) Specifications Decleration of Conformity

ProductIP B V Bekijk de CE markering Intenso Video Scooter BT MP3 Speler 16GB bluetooth wit

3717472 bol original media s 7z3Pwr8WrqM1 ||

EU DECLARATION OF CONFORMITY In accordance with EN ISO/IEC 17050-1
Declaration number: Name and a ... Intenso MP3 Videoplayer, 16GB Video Scooter
BT 1,8 3717470 - black 3717472 - white 3717473 pink **3717474** - blue THE
PRODUCTS MENTIONED IN THIS DECLARATION ARE IN CONFORMITY WITH:
EU Community Leg...

lang:en score:22 filesize: 165.2 K page_count: 1 document date: 2023-03-06

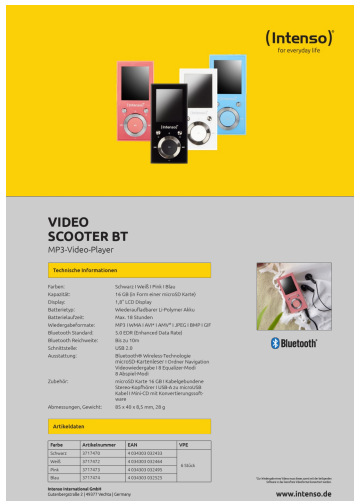

[pdf]

Download Video Scooter BT Intenso mp3 player video scooter bt 0 intenso de sites default files 2022 11

|||


VIDEO SCOOTER BT MP3-Video-Player Technische Informationen Farben: Kapazitt:

Display: Batterietyp: ... 40 x 8,5 mm, 28 g Artikeldaten Farbe Schwarz Wei Pink Blau

Artikelnummer 3717470 3717472 3717473 **3717474** EAN 4 034303 032433 4 034303

032464 4 034303 032495 4 034303 032525 VPE 6 Stck *Zur Wiede...

lang:de score:19 filesize: 374.95 K page_count: 1 document date: 2022-09-27

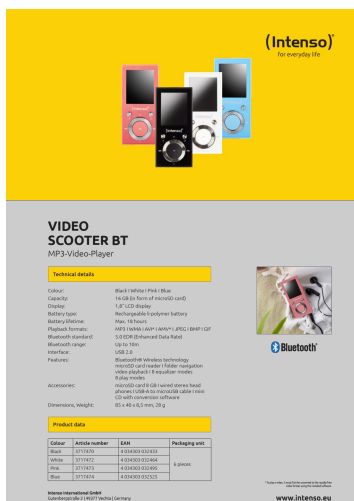

[pdf]

Dimension Guide Accessories

VIDEO SCOOTER BT Intenso Jan 8 2023 — Colour Black I White Pink Blue Capacity 16 GB in form of

microSD card Display 1 LCD display Battery type Rechargeable li polymer battery mp3 video scooter bt

intenso de sites default files 01 |||

VIDEO SCOOTER BT MP3-Video-Player Technical details Colour: Capacity: Display:

Battery type: Batter ... x 8,5 mm, 28 g Product data Colour Black White Pink Blue

Article number 3717470 3717472 3717473 **3717474** EAN 4 034303 032433 4 034303

032464 4 034303 032495 4 034303 032525 Packaging unit 6 piece...

lang:en score:17 filesize: 361.41 K page_count: 1 document date: 2022-09-27



[pdf]

Datenblatt en Intenso MP3 Video Scooter blau @ OFFICE Partner n1000282813

datenblatta862191aH6uZKXib7kkO cdn assets office partner de media 42 4f a0 |||

VIDEO SCOOTER BT MP3-Video-Player Technische Informationen Farben: Kapazitt:

Display: Batterietyp: ... 40 x 8,5 mm, 28 g Artikeldaten Farbe Schwarz Wei Pink Blau

Artikelnummer 3717470 3717472 3717473 **3717474** EAN 4 034303 032433 4 034303

032464 4 034303 032495 4 034303 032525 VPE 6 Stck *Zur Wiede...

lang:de score:17 filesize: 366.42 K page_count: 1 document date: 2022-12-14



[pdf]

Declaration of Conformity

Download Video Scooter BT Intenso Declaration of conformity Englisch 3717470 3717472 3717473

3717474 ID 341580 intenso de 2024 04 |||

...

lang:de score:16 filesize: 175.17 K page_count: 2 document date: 2024-03-28



[Intenso Product Catalog 2025/2026: Storage, Power, Audio & Accessories](#)

Explore the comprehensive Intenso product catalog for 2025/2026, featuring a wide array of storage solutions, power banks, adapters, cables, batteries, earphones, and MP3 players designed for everyday life.

lang:tl score:11 filesize: 4.02 M page_count: 52 document date: 2025-08-27