

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TIME TIMER](#) /

› [TIME TIMER 8 inch Visual Timer - 60 Minute Desk Countdown Clock with Dry Erase Activity Card, Also Magnetic - for Kids Classroom, Homeschooling Study Tool, Task Reminder, Home and Kitchen Timer 8 Inch Educator Edition Timer](#)

TIME TIMER TT08B-W

TIME TIMER 8 inch Visual Timer User Manual

Model: TT08B-W

INTRODUCTION

The TIME TIMER 8 inch Visual Timer is a time management tool designed to visually represent the passage of time. It features a patented red disk that disappears as time elapses, providing a clear and intuitive understanding of remaining time. This timer is suitable for various environments, including classrooms, homes, and offices, and is particularly beneficial for individuals who benefit from visual cues, such as children and those with ADHD or autism.

PRODUCT OVERVIEW

Key Components

- TIME TIMER 8 inch Visual Timer Unit
- Dry-Erase Activity Card



Figure 1: Front view of the Time Timer, illustrating the visual red disk countdown and the slot for the dry-erase activity card.



Figure 2: Rear view of the Time Timer, highlighting the strong magnets for mounting, the optional audible alert switch, and the foldable feet for tabletop use.

SETUP

Battery Installation

The Time Timer requires 2 AA batteries (not included). To install:

1. Locate the battery compartment on the back of the timer.
2. Open the battery compartment cover.
3. Insert 2 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Placement Options

The Time Timer offers versatile placement options:

- **Desk/Tabletop:** Extend the two foldable feet on the back of the timer to stand it upright on any flat surface.
- **Magnetic Surface:** Utilize the strong magnets on the back to attach the timer to magnetic

whiteboards, refrigerators, or other metallic surfaces.

- **Wall Mount:** Use the integrated keyhole slot on the back to hang the timer on a wall using a suitable screw or hook (not included).

OPERATING INSTRUCTIONS

Setting the Timer

To set the desired duration:

1. Locate the center knob on the front of the timer.
2. Turn the knob counter-clockwise to move the red disk to your desired time duration, up to 60 minutes. The red disk will cover the portion of the clock face corresponding to the set time.
3. As time elapses, the red disk will silently disappear in a clockwise direction, visually indicating the remaining time.

Using the Dry-Erase Activity Card

The included dry-erase activity card can be used to label the task or activity associated with the timed period:

1. Write or draw the task on the dry-erase card using a dry-erase marker.
2. Insert the card into the slot located at the top of the timer. This serves as a visual reminder of the current activity.
3. Erase and reuse the card for different tasks as needed.

Optional Audible Alert

The timer features an optional audible alert to signal the end of the timed period:

- Locate the ON/OFF switch for the alert on the back of the timer.
- Set the switch to 'ON' if you wish to hear a sound when the red disk completely disappears.
- Set the switch to 'OFF' for silent operation, ideal for sound-sensitive environments.

FEATURES AND BENEFITS

- **Visual Countdown:** The signature red disk provides a clear, intuitive visual representation of time remaining, making it easy to understand at a glance.
- **Silent Operation:** The timer operates without a ticking sound, ensuring no distractions during focused activities.
- **Versatile Placement:** Can be used freestanding on a desk, magnetically attached to surfaces, or mounted on a wall.
- **Dry-Erase Activity Card:** Allows for customization with specific tasks or reminders, enhancing organization and focus.
- **Promotes Independence:** Helps individuals, especially children, develop a better sense of time and manage transitions between activities independently.



Reinforce the Movements of an Analog Clock



Time Timer is the only visual timer that moves in a clockwise direction. **This setup has been proven** to increase self regulation and ease transitions from one activity to the next.

Figure 3: The Time Timer in use, assisting a child with time management during an activity, demonstrating its application in educational and home settings.



Figure 4: The Time Timer used as a study tool, with a dry-erase card indicating a 'First Then' sequence, aiding in task sequencing and time allocation.

MAINTENANCE AND CARE

Cleaning

To clean your Time Timer:

- Wipe the timer's surface with a soft, dry cloth.
- For stubborn marks, use a slightly damp cloth with mild soap, then dry thoroughly.
- Do not use abrasive cleaners or immerse the timer in water.
- Clean the dry-erase card with a dry-erase eraser or a soft cloth.

Storage

Store the timer in a cool, dry place away from direct sunlight and extreme temperatures when not in use. Remove batteries if storing for extended periods to prevent leakage.

TROUBLESHOOTING

Common Issues and Solutions

Issue	Possible Cause	Solution
Timer not moving/red disk not disappearing.	No batteries, dead batteries, or incorrect battery installation.	Ensure batteries are installed correctly with proper polarity. Replace with fresh AA batteries.
Audible alert not sounding.	Alert switch is OFF or batteries are low.	Check the ON/OFF switch on the back and ensure it is set to 'ON'. Replace batteries if low.
Red disk is stuck or moves erratically.	Internal mechanism obstruction or damage.	Gently try to reset the disk by turning the knob. If the issue persists, contact customer support.

SPECIFICATIONS

Technical Details

Attribute	Detail
Model Number	TT08B-W
Dimensions (D x W x H)	1.25" x 8" x 7.5"
Item Weight	12.32 ounces
Material	Plastic
Color	Black
Power Source	2 AA Batteries (not included)
Maximum Time Setting	60 Minutes
Recommended Age	3 years and up

SAFETY INFORMATION

Please read and follow these safety guidelines:

- Keep out of reach of very young children if small parts could become a choking hazard (e.g., batteries).
- Do not expose the timer to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the timer to strong impacts, as this may damage the internal

mechanism.

- Dispose of used batteries responsibly according to local regulations.
- This product is not a toy. Adult supervision is recommended for young children.

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the official TIME TIMER website or the user guide PDF provided with your purchase. A digital version of the user guide can be accessed via this link: [TIME TIMER User Guide \(PDF\)](#).

If you encounter any issues not covered in this manual, please contact TIME TIMER customer service for assistance.

OFFICIAL PRODUCT VIDEOS

No official product videos with relevant creator information were provided in the available data to embed in this manual.