

Mastela B0BK5XMMPK

Mastela Music 4-in-1 Electric Baby Bassinet Swing User Manual

Model: B0BK5XMMPK

[Instructions](#) [Safety Information](#) [Maintenance](#) [Components](#) [Troubleshooting](#) [Setup](#) [Operating](#) [Specifications](#) [Warranty & Support](#)

INTRODUCTION

Thank you for choosing the Mastela Music 4-in-1 Electric Baby Bassinet Swing. This product is designed to provide a safe and comfortable environment for your newborn or infant, offering versatility as a swing, bedside bed, sleeping basket, and play bed. Please read this manual thoroughly before assembly and use to ensure proper operation and safety.

SAFETY INFORMATION

- Always use the product on a flat, stable surface.
- Never leave your child unattended in the bassinet.
- Ensure all assembly components are securely fastened before each use.
- Do not use the bassinet if any parts are damaged or missing.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- The maximum weight recommendation for this product is 15 kilograms. Do not exceed this limit.
- Always follow the manufacturer's instructions for assembly and use.
- Regularly inspect the product for wear and tear. Discontinue use if any damage is observed.

COMPONENTS LIST

Before assembly, ensure all parts are present:

- Main Bassinet Frame
- Sleeping Basket/Cradle Unit
- Electric Swing Mechanism
- Remote Control
- Power Adapter
- Sunshade with Mesh
- Hanging Toys (2)
- Mattress Pad
- Wheels (pre-attached or separate)

SETUP AND ASSEMBLY

The Mastela 4-in-1 Bassinet is designed for easy assembly. Follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the components list.
2. **Assemble Frame:** Connect the main frame components according to the diagrams provided in the separate assembly guide. Ensure all locking mechanisms click into place.
3. **Attach Sleeping Basket:** Securely attach the sleeping basket unit to the main frame. Verify it is firmly seated and stable.
4. **Insert Mattress Pad:** Place the mattress pad into the sleeping basket.
5. **Install Sunshade:** Attach the sunshade with mesh to the designated points on the sleeping basket.
6. **Attach Toys:** Hang the two provided toys from the sunshade bar.
7. **Connect Power:** Plug the power adapter into the electric swing mechanism and then into a suitable power outlet.



Image: The Mastela 4-in-1 Electric Baby Bassinet Swing fully assembled, demonstrating its use in a home environment with a parent nearby.

OPERATING INSTRUCTIONS

Modes of Use (4-in-1 Functionality)

- **Bedside Sleeper:** Position the bassinet next to your bed. The side panel can be adjusted or lowered for easy access to your baby.



Image: The bassinet configured as a bedside sleeper, allowing the baby to sleep close to the parents' bed.

- **Sleeping Basket:** Use the bassinet as a standalone sleeping unit in any room. The sleeping basket can be detached from the main frame for independent use.
- **Electric Swing:** Engage the electric swing function for gentle, translational motion.

It can swing left and right, and the five swing speeds can meet the needs of different babies.



Image: The bassinet in motion, illustrating its electric swing capability with five adjustable speeds.

- **Play Bed:** The lower space of the rocking bed can be expanded to create a play area for your baby.



Image: The bassinet showing its two-level configuration, with a baby in the lower play bed and a mosquito net deployed.

Electric Swing and Music Functions

- **Swing Speed:** Use the control panel or remote control to select one of 5 adjustable translational swing speeds. The swing moves horizontally from left to right.
- **Timing Function:** Set the swing duration to 15, 30, 45 minutes, or a default of 60 minutes using the control panel or remote.
- **Music Playback:** The bassinet has 15 built-in melodies. You can also connect your phone or a USB device to play additional music.
- **Remote Control:** The included remote control allows you to adjust swing speed, timing, and music settings conveniently.

Additional Features

- **Maneuvering:** The unique one-way wheels allow for easy movement of the bassinet within your home.



Image: A parent demonstrating the ease of moving the bassinet, highlighting its portability.

- **Sunshade with Mesh:** Deploy the sunshade to provide a semi-enclosed space for your baby, offering protection from light and insects.

MAINTENANCE AND CARE

- **Cleaning Fabric:** The fabric components of the bassinet should be hand washed only. Use mild soap and cold water. Do not bleach or tumble dry.
- **Frame Cleaning:** Wipe the frame and plastic parts with a damp cloth and mild soap. Dry thoroughly.
- **Mesh Care:** Gently wipe the mesh with a damp cloth. Avoid harsh scrubbing to prevent damage.
- **Storage:** When not in use, the bassinet can be disassembled and stored in a dry, cool place.
- **Regular Inspection:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Inspect the fabric, mesh, and zippers for any signs of wear, tears, or damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Bassinet does not swing	Not plugged in; power adapter faulty; swing mechanism jammed.	Ensure power adapter is securely plugged into both the bassinet and a working outlet. Check for any obstructions around the swing mechanism.
Music not playing	Volume too low; incorrect source selected (USB/phone); faulty speaker.	Increase volume. Ensure USB or phone is correctly connected and selected. Try built-in melodies to check speaker function.
Remote control not working	Dead batteries; out of range; infrared sensor blocked.	Replace batteries in the remote. Ensure you are within effective range and pointing the remote at the bassinet's sensor.
Bassinet feels unstable	Assembly not complete; fasteners loose; uneven surface.	Recheck all assembly steps. Tighten all screws and bolts. Ensure the bassinet is placed on a flat, level surface.

SPECIFICATIONS

- **Brand:** Mastela
- **Model Number:** B0BK5XMMPK
- **Color:** Grey
- **Product Dimensions (L x W x H):** 90 x 48.3 x 102 cm (approximately 89.99 x 48.26 x 102.01 cm)
- **Item Weight:** 8.3 Kilograms
- **Material:** Fabric
- **Maximum Weight Recommendation:** 15 Kilograms
- **Form Factor:** Rocking Bassinet, Travel Bassinet
- **Assembly:** Required
- **Product Care Instructions:** Hand Wash Only

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Mastela customer service directly. Keep your proof of purchase for any warranty claims. For further assistance, please visit the official Mastela website or contact your retailer.