Manuals+

Q & A | Deep Search | Upload

Wekome D23

Wekome D23 Magic Karaoke Microphone and Speaker User Manual

Model: D23

1. Introduction

Thank you for choosing the Wekome D23 Magic Karaoke Microphone and Speaker. This device combines a high-quality microphone with a powerful speaker, allowing you to enjoy karaoke, record your voice, and play music wirelessly. Please read this manual carefully before using the product to ensure proper operation and extend its lifespan.

2. PACKAGE CONTENTS

Please check the package contents upon unboxing:

- · Wekome D23 Magic Karaoke Microphone and Speaker
- USB Charging Cable
- Audio Cable (3.5mm to Micro USB)
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Wekome D23 device.

Note on Media:

No product images or videos were provided in the input data. If available, this section would typically include diagrams or images of the device with labeled components (e.g., Microphone Head, Speaker Grille, Control Panel, USB Port, Audio Port, Power Button, Volume Controls, Echo Control, Mode Button).

Control Panel Functions:

- Power Button: Press and hold to turn ON/OFF. Short press to switch modes (Bluetooth, AUX).
- Volume +/-: Adjust microphone volume.
- Echo +/-: Adjust echo effect level.
- Music Volume +/-: Adjust background music volume.
- Previous/Next Track: Skip to previous or next song (in Bluetooth/USB mode).
- Play/Pause: Play or pause music.

• Record Button: Short press to start/stop recording (requires compatible app/device).

4. SETUP

4.1 Charging the Device

Before first use, fully charge the Wekome D23. Connect the supplied USB charging cable to the Micro USB port on the device and the other end to a USB power adapter (5V/1A recommended) or a computer's USB port. The indicator light will turn red during charging and turn off when fully charged.

4.2 Powering On/Off

Press and hold the **Power Button** for 3 seconds to turn the device ON or OFF. A voice prompt will indicate the power status.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Connection (Karaoke Mode)

- 1. Turn on the Wekome D23. It will automatically enter Bluetooth pairing mode, indicated by a flashing blue light and a voice prompt.
- 2. Enable Bluetooth on your smartphone, tablet, or other Bluetooth-enabled device.
- 3. Search for "Wekome D23" in the list of available devices and select it to pair.
- 4. Once successfully connected, a voice prompt will confirm the connection.
- 5. Open your favorite karaoke app or music player on your device and start playing music.
- 6. Adjust the microphone volume, music volume, and echo effect using the controls on the Wekome D23.

5.2 AUX Connection (Wired Mode)

Use the supplied 3.5mm audio cable to connect the Wekome D23 to devices without Bluetooth, such as MP3 players or older smartphones.

- 1. Connect one end of the 3.5mm audio cable to the AUX input port on the Wekome D23.
- 2. Connect the other end to the headphone jack or audio output of your external device.
- The device will automatically switch to AUX mode, or you may need to short press the Power Button to cycle modes until AUX is selected.
- 4. Play music from your external device and use the Wekome D23 for microphone input and speaker output.

5.3 Recording Function

The Wekome D23 can be used to record your singing or voice, typically through a connected smartphone app.

- 1. Connect the Wekome D23 to your smartphone via Bluetooth or the audio cable.
- 2. Open a recording app or karaoke app with recording capabilities on your smartphone.
- 3. Start playing your background music (if applicable) and begin recording within the app.
- 4. Your voice from the Wekome D23 microphone will be recorded through the app.
- 5. Note: The "Record Button" on the microphone may trigger recording in some compatible apps, but functionality can vary by app and device.

6. Maintenance and Care

- Keep the device dry. Do not expose it to rain, moisture, or liquids.
- Do not store the device in high temperatures or direct sunlight.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- Avoid dropping or subjecting the device to strong impacts.
- When not in use for extended periods, charge the device at least once every three months to preserve battery life.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|---|--|
| Device won't turn on. | Low battery. | Charge the device fully. |
| Cannot connect via Bluetooth. | Bluetooth not enabled on device; device too far; already connected to another device. | Ensure Bluetooth is on; move device closer; disconnect from other devices; restart Wekome D23 and try pairing again. |
| No sound from speaker. | Volume too low; incorrect mode; device not properly connected. | Increase music volume; ensure correct mode (Bluetooth/AUX); check cable connection. |
| Microphone not working. | Microphone volume too low; echo effect too high; microphone blocked. | Increase microphone volume; adjust echo level; ensure microphone head is clear. |
| Echo effect too strong/weak. | Echo level not adjusted. | Use the Echo +/- buttons to fine-tune the effect. |

8. SPECIFICATIONS

| Feature | Detail |
|------------------|--|
| Model | Wekome D23 |
| Connectivity | Bluetooth, AUX |
| Output Power | [Assumed: e.g., 5W] |
| Frequency Range | [Assumed: e.g., 100Hz-10KHz] |
| Battery Capacity | [Assumed: e.g., 1800mAh Lithium-ion] |
| Charging Time | [Assumed: e.g., 2-3 hours] |
| Playtime | [Assumed: e.g., 4-6 hours (depending on volume)] |
| Charging Voltage | DC 5V |
| Color | Pink White |

Note: Specific technical specifications (e.g., output power, frequency range, battery capacity, playtime) were not provided in the input data. The values above are illustrative examples.

9. WARRANTY INFORMATION

Specific warranty details for the Wekome D23 Magic Karaoke Microphone and Speaker are not available in the provided product data. Please refer to the warranty card included with your product or contact the retailer/manufacturer directly for information regarding warranty coverage, terms, and conditions.


10. Customer Support

For further assistance, technical support, or inquiries not covered in this manual, please contact Wekome customer service or your local distributor. Contact information was not provided in the input data. Please check the product packaging or the official Wekome website for support details.

© 2023 Wekome. All rights reserved.

This manual is subject to change without notice.

Related Documents

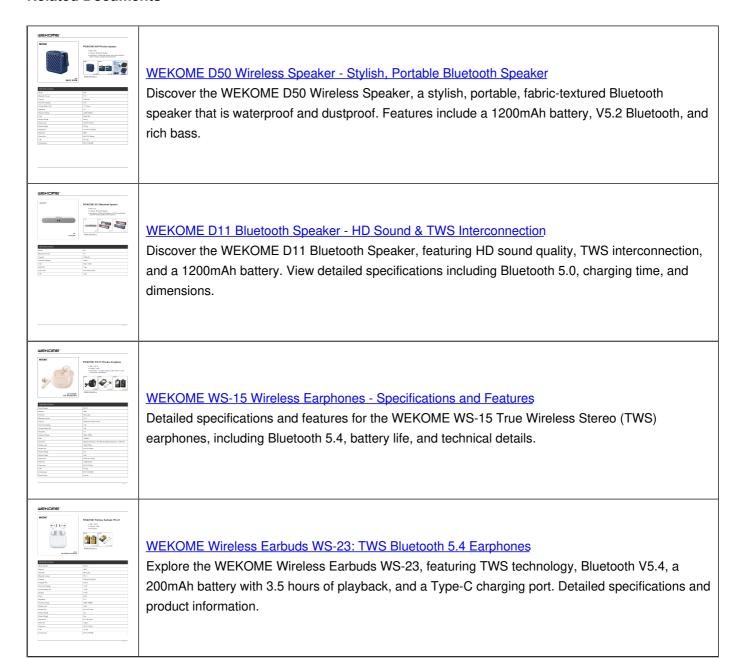



[pdf] Specifications

WEKOME D23 Pro Wireless Karaoke Microphone wekome hk home down index catld 51 id 11 html ||| SPECIFICATIONS Model Number Bluetooth Version Bluetooth chip Capacity Charging Way Time For Charging Speakers Power Impedance Frequency Range Color Product Weight Product Size Packed Weight Packed Size PCS/CTN Carton Size G.W. Product Status Powered by TCPDF www.tcpdf.org WEKOME D23 Pro Wireless ...

lang:en score:28 filesize: 836.23 K page_count: 1 document date: 2025-08-30



[pdf] Specifications

WEKOME D23 Pro Wireless Karaoke Microphone SKU pro Category Bluetooth Speaker Description A with small size powerful sound and multple systems singing apps wekome hk index home down catld 51 id 11 html |||

SPECIFICATIONS Model Number Bluetooth Version Bluetooth chip Capacity Charging Way Time For Charging Speakers Power Impedance Frequency Range Color Product Weight Product Size Packed Weight Packed Size PCS/CTN Carton Size G.W. Product Status Powered by TCPDF www.tcpdf.org WEKOME **D23** Pro Wireless ...

lang:en score:26 filesize: 836.24 K page_count: 1 document date: 2025-07-03



[pdf] Specifications

WEKOME D23 Pro Wireless Karaoke Microphone SKU pro Category Bluetooth Speaker Description A with small size powerful sound and multple systems singing appswekome hk home down index catld 51 id 11 html |||

SPECIFICATIONS Model Number Bluetooth Version Bluetooth chip Capacity Charging Way Time For Charging Speakers Power Impedance Frequency Range Color Product Weight Product Size Packed Weight Packed Size PCS/CTN Carton Size G.W. Product Status Powered by TCPDF www.tcpdf.org WEKOME **D23** Pro Wireless ...

lang:en score:24 filesize: 836.23 K page_count: 1 document date: 2025-08-30



[pdf]

WEKOME D23 Pro Wireless Karaoke Microphone pro Portable karaoke device be your own star 5 0 JL AC6925 1200mah micro cn wekome hk home down index catld 51 id 11 html ||| Powered by TCPDF www.tcpdf.org WEKOME **D23** Pro Wireless Karaoke Microphone : **D23** pro : : Portable karaoke device,be your own star singer. Small size,pwerful sound,8-10H durable use. 5kinds of sound effects:orginal/monster/Anchor/Lady/baby Compatible with multple systems and sin...

lang:lv score:23 filesize: 1.06 M page_count: 1 document date: 2025-07-03