

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-669 Wireless Karaoke Microphone and Speaker User Manual

WSTER WS-669

WSTER WS-669 Wireless Karaoke Microphone and Speaker User Manual

Model: WS-669

INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your WSTER WS-669 Wireless Karaoke Microphone and Speaker. Please read this manual thoroughly before operating the device and retain it for future reference.

The WSTER WS-669 is designed for versatile audio entertainment, functioning as both a wireless microphone and a portable speaker. It is suitable for various applications, from small recording studios for professional recording to casual karaoke sessions. Its integrated design includes a flexible shock absorber to minimize friction noise, ensuring a warm and delicate tone, especially suitable for acoustic instruments. The device features low background noise and a high sound pressure level, along with multiple interfaces to enhance audio transmission.

Key Features:

- Compact and portable design for easy transport.
- Delivers powerful bass and triple amplification for a smooth sound experience.
- Constructed from high-quality materials for durability.
- Ensures efficient music playback without sound distortion.
- Integrated disco light for enhanced entertainment.
- USB connectivity for charging, recording, and music playback.

PRODUCT OVERVIEW

Familiarize yourself with the components of your WSTER WS-669 device.



Figure 1: Front view of the WSTER WS-669 Wireless Karaoke Microphone and Speaker. This image shows the microphone head, the central control panel with buttons, the integrated speaker grille, and the handle.

Components:

- **Microphone Head:** For vocal input.
- **Control Panel:** Contains buttons for power, volume, mode selection, and playback controls.
- **Integrated Speaker:** Outputs audio.
- **Disco Light:** Provides visual effects.
- **USB Port:** For charging and connecting to other devices.
- **Handle:** For comfortable grip.

SETUP

1. Charging the Device:

Before first use, fully charge the microphone. Connect the included USB cable to the USB port on the microphone and the other end to a standard USB power adapter (not included) or a computer's USB port. The charging indicator light will illuminate during charging and turn off when fully charged.

2. Powering On/Off:

Press and hold the Power button (usually marked with a power symbol) on the control panel for a few seconds to turn the device on or off. A voice prompt or indicator light will confirm the status.

3. Bluetooth Pairing:

Once powered on, the microphone will automatically enter Bluetooth pairing mode. Open the Bluetooth settings on your smartphone, tablet, or other compatible device. Search for "WS-669" or a similar device name and select it to pair. A confirmation sound will indicate successful pairing.

4. Connecting via USB Cable (for Recording/Listening):

For direct connection to a computer or other audio source for recording or listening, use the provided USB cable. Connect one end to the microphone's USB port and the other to your device. The microphone may appear as an external audio device, allowing for direct audio input or output.

OPERATING INSTRUCTIONS

Microphone Usage:

- Hold the microphone approximately 2-4 inches from your mouth for optimal sound pickup.
- Adjust the microphone volume using the dedicated volume controls on the device.

Speaker Function (Music Playback):

- After successful Bluetooth pairing, play music from your connected device. The audio will be output through the integrated speaker.
- Use the Play/Pause, Next Track, and Previous Track buttons on the control panel to manage music playback.
- Adjust the speaker volume using the main volume controls.

Disco Light Operation:

- The disco light feature can usually be toggled on or off with a dedicated button on the control panel. Refer to the button labels for specific functionality.

Recording Function:

- If connected via USB to a computer, the microphone can be used as an audio input device for recording software. Follow the instructions of your recording software to select the WS-669 as the input source.
- Some models may offer direct recording to a connected storage device (e.g., TF card). Consult the device's specific button layout for a "Record" function if available.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the microphone. Do not use abrasive cleaners or solvents. Avoid getting moisture into the microphone head or control panel.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Handling:** Handle the microphone with care. Avoid dropping it or subjecting it to strong impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Power button not pressed correctly.	Charge the device fully. Press and hold the Power button for a few seconds.
No sound from speaker.	Volume too low; Device not paired; Music paused.	Increase volume. Ensure Bluetooth is paired. Check if music is playing on the connected device.
Bluetooth pairing fails.	Device too far; Bluetooth not enabled; Interference.	Ensure devices are close. Enable Bluetooth on your device. Restart both devices and try again.

Problem	Possible Cause	Solution
Microphone sound is distorted or weak.	Microphone too far; Volume settings incorrect; Environmental noise.	Hold microphone closer. Adjust microphone volume. Reduce background noise.

SPECIFICATIONS

Feature	Detail
Brand Name	WSTER
Model Number	WS-669 (Part No: 6221237313983)
Connectivity Technology	USB
Connector Type	USB Type A
Special Features	Wireless, USB
Compatible Devices	Karaoke Machine
Included Components	Microphone
Item Weight	300 grams
Impedance	600 Ohm
Microphone Form Factor	Handheld
Power Source	Battery Powered (1 AAA battery required, included)
Number of Channels	1
Frequency Response	20 KHz
Frequency Range	20 Hz - 20 KHz
Manufacturer	Wster

WARRANTY AND SUPPORT

Warranty Information: This product is sold without an explicit warranty. Please refer to your retailer's return policy for any issues upon purchase.

Customer Support: For any questions or assistance regarding your WSTER WS-669, please contact the retailer or your point of purchase. They can provide guidance on product functionality and troubleshooting.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BK6XLT9>

More documents and user manuals: **<https://manuals.plus/>**