

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Panasonic](#) /

› [Panasonic MX-AE475 Mixer Grinder User Manual - 750W/2000W \(Max Locked Wattage\) with 3 Jars & Juicer](#)

## Panasonic MX-AE475

# Panasonic MX-AE475 Mixer Grinder User Manual

Model: MX-AE475 | Brand: Panasonic

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Always ensure the appliance is switched off and unplugged from the power outlet before assembling, disassembling, or cleaning.
- Do not immerse the motor unit in water or any other liquid. Clean with a damp cloth only.
- Keep hands and utensils out of the jar while operating to prevent injury and damage to the appliance.
- Ensure the jar is properly locked onto the motor unit before starting. The appliance features an **Advanced Child Safety Lock System** to prevent accidental operation.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been dropped or damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Do not overload the mixer grinder. Refer to the maximum capacities for each jar.
- The blades are sharp. Handle with extreme care during assembly, disassembly, and cleaning.



Figure 1: Advanced Child Safety Lock System ensures secure operation.

## 2. PRODUCT OVERVIEW

---

### 2.1 Components

- Motor Unit (Main Body)
- Juicer Jar with Pusher
- Stainless Steel Blender Jar
- Stainless Steel Mill Jar
- Stainless Steel Chutney Jar
- Lids for all jars
- Spatula



Powerful motor that effortlessly grind & knead to elevate your tastes with mastery

**POWERFUL  
750-WATT  
MOTOR**



Figure 2: All components of the Panasonic MX-AE475 Mixer Grinder.

## 2.2 Key Features

- **Powerful Motor:** Equipped with a 750-watt operating motor, capable of reaching a maximum locked wattage of 2000W for demanding tasks. Features a 100% copper wound motor for durability and an efficient cooling fan for extended life.
- **Versatile Jars:** Includes a Juicer Jar, SS Blender & Multi Mill Jar, and Chutney Jar with Pusher. All stainless steel jars are made from SS 304 rust-resistant material.
- **Precision Grinding:** SS 304 Hardened Design Blades ensure fine and consistent grinding results for various ingredients.
- **Circuit Breaker Motor Protection:** Safeguards the motor from burnout and extends the appliance's lifespan.
- **Oil Seal Protection:** Enhances motor life and prevents water leakage into the motor unit.
- **9-in-1 Functionality:** Capable of Spice Grinding, Wet Grinding, Chutney Grinding, Turmeric Grinding, Egg Beating, Coffee Grinding, Coconut Milk preparation, Blending, and Juicing.



Figure 3: Powerful 750-watt motor (2000W Max Locked Wattage).

## DOUBLE SAFETY LOCKING SYSTEM

The unique safety locking safety system with jar lock and jar lid lock prevents accidental switches on off the product



Figure 4: Versatile jar configurations for various grinding and blending needs.



Figure 5: Internal components for durability and performance.

## DOUBLE SAFETY LOCKING SYSTEM

The unique safety locking safety system with jar lock and jar lid lock prevents accidental switches on off the product



Figure 6: 9-in-1 Functionality for diverse kitchen tasks.

### 3. SETUP

#### 3.1 Unpacking and Initial Cleaning

1. Carefully remove all components from the packaging.
2. Wash all jars, lids, and blades with warm soapy water. Rinse thoroughly and dry completely.
3. Wipe the motor unit with a damp cloth. Do not immerse it in water.
4. Place the motor unit on a stable, flat, and dry surface.

## 3.2 Assembling a Jar

1. Ensure the blade assembly is securely fitted into the bottom of the chosen jar.
2. Place the ingredients into the jar. Do not overfill.
3. Securely place the lid on the jar.
4. Align the jar with the grooves on the motor unit and place it firmly. Twist clockwise until it locks into position. The child safety lock will engage.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 General Operation

1. After assembling the jar and placing it on the motor unit, plug the appliance into a suitable power outlet (230V).
2. Select the desired speed using the knob control. The mixer grinder has 3 speed settings.
3. For short bursts of power, use the 'Pulse' function.
4. Do not operate continuously for more than 5 minutes. Allow a 2-minute rest period between cycles.
5. After use, switch off the appliance and unplug it from the power outlet.
6. Wait for the blades to stop completely before removing the jar.

### 4.2 Using the Juicer Extractor

1. Assemble the juicer jar components as per the diagram in the product packaging.
2. Cut fruits or vegetables into small pieces that fit into the feeding chute.
3. Place the juicer jar on the motor unit and lock it.
4. Switch on the appliance and gradually feed the ingredients using the pusher.
5. Collect the juice in a container placed under the spout.

Your browser does not support the video tag.

Video 1: Short demonstration of the Panasonic MX-AE475 Mixer Grinder's features, including ELSL technology, copper motor, and high RPM.

## 5. CLEANING AND MAINTENANCE

---

### 5.1 Daily Cleaning

1. Unplug the appliance from the power outlet.
2. Remove the jar from the motor unit.
3. Disassemble the jar components (lid, blade assembly).
4. Wash all removable parts with warm soapy water and a soft brush. Rinse thoroughly.
5. Wipe the motor unit with a damp cloth. Do not use abrasive cleaners.
6. Dry all parts completely before storing or reassembling.

### 5.2 Storage

Store the mixer grinder and its accessories in a clean, dry place, away from direct sunlight and moisture.

# 9 in 1 Function



Figure 7: Oil Seal Protection for enhanced motor longevity.

## 6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start	Not plugged in; Jar not locked properly; Overload protection activated.	Check power connection; Ensure jar is securely locked; Reduce load and press the reset button (if available).
Motor stops during operation	Overload; Continuous operation for too long.	Switch off, unplug, reduce ingredients, wait for motor to cool, then restart.
Leakage from jar	Lid not properly sealed; Gasket worn out or missing.	Ensure lid is tightly closed; Check and replace gasket if necessary.
Unusual noise/vibration	Improper assembly; Damaged blade or coupler.	Reassemble the jar correctly; Contact customer support for inspection.

If the problem persists after attempting the above solutions, please contact Panasonic customer support.

## 7. SPECIFICATIONS

Feature	Detail
Brand	Panasonic
Model Name	MX-AE475
Operating Wattage	750 Watts

Feature	Detail
Maximum Locked Wattage	2000 Watts
Voltage	230 Volts
Number of Speeds	3
Material	Stainless Steel (Jars), Plastic (Motor Unit)
Blade Material	Stainless Steel
Product Dimensions (D x W x H)	34.5D x 38.5W x 32.5H Centimeters
Item Weight	7200 Grams
Included Components	Motor Unit, 3 Stainless Steel Jars, 1 Juicer Extractor Jar



Figure 8: Key product specifications.

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

- **Product Warranty:** 2 Years from the date of purchase.
- **Motor Warranty:** 5 Years from the date of purchase.

Please retain your purchase receipt for warranty claims. The warranty covers manufacturing defects under normal household use. It does not cover damage due to misuse, neglect, or unauthorized repairs.

### 8.2 Customer Support

For any queries, service requests, or technical assistance, please contact Panasonic customer support:

- **Manufacturer Contact:** Panasonic Appliances India Co Ltd, Ponneri Taluk, Chennai, Tamilnadu.

Contact: 9867664664

- **Packer Contact:** Panasonic Appliances India Co Ltd., NH-No-5 Sholavaram Village, Ponneri Taluk, Chennai-600067. Contact Person for Customer Complaints: 9835302102.
- **Website:** [www.panasonic.com](http://www.panasonic.com)

© 2026 Panasonic. All rights reserved.