

GEEZER Wireless Keyboard and Mouse Combo (B0BK97ZQ8L)

GEEZER Wireless Keyboard and Mouse Combo User Manual

Model: Wireless Keyboard and Mouse Combo (ASIN: B0BK97ZQ8L)

PRODUCT OVERVIEW

The GEEZER Wireless Keyboard and Mouse Combo offers a vibrant and efficient solution for your computing needs. This full-size keyboard features 106 keys with a standard American QWERTY layout, including a numeric keypad and multimedia keys. Designed for comfort, it includes an ergonomic palm rest and adjustable foldable stands. The accompanying symmetrical mouse is suitable for both left and right-handed users, featuring a quiet click and a frosted surface for a comfortable grip. Both devices connect wirelessly via a single 2.4G USB Nano receiver, providing a stable connection up to 33 feet.



Image: The GEEZER Wireless Keyboard and Mouse Combo, showcasing the purple keyboard with colorful keys and the matching purple mouse.

PACKAGE CONTENTS

Before proceeding with setup, please ensure all items are present in the package:

- Wireless Keyboard x 1
- Wireless Mouse x 1
- 2-in-1 USB Nano Dongle x 1
- User Manual x 1

SETUP INSTRUCTIONS

Follow these steps to set up your GEEZER Wireless Keyboard and Mouse Combo:

1. Install Batteries:

- For the keyboard: Open the battery compartment on the back of the keyboard. Insert one AAA battery (not included), ensuring correct polarity. Close the compartment.
- For the mouse: Open the battery cover on the bottom of the mouse. Insert one AA battery (not included), ensuring correct polarity. The USB Nano receiver is stored in this compartment; remove it before closing.

Comfortable Hand Feel



Quiet Click

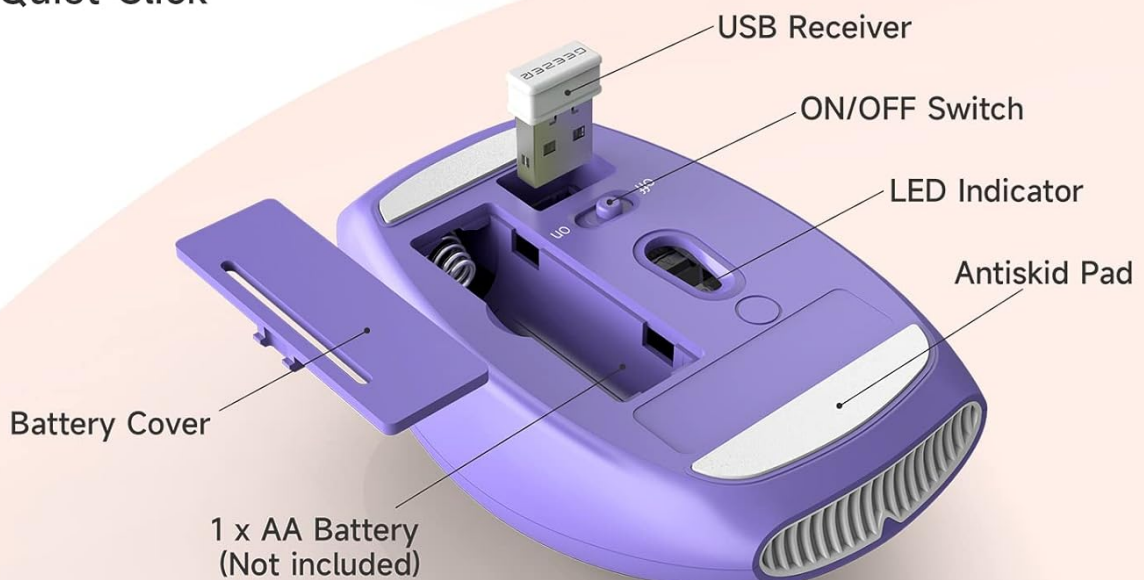


Image: Detailed view of the mouse's underside, illustrating the battery compartment, USB receiver storage, ON/OFF switch, and LED indicator.



Image: Detailed view of the keyboard's back, showing the battery compartment, foldable stand, and ON/OFF switch.

2. **Connect the USB Nano Receiver:** Insert the 2-in-1 USB Nano receiver into an available USB port on your computer, laptop, PC, desktop, Chromebook, Notebook, or Smart TV.



Image: Illustration of the 2.4G wireless technology, demonstrating the 33-foot range and how the single USB nano receiver connects both the keyboard and mouse to a device.

3. **Power On Devices:** Locate the ON/OFF switch on the bottom of both the keyboard and the mouse. Slide the switches to the "ON" position.
4. **Automatic Connection:** The keyboard and mouse should automatically connect to your device. No additional drivers or software are required.
5. **Adjust Keyboard Angle:** For comfortable typing, you may extend the foldable stands on the back of the keyboard to tilt it to your preferred angle.

OPERATING INSTRUCTIONS

General Usage

Once connected, the keyboard and mouse function as standard input devices. The full-size keyboard provides a comfortable typing experience, while the mouse offers precise cursor control.



Image: A user actively typing on the GEEZER wireless keyboard, demonstrating its use in a typical desktop setup.

Keyboard Functions

The keyboard features a full 106-key layout with dedicated function keys and a numeric keypad. Some keys have secondary functions accessible via the **Fn** key.

- **Multimedia Keys:** Use the **Fn** key in combination with F1-F12 keys for quick access to multimedia controls (e.g., volume up/down, mute, play/pause, previous/next track), home page, search, collection, email, keyboard lock, and My Computer.
- **Num Lock Indicator:** An LED indicator on the keyboard shows the status of the Num Lock.
- **Caps Lock Indicator:** An LED indicator on the keyboard shows the status of the Caps Lock.

Mouse Functions

The mouse is a standard 3-button mouse with a scroll wheel, designed for quiet operation.

- **Left Click:** Standard selection and activation.

- **Right Click:** Context menu access.
- **Scroll Wheel:** For vertical scrolling and middle-click functionality.
- **Quiet Click:** Designed to minimize clicking noise for a quieter work environment.

Power Saving Mode

To conserve battery life, both the keyboard and mouse will automatically enter sleep mode after 5 minutes of inactivity. To wake them up, simply click any key on the keyboard or move/click the mouse.



Image: A visual representation of the automatic sleep function, indicating that pressing any key will wake the device up, designed for power saving.

MAINTENANCE AND CARE

Proper maintenance ensures the longevity and optimal performance of your GEEZER Wireless Keyboard and Mouse Combo:

- **Cleaning:** Use a soft, dry cloth to wipe down the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth with mild soap can be used, but ensure no liquid enters the devices. Do not use harsh chemicals or abrasive cleaners.
- **Battery Replacement:** Replace batteries when performance degrades. The keyboard uses one AAA battery, and the mouse uses one AA battery. Always dispose of used batteries responsibly.
- **Storage:** When not in use for extended periods, turn off both the keyboard and mouse using their respective ON/OFF switches to conserve battery life. Store them in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops and Impacts:** Handle the devices with care to prevent damage from accidental drops or impacts.

TROUBLESHOOTING

If you encounter issues with your GEEZER Wireless Keyboard and Mouse Combo, please refer to the following common solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Keyboard/Mouse not responding	Low or dead batteries. Devices are turned off. USB receiver not properly connected. Out of wireless range. Interference from other wireless devices.	Replace batteries in both keyboard (AAA) and mouse (AA). Ensure both devices are switched to "ON". Unplug and re-plug the USB receiver firmly into a different USB port. Move the keyboard and mouse closer to the USB receiver (within 33 feet). Move other wireless devices away from the receiver or try a different USB port.
Lag or delayed input	Low battery. Wireless interference. Device in sleep mode.	Replace batteries. Reduce interference by moving other wireless devices or trying a different USB port. Click any key or move the mouse to wake it from sleep mode.
Mouse cursor erratic or not moving smoothly	Dirty optical sensor. Unsuitable surface.	Clean the optical sensor on the bottom of the mouse with a soft, lint-free cloth. Use the mouse on a clean, non-reflective, and uniform surface, or use a mouse pad.

SPECIFICATIONS

Detailed technical specifications for the GEEZER Wireless Keyboard and Mouse Combo:



Image: The GEEZER Wireless Keyboard and Mouse Combo demonstrating wide compatibility with PC, Mac, Desktop, and Laptop devices.



43.6cm/17.2in

6.9cm/2.7in



10.4cm
4.1in



Wireless receiver

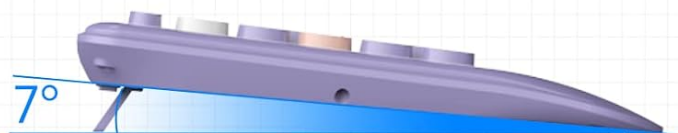


Image: Technical drawing showing the dimensions of the keyboard and mouse, including the keyboard's 7-degree tilt angle.

Feature	Detail
Brand	GEEZER
Model Name	Wireless Keyboard and Mouse Combo
ASIN	B0BK97ZQ8L
Color	Light Purple Colorful
Connectivity Technology	2.4G USB Wireless
Keyboard Layout	106-key Full Size, American QWERTY
Special Features	Ergonomic Palm Rest, Foldable Stands, Quiet Click Mouse, Automatic Sleep Function
Keyboard Battery	1 x AAA (not included)
Mouse Battery	1 x AA (not included)

Feature	Detail
Wireless Range	Up to 33 feet (10 meters)
Compatible Devices	Computer, Laptop, PC, Desktop, Chromebook, Notebook, Smart TV
Compatible OS	Windows 98/Me/2000/XP/Vista/7/8/10/11 or latest
Package Dimensions	17.56 x 7.44 x 2.83 inches
Item Weight	1.98 pounds

WARRANTY AND SUPPORT

Information regarding product warranty and customer support is not available in the provided product data. Please refer to the product packaging or the seller's website for specific warranty terms and contact details for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

