

[Manuals.plus](#) /

› [Yoidesu](#) /

› Yoidesu 2G Unlocked Senior Flip Cell Phone Instruction Manual

Yoidesu Yoidesu 2G Unlocked Senior Flip Cell Phone

Yoidesu 2G Unlocked Senior Flip Cell Phone Instruction Manual

Model: Yoidesu 2G Unlocked Senior Flip Cell Phone

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your Yoidesu 2G Unlocked Senior Flip Cell Phone. Please read this manual thoroughly before operating the device to ensure proper functionality and longevity.





Image: The Yoidesu 2G Unlocked Senior Flip Cell Phone shown in both its closed, compact form and its open, ready-to-use state, highlighting its flip design and large keypad.

2. SAFETY INFORMATION

Observe the following safety precautions to prevent injury or damage to your device:

- Do not expose the phone to extreme temperatures, direct sunlight, or moisture.
- Use only manufacturer-approved chargers and accessories.
- Avoid dropping or subjecting the phone to severe impact.
- Do not attempt to disassemble or repair the phone yourself.
- Keep the phone away from medical devices, such as pacemakers, to avoid interference.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- Yoidesu 2G Unlocked Senior Flip Cell Phone
- USB Cable

- Phone Case



Image: The Yoidesu flip phone, a USB charging cable, and a protective phone case, illustrating the items included in the product package.

4. PRODUCT FEATURES

The Yoidesu 2G Unlocked Senior Flip Cell Phone is designed with user-friendliness in mind, offering several key features:

- **Large 2.8-inch Display:** A clear, high-resolution screen for easy viewing of text and images.
- **Prominent Buttons & Large Font:** Oversized, clearly visible buttons and large font display for effortless dialing and navigation.
- **Flip Design:** Answer calls by simply flipping open the phone.
- **One-Touch Dialing:** Program up to six family numbers for quick access.
- **SOS Function:** Dedicated button for emergency calls.
- **Voice Broadcast:** Announces menu options, key presses, and incoming call numbers.
- **Built-in Flashlight:** Provides illumination in low-light conditions.

- **Automatic Time Synchronization:** Sets time automatically via satellite, no manual adjustment needed.
- **High Volume Speaker:** Ensures clear sound quality for calls and alerts.
- **Dual SIM Support:** Allows for two SIM cards to be used simultaneously.
- **Long Standby Time:** Equipped with a 5900mAh battery for extended usage.

Answer with flip Super long standby

Clear call in big words

Onekey
Unlock

voice
Broadcast

On the hour
give the
correct
time

Onekey
Flashlight



Image: Visual representation of the phone's key features, including answering calls by flipping, long standby, clear call quality, one-key unlock, voice broadcast, time announcement, and flashlight function.



2G Flip Phones for Seniors

- Easy to use
- Multifunction
- One-touch dial
- Long standby time



Image: A close-up of the phone's 2.8-inch HD display, showing clear text and graphics, emphasizing its high definition and resolution for better readability.



Image: The phone's keypad and screen, illustrating the large font display and the prominent, easy-to-press buttons, designed for user convenience.

5. SETUP

5.1. Battery Installation and Charging

1. Open the back cover of the phone.
2. Insert the battery into the compartment, ensuring the gold contacts align.
3. Replace the back cover.
4. Connect the USB cable to the phone's charging port and the other end to a compatible USB power adapter (not included) or computer.
5. Allow the phone to charge fully before first use. The battery indicator on the screen will show charging status.

5.2. SIM Card Installation

This phone supports dual SIM cards.

1. Power off the phone and remove the back cover and battery.
2. Locate the SIM card slots.
3. Carefully insert your 2G compatible SIM card(s) into the designated slot(s) with the gold contacts facing down.
4. Reinsert the battery and replace the back cover.

5.3. Initial Power On

1. Press and hold the Power/End Call button until the screen lights up.
2. Follow any on-screen prompts for initial setup, such as language selection.

6. OPERATING INSTRUCTIONS

6.1. Making and Receiving Calls

- **Making a Call:** Dial the number using the keypad and press the Green Call button.
- **Receiving a Call:** Flip open the phone or press the Green Call button to answer. Press the Red End Call button or close the phone to end a call.
- **Volume Adjustment:** Use the dedicated volume buttons on the side of the phone during a call to adjust the earpiece volume.

6.2. One-Touch Dialing (Family Numbers)

This feature allows you to quickly dial pre-set family numbers.

1. Navigate to the "Settings" or "Phonebook" menu.
2. Locate the "Family Numbers" or "Speed Dial" option.
3. Assign up to six contact numbers to specific keys (e.g., 1-6).
4. To dial, simply long-press the assigned number key.

2.8 Inch HD Display

The screen is larger, the color restoration is more realistic, and the display effect is high definition and high resolution. The screen is clear and delicate.



Image: An illustration demonstrating the one-touch dialing feature, showing how to set up and use quick dial numbers for family contacts.

6.3. SOS Function

The SOS button is located on the back of the phone. In an emergency, long-press this button to activate the SOS function. The phone will automatically dial pre-set emergency contacts and send an emergency message.

- **Setting SOS Contacts:** Access the "SOS Settings" in the phone's menu to add or modify emergency contact numbers.

6.4. Voice Broadcast

The phone features voice broadcast for enhanced accessibility.

- **Key Voice Broadcast:** Announces the number or function of the key pressed.
- **Incoming Call Voice Broadcast:** Announces the incoming caller's number (if not in contacts) or name (if in contacts).
- **Menu Voice Broadcast:** Announces menu options as you navigate.



Image: A visual representation of the phone's voice broadcast feature, showing sound waves emanating from the phone, indicating its ability to audibly announce functions and numbers.

6.5. Flashlight

To activate the built-in LED flashlight, locate the dedicated flashlight button on the side of the phone and slide it up or press it, depending on the model variant. Slide it down or press again to turn it off.

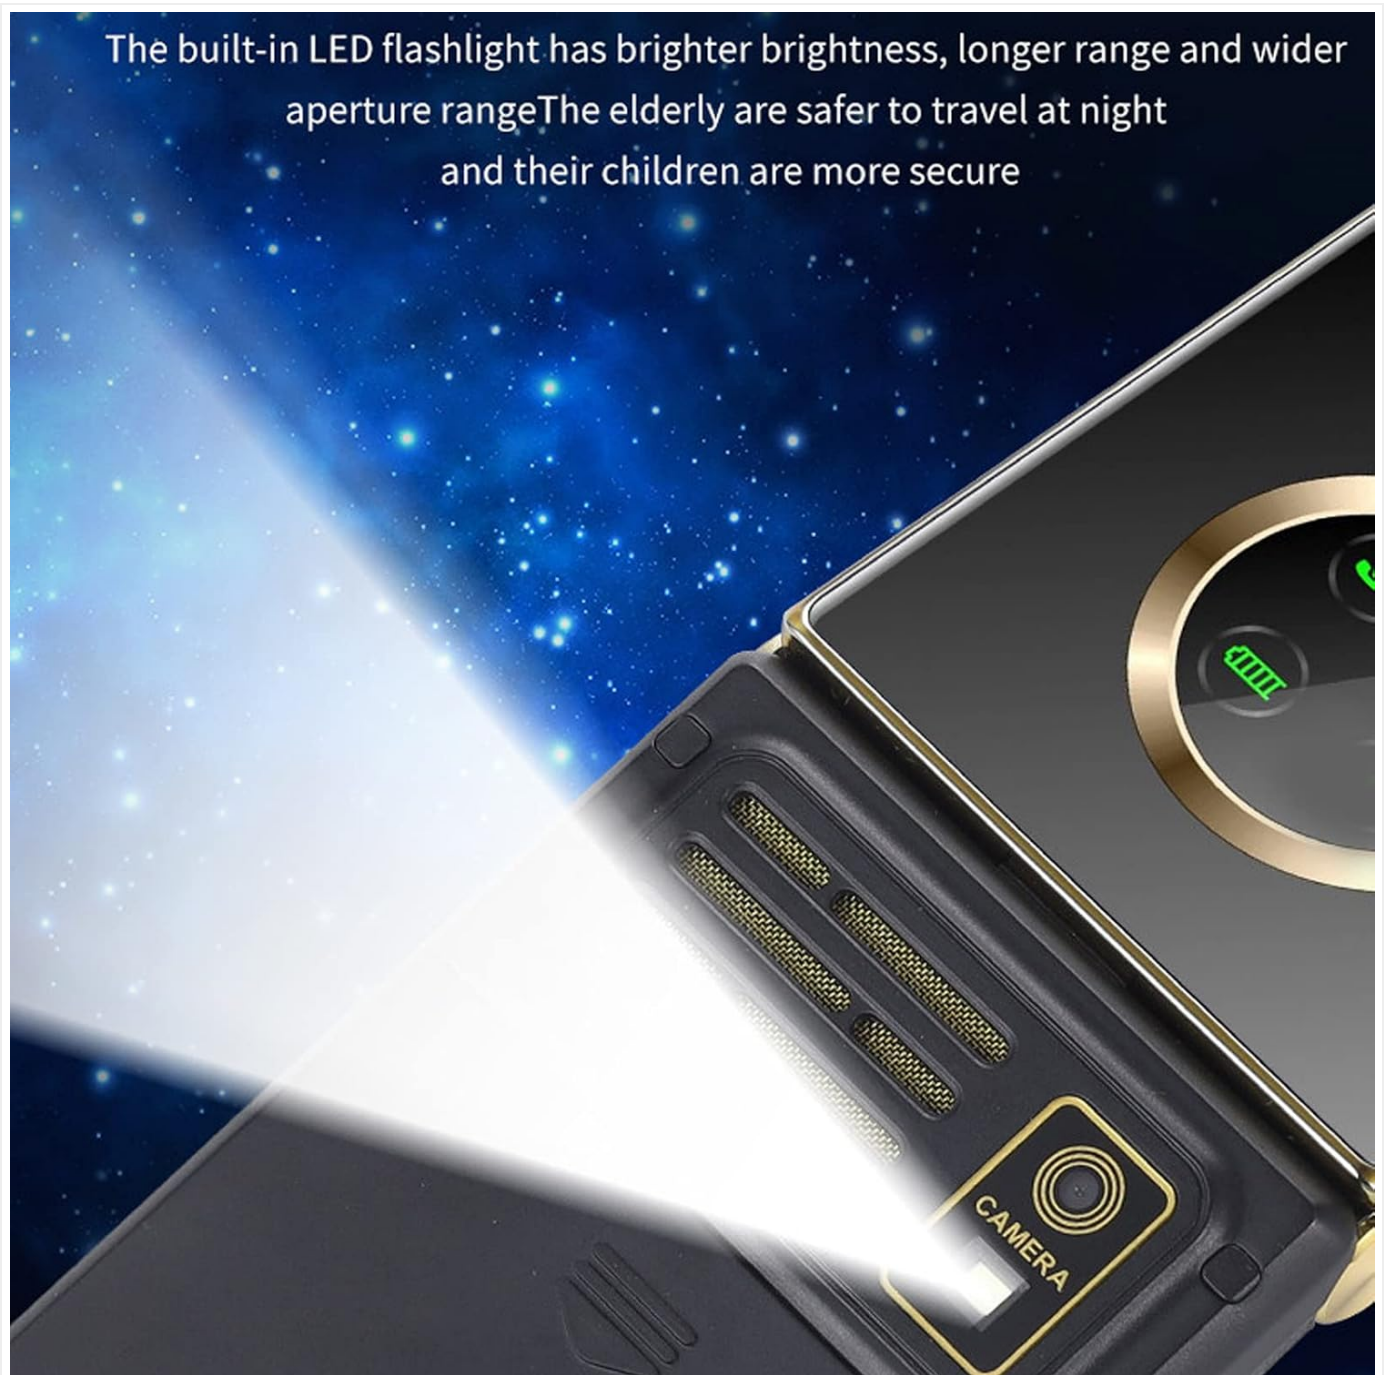


Image: The phone's built-in LED flashlight illuminated, demonstrating its function as a convenient light source.

6.6. Camera Function

The phone includes a basic camera for capturing photos and videos.

- Navigate to the "Camera" application from the main menu.
- Use the navigation keys to frame your shot.
- Press the center key to capture a photo or start/stop video recording.

PHOTOS AND VIDEOS

Capture the wonderful moments of life and record the details with family and friends. Keep the moment of happy life.



Image: The phone's screen displaying a family photo, illustrating its capability to capture photos and videos.

6.7. Automatic Time Synchronization

The phone automatically synchronizes its time via satellite, eliminating the need for manual time adjustments.

Automatic timing through satellite does not require any network or manual adjustment, let aloneWill generate traffic, so that you feel more at ease.



Image: The phone displaying a clock face, with a graphic suggesting automatic time synchronization via satellite, indicating no manual adjustment is required.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the phone's exterior. Avoid using liquid cleaners or aerosols.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the phone regularly, but do not leave it connected to the charger for extended periods after it is fully charged.
- **Storage:** Store the phone in a cool, dry place away from direct sunlight and extreme temperatures when not in use for long periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Phone does not power on.	Battery is discharged or not properly installed.	Charge the battery. Ensure the battery is correctly inserted.
Cannot make or receive calls.	No SIM card, SIM card not properly inserted, or no network signal.	Ensure SIM card is inserted correctly. Check network coverage in your area. Verify the phone is unlocked for your carrier (this model is unlocked).
Poor sound quality during calls.	Low volume setting, poor network signal, or speaker obstruction.	Adjust call volume. Move to an area with better signal. Ensure speaker is not blocked.
Battery drains quickly.	Frequent usage, old battery, or background processes.	Reduce screen brightness. Close unused applications. Consider replacing the battery if it's old.
Keys are unresponsive.	Software glitch or physical damage.	Restart the phone. If the problem persists, contact customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	Yoidesu
Model	2G Unlocked Senior Flip Cell Phone
Screen Size	2.8 Inches
Resolution	240 x 320
Battery Capacity	5900 Milliamp Hours
RAM Memory Installed Size	4 MB
Memory Storage Capacity	32 MB
Wireless Carrier	Unlocked for All Carriers
Cellular Technology	GSM
Connectivity Technology	Bluetooth, USB
Human Interface Input	Buttons
Form Factor	Flip
Color	Black 1
Item Weight	10.2 ounces
Package Dimensions	5.55 x 3.39 x 2.52 inches

10. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided with your purchase or contact the seller directly.

This product typically includes a standard return policy of 30 days for refund or replacement.
For technical support or further assistance, please visit the official Yoidesu store on Amazon:[Yoidesu Store](#).

© 2024 Yoidesu. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page
<https://manuals.plus/asin/B0BK9KF969>
More documents and user manuals: <https://manuals.plus/>