

ANXRE ANXST01

ANXRE ANXST01 Selfie Stick Tripod with Remote User Manual

Model: ANXST01

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your ANXRE ANXST01 Selfie Stick Tripod with Remote. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. This versatile accessory functions as both a handheld selfie stick and a stable tripod stand, designed for capturing photos and videos with smartphones and GoPro devices.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x ANXRE ANXST01 Selfie Stick Tripod
- 1 x Wireless Remote Shutter
- 1 x User Manual (this document)

PRODUCT OVERVIEW

The ANXRE ANXST01 combines a selfie stick and a tripod into a single compact unit. It features an extendable pole, a phone holder with adjustable angles, and a detachable Bluetooth remote control.



Figure 1: Overview of the ANXRE ANXST01 Selfie Stick Tripod in various configurations, including folded, extended as a tripod, extended as a selfie stick, and with a GoPro mount. The detachable remote is also shown.

Key Components:

- **Extendable Pole:** Allows adjustment of length for selfie stick or tripod use.
- **Phone Holder:** Securely grips smartphones (4.7" to 7" wide) and offers 360° rotation and 270° tilt for optimal

viewing angles.

- **Tripod Base:** Foldable legs provide stability when used as a stand.
- **Detachable Wireless Remote:** Connects via Bluetooth for remote photo and video capture.
- **Ergonomic Handle:** Provides a comfortable grip during handheld use.



Ergonomic Extended Handle



Longer Arm To Prevent Phone Sticking



Detachable Wireless Remote

Figure 2: Detailed view of the ergonomic handle and the slot for the detachable wireless remote control.

SETUP INSTRUCTIONS

1. Unfolding the Selfie Stick Tripod:

1. Hold the handle firmly.
2. Gently pull the top section upwards to extend the pole.
3. To deploy the tripod legs, push the bottom part of the handle downwards. The legs will spread out to form a stable base.



PORTABLE SELFIE STICK

Lightweight, Extendable & Travel-Ready

Figure 3: The ANXRE ANXST01 in its folded, compact state, suitable for travel.

2. Attaching Your Device:

1. Open the phone holder clamps.
2. Carefully place your smartphone (4.7" to 7" wide) into the holder, ensuring it is securely gripped. The holder is designed to accommodate phones even with bulky cases.

3. Adjust the phone holder's angle as needed. It supports 360° rotation and 270° tilt.
4. For GoPro devices, attach the GoPro mount to the designated screw thread on the phone holder.

MULTIWINKEL SELFIE-STICK TRIPOD

kompatibel mit 12-18cm Handys & dicken Hüllen



Figure 4: The phone holder's adjustable features, including compatibility with different phone sizes and cases, and its rotation capabilities.

3. Pairing the Wireless Remote Shutter:

1. Remove the remote control from its slot in the handle.
2. Press and hold the button on the remote control for approximately 3 seconds until the indicator light begins to flash, indicating it is in pairing mode.
3. On your smartphone, navigate to your Bluetooth settings.
4. Search for available devices and select "ANXRE" (or similar name) to pair. The indicator light on the remote will stop flashing once successfully paired.
5. Open your phone's camera application. The remote is now ready to use for capturing photos or starting/stopping video recording.

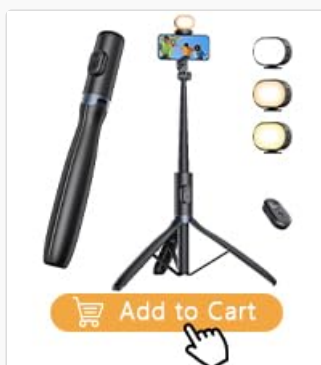


Figure 5: Bluetooth pairing process for the wireless remote shutter.

OPERATING INSTRUCTIONS

Using as a Selfie Stick:

1. Ensure the tripod legs are folded back into the handle.
2. Extend the pole to your desired length (up to 41.7 inches).
3. Adjust your phone's angle in the holder.
4. Use the paired wireless remote to capture photos or start/stop video recording.

GET A WIDER VIEW

Perfect for Solo & Group Photos



41.7"



Figure 6: Using the ANXRE ANXST01 as an extended selfie stick for group photos.

Using as a Tripod:

1. Deploy the tripod legs by pushing the bottom of the handle downwards until they are fully spread and stable.
2. Place the tripod on a flat, stable surface.
3. Extend the pole to your desired height. For maximum stability, especially when fully extended, ensure the legs are

spread wide.

4. Adjust your phone's angle in the holder.
5. Use the paired wireless remote to capture photos or start/stop video recording from a distance (up to 33 feet).

ENJOYING HAND-FREE SHOOTING

using the latest V5.2 chip support **20,000+** selfie

The image shows a person sitting in a folding chair in a snowy mountain landscape. They are holding a smartphone, which is mounted on a black tripod. The phone's screen displays a selfie of the person. In the foreground, a black wireless remote is shown with a signal icon and the text "33ft". Below the remote, there are two buttons: one with the Apple logo and "ios", and another with the Android logo and "Android".

Figure 7: The ANXRE ANXST01 used as a tripod with the wireless remote for hands-free operation.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, fold the selfie stick tripod to its compact size and store it in a cool, dry place away from direct sunlight.
- **Battery Replacement (Remote):** The remote uses a Lithium Metal button cell battery. If the remote stops responding, replace the battery. A spare battery is typically included in the package.
- **Avoid Overloading:** Do not attach devices heavier than recommended to prevent damage to the phone holder or tripod.

TROUBLESHOOTING

Remote not pairing:

Ensure the remote is charged (if applicable) or has a fresh battery. Make sure Bluetooth is enabled on your phone and the remote is in pairing mode (flashing light). Try restarting both your phone's Bluetooth and the remote.

Tripod instability:

Ensure the tripod legs are fully extended and spread on a flat, stable surface. Avoid extending the pole to its maximum height if the surface is uneven or windy. Ensure your phone is balanced in the holder.

Phone not fitting securely:

Verify your phone's width is within the compatible range (4.7" to 7"). Ensure the clamps are fully engaged around your phone. Remove excessively bulky cases if necessary, though the holder is designed to accommodate most.

SPECIFICATIONS

Feature	Detail
Model Number	ANXST01
Brand	ANXRE
Maximum Extended Length	41.7 inches (106 cm)
Folded Length	7.7 inches (19.5 cm)
Item Weight	0.36 lbs (165 g)
Material	Acrylonitrile Butadiene Styrene (ABS), Alloy Steel
Compatible Phone Width	4.7 inches to 7 inches
Phone Holder Rotation	360° horizontal, 270° vertical
Remote Control Connectivity	Bluetooth
Remote Control Range	Up to 33 feet (10 meters)
Remote Control Battery	1 x Lithium Metal (included, with spare)
Compatible Devices	Smartphones (iPhone, Samsung, Android), GoPro

WARRANTY AND SUPPORT

ANXRE provides professional after-sales service for 12 months from the date of purchase. If you encounter any issues

with your ANXRE ANXST01 selfie stick tripod, please contact the ANXRE service team for assistance. Contact information can typically be found on the product packaging or the official ANXRE website.

© 2025 ANXRE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question