

Magic Sing pr2

Magic Sing Karaoke Mic Songchip Premium Collection Vol. 2 (Model: pr2) Instruction Manual

Your guide to installing and using your Magic Sing song chip.

1. INTRODUCTION

This instruction manual provides essential information for the proper installation and operation of your Magic Sing Karaoke Mic Songchip Premium Collection Vol. 2. This song chip expands your karaoke experience by adding 300 popular Tagalog OPM and English Pop songs to your compatible Magic Sing karaoke microphone system. Please read this manual carefully before use to ensure optimal performance and compatibility.

2. COMPATIBILITY

This song chip is designed to work **exclusively** with specific Magic Sing ET and MT series karaoke microphone models. Verify your microphone model against the list below before attempting installation.

Compatible Models:

- ET23KH
- ET23PRO
- ET25K
- ET25KHC
- ET21KV
- ET31KH
- ET19KV
- ET18KV
- ET-18K
- MT-15K
- ET-13K
- ET12K
- MT14K
- ET9K

Important: This song chip is NOT compatible with the Magic Sing ET-28KH model or any models not listed above.

Using the song chip with an incompatible model may result in malfunction or damage to the chip or your karaoke system.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the song chip into your compatible Magic Sing karaoke microphone.

1. **Power Off:** Ensure your Magic Sing karaoke microphone is powered off and disconnected from any power source before installation.
2. **Locate Slot:** Identify the song chip slot on your Magic Sing microphone. This is typically a small, rectangular opening designed to accept the chip.
3. **Orient Chip:** Hold the song chip with the gold contact pins facing towards the microphone and the label side (if any) facing upwards or as indicated by your microphone's design.
4. **Insert Chip:** Gently slide the song chip into the slot. Apply light, even pressure until the chip is fully seated and secure. Do not force the chip, as this may cause damage to the chip or the microphone's slot.
5. **Power On:** Once the chip is securely inserted, you may power on your Magic Sing karaoke microphone. The system should automatically detect the new song chip.



Image 1: The Magic Sing Songchip Premium Collection Vol. 2. This image shows the compact design of the song chip with its gold contact pins, ready for insertion into a compatible karaoke microphone.

4. OPERATING INSTRUCTIONS

After successful installation, the songs from the Premium Collection Vol. 2 song chip will be accessible through your Magic Sing karaoke microphone's menu system.

1. **Access Song List:** Navigate through your microphone's on-screen menu to find the song list. The new songs from this chip will be integrated into the main song database or listed under a specific "Song Chip" category, depending on your microphone model.
2. **Select Songs:** Use the microphone's controls to browse and select songs. The song chip includes a "Built-In Song Track" feature, which means the instrumental backing tracks are embedded directly on the chip.
3. **Song List Reference:** Refer to the physical song list included with your purchase for a complete catalog of the 300 songs. An online version of the song list can also be found at: <https://www.magickaraoke.com/amazon/prem2.html>



Image 2: The Magic Sing Songchip alongside a portion of its included song list. This image illustrates how the song chip is packaged with a reference guide to the available songs.

5. MAINTENANCE AND CARE

To ensure the longevity and proper functioning of your song chip, follow these maintenance guidelines:

- **Keep Clean:** Periodically wipe the song chip with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Protect Contacts:** Do not touch the gold contact pins directly. Oils and dirt from your fingers can interfere with connectivity.
- **Storage:** Store the song chip in a cool, dry place, away from direct sunlight, extreme temperatures, and high humidity.
- **Handle with Care:** Avoid dropping the chip or subjecting it to physical impact, which could damage internal components.

6. TROUBLESHOOTING

If you encounter issues with your song chip, refer to the following common solutions:

- **Chip Not Recognized:**

- Ensure the karaoke microphone is powered off before inserting the chip.
- Remove the chip and re-insert it firmly, ensuring it is fully seated in the slot.
- Verify that your microphone model is listed as compatible in Section 2.
- Gently clean the gold contact pins on the chip with a dry, lint-free cloth.

- **Songs Not Appearing in Menu:**

- Confirm the chip is correctly installed as per Section 3.
- Restart your Magic Sing karaoke microphone system.
- Consult your specific Magic Sing microphone's user manual for instructions on accessing external song chip content.

- **No Sound or Video (General Karaoke Issue):**

- This issue is typically related to the microphone unit or its connection to your display/audio system, not the song chip itself.
- Check all cable connections (audio, video, power) to your TV or sound system.
- Refer to your Magic Sing microphone's main instruction manual for general troubleshooting.

7. SPECIFICATIONS

Brand	Magic Sing
Model Name	Premium Collection Vol. 2 (pr2)
Item Model Number	pr2
ASIN	B0BK9WV7B
Item Weight	4 ounces
Package Dimensions	12 x 9 x 1 inches
Special Feature	Built-In Song Track
Included Components	Song lists
Song Count	300 Songs
Song Genres	Tagalog OPM & English Pop

8. SUPPORT AND WARRANTY

For further assistance, technical support, or warranty inquiries regarding your Magic Sing Karaoke Mic Songchip, please contact Magic Sing customer support directly. Refer to the contact information provided with your Magic Sing karaoke microphone system or visit the official Magic Sing website.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question