

[manuals.plus](#) /› [VINABTY](#) /› [VINABTY RC-1234 Replacement Remote Control User Manual for Denon AV Players](#)

VINABTY RC-1234

VINABTY RC-1234 Replacement Remote Control User Manual

For Denon AV Player Models: PMA-600NE, DCD-600, DCD600, PMA600NE

1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your VINABTY RC-1234 Replacement Remote Control. This remote is designed to be compatible with specific Denon AV Player models, including PMA-600NE, DCD-600, DCD600, and PMA600NE. It functions as a direct replacement and does not require any programming or pairing.

2. SAFETY INFORMATION

- Keep batteries out of reach of children.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote control will not be used for an extended period.
- Dispose of used batteries according to local regulations.

3. PACKAGE CONTENTS

The package contains the following item:

- 1 x VINABTY RC-1234 Replacement Remote Control

4. SETUP

4.1 Battery Installation

The remote control requires two (2) AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover off.

3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

Note: This remote control does not require any programming or pairing. Once batteries are installed, it is ready for use with compatible Denon AV Players.



Image: Angled view of the VINABTY RC-1234 remote control, showing its general shape and button layout. The battery compartment is located on the back.

5. OPERATING INSTRUCTIONS

Point the remote control directly at your Denon AV Player. Ensure there are no obstructions between the remote and the device. The effective operating range is approximately 10 meters.

5.1 Button Functions Overview





Image: Front view of the VINABTY RC-1234 remote control, displaying all buttons and their labels for easy identification.

- **Power Buttons:** Separate buttons for 'Power' (main unit) and 'AMP POWER' (amplifier).
- **Remote Mode:** Buttons for 'CD', 'AMP', 'NET' to select the operating mode of the remote.
- **Input Selection:** Buttons such as 'CD', 'RECODER', 'NETWORK', 'OPTICAL1', 'OPTICAL2', 'COAXIAL', 'PHONO', 'AUX', 'Bluetooth' to select the desired audio input source.
- **Playback Controls:** Includes 'Play/Pause', 'Stop', 'Skip Forward', 'Skip Backward', 'Fast Forward', 'Fast Rewind' for media playback.
- **Volume Control:** 'VOLUME Up' and 'VOLUME Down' buttons, along with a 'MUTE' button.
- **Navigation Pad:** Directional arrows (Up, Down, Left, Right) and 'ENTER' button for menu navigation and selection.
- **Numeric Keypad:** Buttons '0' through '9', '+10', and 'CLEAR' for direct track selection or input.
- **Function Buttons:** 'INFO', 'SOURCE', 'QUEUE', 'FAVORITES', 'TUNE DIRECT', 'AMP', 'OPTION', 'MODE', 'BACK', 'SETUP' for accessing various features and settings of your Denon AV Player.
- **Playback Options:** 'RANDOM', 'REPEAT', 'PROGRAM', 'DIMMER' for customizing playback.

6. MAINTENANCE

6.1 Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

6.2 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If not in use for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure fresh AAA batteries are correctly installed.
 - Check for any obstructions between the remote control and the Denon AV Player.
 - Verify that you are within the effective operating range (approximately 10 meters).
 - Confirm that the remote mode (CD, AMP, NET) is correctly selected for the function you wish to control.
- **No programming required:** This remote control is designed to work out of the box with compatible Denon models. It does not require any complex programming or pairing procedures.

8. SPECIFICATIONS

Feature	Specification
Brand	VINABTY
Model	RC-1234
Compatible Devices	Denon AV Player (PMA-600NE, DCD-600, DCD600, PMA600NE)

Feature	Specification
Special Features	Ergonomic, No Programming Required
Connector Type	Infrared
Number of Buttons	42
Maximum Range	10 Meters
Batteries Required	2 x AAA (not included)
Product Dimensions	15 x 8 x 0.8 cm
Item Weight	50 g

9. WARRANTY AND SUPPORT

For any questions regarding your VINABTY RC-1234 Replacement Remote Control, please contact the seller or manufacturer directly. Specific warranty details may vary and are typically provided at the point of purchase.