

[Manuals.plus](#) /

› [Zerodis](#) /

› Zerodis Smart Doorbell User Manual

Zerodis AC90-260V

Zerodis Smart Doorbell User Manual

Model: AC90-260V

INTRODUCTION

Thank you for choosing the Zerodis Smart Doorbell. This manual provides essential information for the safe and efficient operation of your new doorbell. Please read it thoroughly before installation and use, and retain it for future reference.



Image: Front view of the Zerodis Smart Doorbell, a compact white rectangular device with a silver horizontal strip and a blue musical note icon.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Smart Doorbell Receiver (AC90-260V)
- 1 x User Manual

PRODUCT FEATURES

- **Remote Connection:** Designed to operate without interfering with other household devices.
- **Easy Installation:** Plugs directly into any standard household AC90-260V socket.
- **Weather Resistance:** Suitable for various weather conditions including heavy rain, direct sunlight, and frost. Can be installed indoors, outside door frames, or in gardens.
- **52 Polyphonic Ringtones:** Offers a selection of 52 distinct melodies with 4 adjustable volume levels.
- **Low Power Consumption:** Ultra-low power design for extended use and energy efficiency.

Smart Doorbell

52 polyphonic ringstones with 4 level optional volume adjustment.



Image: The Zerodis Smart Doorbell shown with musical notes emanating from it, illustrating its 52 polyphonic ringtone feature.

SETUP AND INSTALLATION

1. **Unpack the Doorbell:** Carefully remove the doorbell receiver and manual from the packaging.
2. **Prepare for Installation:** Ensure the metal strip protective film on the plug is removed before use.
3. **Plug In the Receiver:** Insert the doorbell receiver into any standard AC90-260V household electrical socket. The device is designed for easy plug-and-play operation.



Image: A close-up view of the US plug on the rear of the Zerodis Smart Doorbell, highlighting its direct plug-in design.



Image: The Zerodis Smart Doorbell receiver plugged into a wall socket in a modern home interior, demonstrating its discreet placement.

OPERATING INSTRUCTIONS

1. Ringtone Selection:

Locate the ringtone selection button on the side of the doorbell receiver. Press this button repeatedly to cycle through the 52 available polyphonic ringtones. Stop pressing when you hear your desired melody.

2. Volume Adjustment:

Locate the volume adjustment button, typically next to the ringtone selection button. Press this button to cycle through the 4 available volume levels (low, medium, high, mute). Select the volume level appropriate for your environment.

3. Pairing (if applicable):

While this model is typically plug-and-play, if you are pairing with a separate doorbell button (transmitter), refer to the specific instructions provided with the transmitter for pairing procedures. Generally, this involves pressing and holding a pairing button on the receiver until an indicator light flashes, then activating the transmitter button.



Image: A close-up side view of the Zerodis Smart Doorbell, highlighting the buttons for adjusting volume and selecting ringtones.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the doorbell receiver. Do not use abrasive cleaners, solvents, or strong chemicals, as these may damage the finish or internal components.
- **Environmental Conditions:** While the doorbell is weather-resistant, prolonged exposure to extreme conditions (e.g., direct water immersion, extreme temperatures outside specified operating range) should be avoided to ensure longevity.
- **Storage:** If storing the doorbell for an extended period, unplug it from the power outlet and store it in a cool, dry place away from direct sunlight.

can be used in harsh weather conditions
such as heavy rain, direct sunlight and frost.



Image: The Zerodis Smart Doorbell positioned outdoors during rainfall, illustrating its weather-resistant design suitable for various environmental conditions.



Can be installed indoors, outside door frames or in the garden.

Image: The Zerodis Smart Doorbell positioned near the entrance of a house within a garden, showcasing its versatility for indoor or outdoor installation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Doorbell not ringing.	No power to the receiver. Volume set to mute. Transmitter (button) battery low or faulty (if applicable). Receiver and transmitter not paired (if applicable).	Ensure receiver is securely plugged into a working outlet. Adjust volume level using the volume button. Replace transmitter battery or check transmitter functionality. Refer to transmitter manual for pairing instructions.
Ringtone not changing.	Ringtone button not pressed correctly.	Press the ringtone selection button firmly and repeatedly to cycle through options.

Problem	Possible Cause	Solution
Short range or intermittent signal.	Obstructions between receiver and transmitter.	Relocate receiver or transmitter to minimize obstructions (e.g., thick walls, metal objects).
	Interference from other wireless devices.	Move receiver away from other electronic devices that may cause interference.

SPECIFICATIONS

Parameter	Value
Model	AC90-260V
Item Type	Smart Doorbell Receiver
Material	ABS
Working Voltage	AC90-260V
Operating Frequency	433 MHz
Output Power	0.15W
Sensitivity	-112dbm
Package Dimensions	3.94 x 3.74 x 1.93 inches
Item Weight	3.2 ounces
Manufacturer	Zerodis

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact Zerodis customer service directly. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, you may visit the official Zerodis store on Amazon:[Zerodis Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKG42WN1>

More documents and user manuals: <https://manuals.plus/>