

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KITWLEMEN](#) /

› [KITWLEMEN Camping Fan with Light - Model D12 Instruction Manual](#)

## KITWLEMEN D12

# KITWLEMEN Camping Fan with Light - Model D12 Instruction Manual

Brand: KITWLEMEN | Model: D12

## INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your KITWLEMEN Camping Fan with Light, Model D12. This versatile device features a high-capacity rechargeable battery, multi-speed fan, integrated LED lighting, oscillation, and timer functions, making it suitable for various indoor and outdoor applications.

Please read this manual thoroughly before first use and retain it for future reference.

## SAFETY INFORMATION

- Do not insert fingers or any objects into the fan grille.
- Keep the fan away from water or other liquids.
- Do not disassemble or attempt to repair the fan yourself. Contact qualified personnel for service.
- Ensure the fan is placed on a stable, flat surface or securely hung to prevent falling.
- Keep out of reach of children.
- Use only the provided charging cable or a compatible 5V USB charger.

## PACKAGE CONTENTS

- KITWLEMEN Camping Fan with Light (Model D12)
- Remote Control
- USB Charging Cable
- Instruction Manual

## PRODUCT OVERVIEW

The KITWLEMEN Camping Fan is designed for portability and multi-functionality. It features a durable construction, an integrated handle for easy transport, and a versatile base that allows for tabletop placement

or hanging. The fan head can pivot 270 degrees for directional airflow.



Figure 1: Main components of the KITWLEMEN Camping Fan.

### Control Panel & Remote

The fan can be operated directly via the control panel on its base or using the included remote control. The control panel includes buttons for power, fan speed, oscillation, light, timer, and sleep mode, along with LED indicators for battery level and current settings.

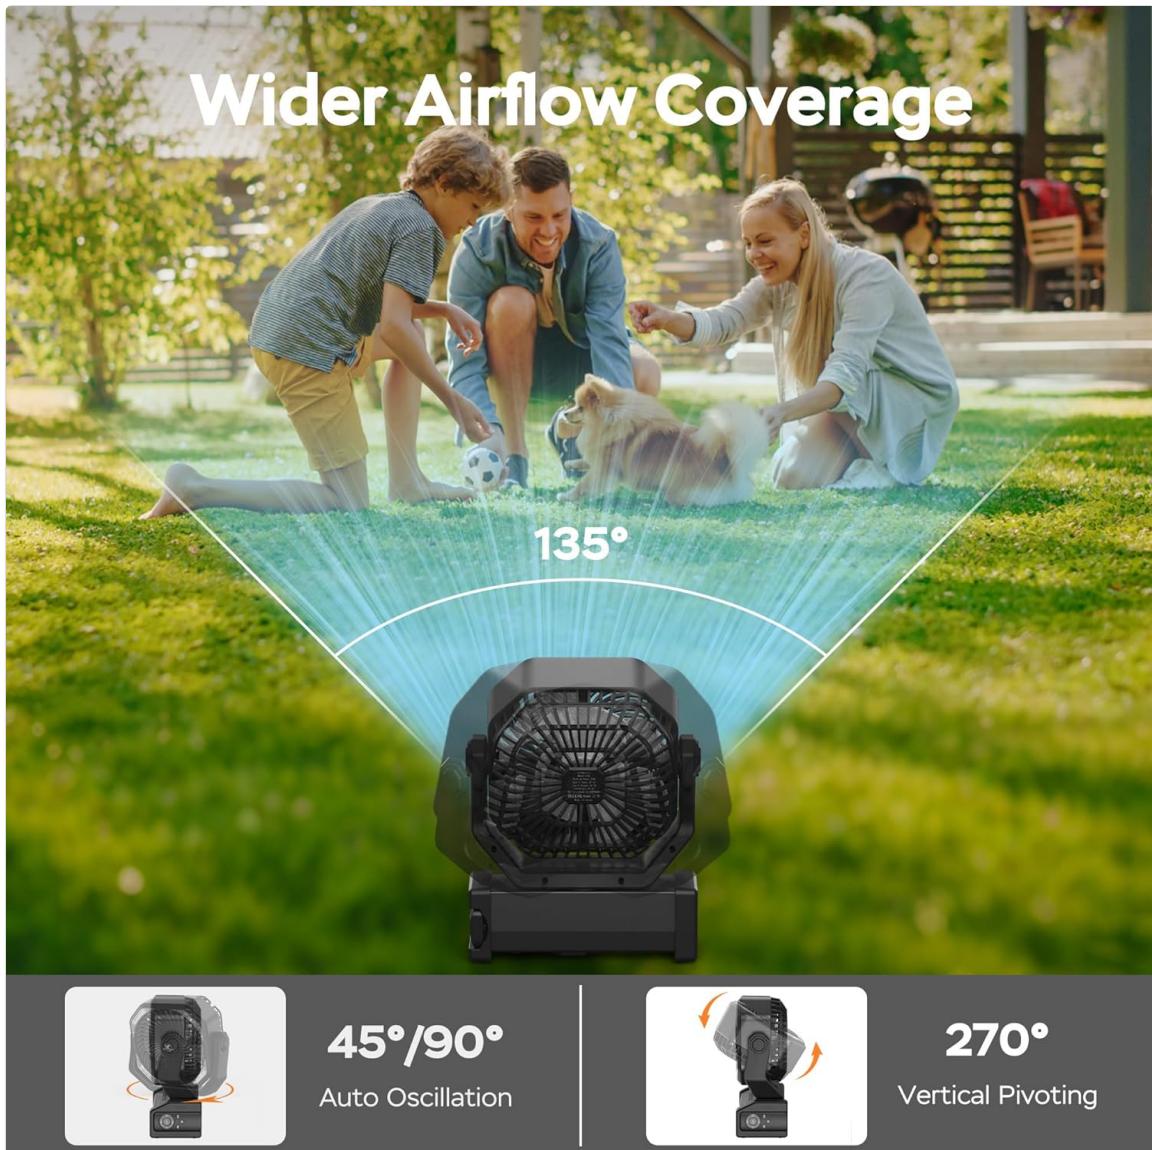


Figure 2: Control panel and remote control layout.

## SETUP

The fan is designed for immediate use out of the box. Ensure the battery is sufficiently charged before extended use. The fan can be placed on any flat surface or hung using its integrated hook.

### Hanging the Fan

The fan features a 360-degree rotatable hook located on the top handle. To use, simply extend the hook and attach it to a suitable hanging point, such as inside a tent or under a canopy. Adjust the fan head's pivot to direct airflow as desired.

# 3 Adjustable Brightness

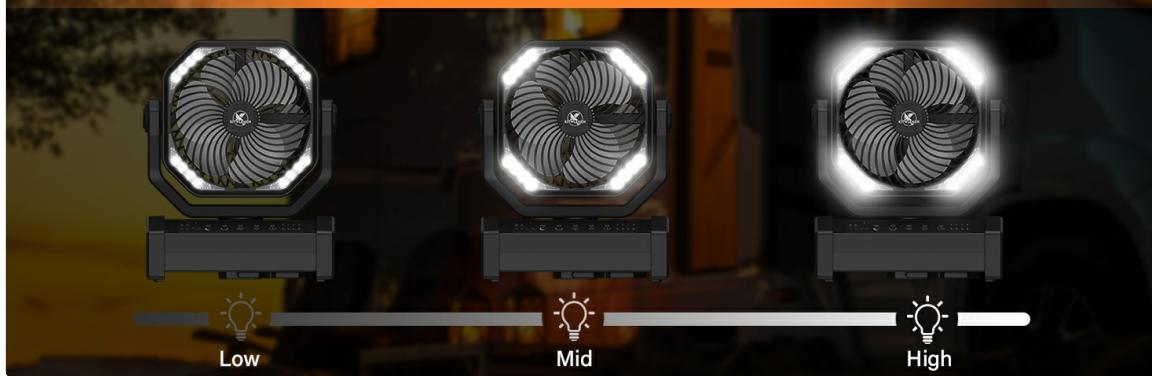


Figure 3: Fan hung from a tent ceiling.

Video 1: Demonstration of the fan's auto-oscillating feature and its use in a tent setting.

## OPERATING INSTRUCTIONS

---

### Power On/Off

Press the power button on the control panel or remote to turn the fan on or off.

### Fan Speed Adjustment

The fan offers 4 speed settings. Press the fan speed button (or +/- on remote) repeatedly to cycle through the speeds (1-4). Speed 1 is the lowest, and Speed 4 provides the highest airflow.

# 4 Powerful Wind Speeds



Figure 4: Fan speed settings and estimated run times.

## LED Lighting Control

The fan features 16 ultra-bright LED bulbs with 3 brightness settings. Press the light button (or light icon on remote) repeatedly to cycle through the brightness levels (Low, Medium, High) or to turn the light off.

# 3 Ultra Bright Lighting



Figure 5: LED lighting brightness levels.

## Automatic Oscillation

Activate the automatic oscillation feature by pressing the oscillation button (or rotate button on remote). The fan can oscillate within 45° or 90° to cover a wider area. Press again to stop oscillation.

# 4 Timers & Sleep Mode



1H 2H  
4H 8H



All indicator  
lights off



< 30dB  
Ultra-Quiet



Figure 6: Oscillation and pivoting capabilities.

Video 2: Demonstration of the fan's auto-oscillating function and remote control usage.

## Timer Function

Set a timer for the fan to automatically turn off after a specified duration. Press the timer button (or time icon on remote) repeatedly to select 1, 2, 4, or 8 hours. The corresponding LED indicator will light up.

## Sleep Mode

Activate sleep mode by pressing the sleep mode button (or sleep icon on remote). In this mode, the fan operates at its lowest noise level, and all indicator lights are turned off to avoid disturbing your rest.

## Charging External Devices

The fan's 20000mAh battery can also serve as a power bank. Locate the USB output ports on the side of the fan's base. Connect your phone or other USB-powered devices using their respective charging cables to charge them.



## Charge 2 devices at once



**USB A**  
Output Port  
5V/2A



**USB C**  
Output Port  
5V/3A



Figure 7: Charging external devices using the fan's power bank function.

Video 3: Overview of the portable camping fan's features, including its 20000mAh battery and various functions.

## MAINTENANCE

To ensure optimal performance and longevity of your fan, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the exterior of the fan with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, ensuring no water enters the fan grille or control panel.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the battery is partially charged (around 50%) before storage to prolong its lifespan.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the fan when the battery indicator shows low power.

## TROUBLESHOOTING

- **Fan not turning on:** Check if the battery is charged. If not, connect the fan to a power source using the USB charging cable.
- **Light not working:** Ensure the light function is activated via the control panel or remote. Check battery level.
- **Remote control not responding:** Ensure there are no obstructions between the remote and the fan.

Check the remote's battery (if applicable).

- **Oscillation not working:** Verify that the oscillation function is activated. If the fan head is manually adjusted, ensure it's within the operational range for oscillation.

## SPECIFICATIONS

Feature	Detail
Brand	KITWLEMEN
Model Name	D12
Color	Black
Power Source	Battery Powered
Battery Capacity	20000mAh (Rechargeable Lithium Polymer)
Max Run Time	Up to 60 hours (lowest wind speed)
Fan Speeds	4
Airflow Speed	Up to 12.5 ft./s
Oscillation	45°/90° Automatic
Pivot Angle	270° Vertical
LED Lights	16 ultra bright LED bulbs
Light Brightness	3 settings (Max 400LM)
Timer Settings	1H, 2H, 4H, 8H
Noise Level	<30dB (lowest setting)
Control Method	Remote, On-device buttons
Remote Range	19.6ft
USB Output Ports	Yes (for charging devices)
Product Dimensions	4"D x 8"W x 10"H
Item Weight	3.44 pounds

## WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your KITWLEMEN Camping Fan, please refer to the contact details provided on the product packaging or the official KITWLEMEN website. Keep your purchase receipt as proof of purchase for warranty claims.

