

ECONTROLLY Replacement Remote Control for Acson Mcquay Blue Star AC

ECONTROLLY Replacement Remote Control User Manual

Model: Replacement Remote Control for Acson Mcquay Blue Star AC

INTRODUCTION

This manual provides detailed instructions for the ECONTROLLY Replacement Remote Control, designed to operate various Acson, Mcquay, and Blue Star Split Portable Air Conditioners. This remote control is a direct replacement and does not require any complex programming. Simply install the batteries, and it is ready for use.





Image: Front view of the ECONTROLLY Replacement Remote Control, showing the display screen, power button, and temperature adjustment arrows.

SETUP

Battery Installation

The remote control requires two (2) AAA batteries for operation. Ensure correct polarity when inserting the batteries.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, matching the (+) and (-) terminals as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Image: The ECONTROLLY Replacement Remote Control with its battery compartment open, showing the slots for two AAA batteries and various function buttons.

OPERATING INSTRUCTIONS

Once batteries are installed, the remote is ready to control your compatible air conditioner. Point the remote directly at the air conditioner's receiver.

Basic Functions

- **Power Button (Blue):** Press to turn the air conditioner ON or OFF.
- **Temperature Up/Down (Grey Arrows):** Use the up arrow to increase temperature and the down arrow to decrease temperature.
- **MODE:** Cycles through operating modes such as Cool, Fan, Dry, Heat (if applicable to your AC unit).
- **FAN:** Adjusts fan speed (e.g., Auto, Low, Medium, High).

- **SWING:** Activates or deactivates the air swing function.
- **ON TIMER / OFF TIMER:** Used to set a specific time for the air conditioner to turn on or off. Use SET and CLR buttons in conjunction.
- **SLEEP:** Activates the sleep mode, which typically adjusts temperature and fan speed for comfortable sleep.
- **CLOCK:** Used to set the current time on the remote's display.

Temperature Unit Toggle (°C / °F)

To switch between Celsius (°C) and Fahrenheit (°F) temperature displays:

- Simultaneously press the **Temperature Up** and **Temperature Down** arrow buttons. The display will toggle between the two units.





Image: Back view of the ECONTROLLY Replacement Remote Control, showing embossed text with instructions for temperature unit toggle and battery care.

MAINTENANCE

Battery Replacement

Replace batteries when the remote's display becomes dim or the remote stops responding. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

If the remote will not be used for a long period, it is recommended to remove the batteries to prevent leakage and potential damage to the remote.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding to AC unit.	Batteries are dead or incorrectly installed. Remote is not pointed at the AC unit. Obstruction between remote and AC unit.	Replace batteries with new AAA batteries, ensuring correct polarity. Point the remote directly at the AC unit's infrared receiver. Remove any obstructions.

Problem	Possible Cause	Solution
Remote display is dim or blank.	Low battery power.	Replace both AAA batteries.
Remote does not control all functions of the AC unit.	The specific AC unit may not support all functions available on the remote, or the remote is not fully compatible with all models.	Verify your AC unit's original remote functions. This replacement remote is designed to replicate common functions but may not support highly specific or advanced features of all compatible models.
Remote requires programming.	Misconception. This remote is a direct replacement.	This ECONTROLLY remote control does not require any programming. Ensure batteries are correctly installed and try again.

SPECIFICATIONS

- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 3 ounces
- **Batteries Required:** 2 AAA batteries (not included)
- **Connectivity Technology:** Infrared (IR)
- **Compatible Devices:** Acson, Mcquay, Blue Star Split Portable Air Conditioners
- **Special Feature:** Ergonomic design

WARRANTY AND SUPPORT

For any issues or questions regarding your ECONTROLLY Replacement Remote Control, please contact the seller or refer to your purchase platform for support options. Specific warranty details may vary based on your point of purchase.