

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› User Manual for ECONTROLLY Universal Sanyo Air Conditioner Remote Control

ECONTROLLY RCS-5S1E

User Manual for ECONTROLLY Universal Sanyo Air Conditioner Remote Control

MODEL: RCS-5S1E

Brand: ECONTROLLY

INTRODUCTION

This manual provides instructions for the ECONTROLLY Universal Replace Remote Control, designed to operate various Sanyo Air Conditioner models. This remote offers a convenient and direct replacement solution without the need for complex programming.

Compatible Sanyo Air Conditioner Models:

- KMS0972
- KMHS0772
- KMHS1712
- KS1872
- KS2472
- RCS-5S1E
- RCS-7S1E
- RCS-1PS4U-G
- RCS-SH1BG

SETUP

The ECONTROLLY Universal Remote Control is designed for immediate use upon battery installation. No programming or pairing is required for compatible Sanyo air conditioner models.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.

3. Insert two (2) AAA alkaline batteries, ensuring the correct polarity (+ and -) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.





Figure 1: Rear view of the remote control with the battery cover removed, illustrating the correct placement for two AAA batteries.

OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your Sanyo air conditioner.





Figure 2: Front view of the ECONTROLLY Universal Remote Control, displaying the LCD screen and various control buttons.

Button Functions

Button	Function
ON·I / OFF·O	Powers the air conditioner ON or OFF.
MODE	Cycles through operating modes (e.g., Cool, Heat, Fan, Dry, Auto).
▼ TEMP. ▲	Adjusts the desired temperature setting.
FAN SPEED	Adjusts the fan speed (e.g., Low, Medium, High, Auto).
FLAP	Controls the vertical swing of the air conditioner's louver.
1HR.	Activates a 1-hour timer function.
ECONOMY	Activates or deactivates the economy mode for energy saving.
ON TIMER / OFF TIMER	Sets a timer for the air conditioner to turn ON or OFF automatically.
CANCEL	Cancels active timer settings.
ACL	Likely a reset button, often recessed. Use a thin object to press.
SENSOR	Activates or deactivates the room temperature sensor function.

Button	Function
QUIET	Activates or deactivates quiet operation mode.
LED CLEAN	Activates or deactivates the LED display or a self-clean function (refer to AC manual).

MAINTENANCE

Battery Replacement

Replace batteries when the remote's range decreases significantly or if the display becomes dim or unresponsive. Always replace both batteries simultaneously with new AAA alkaline batteries.

Cleaning

Wipe the remote control with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use abrasive cleaners, solvents, or immerse the remote in water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding / Air conditioner not reacting.	- Dead or low batteries. - Incorrect battery polarity. - Obstruction between remote and AC unit. - Remote out of range.	- Replace batteries with new AAA alkaline batteries. - Ensure batteries are inserted with correct + and - orientation. - Remove any objects blocking the line of sight to the AC unit's receiver. - Move closer to the air conditioner unit (within 10 meters / 33 feet).
Remote display is dim or blank.	Low battery power.	Replace batteries.
Specific functions not working.	- Function not supported by your specific AC model. - Temporary remote malfunction.	- Refer to your Sanyo air conditioner's original manual to confirm supported features. - Remove batteries, wait 30 seconds, then reinsert them to reset the remote.

SPECIFICATIONS

- **Product Dimensions:** 7 x 2 x 0.65 inches
- **Item Weight:** 3 ounces
- **Model Number:** RCS-5S1E
- **Brand:** ECONTROLLY

- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS Environmental protection material
- **Control Distance:** Approximately 10 meters (33 feet)
- **Color:** White
- **Special Feature:** Ergonomic design
- **Max Number of Supported Devices:** 18 (refers to internal compatibility, not simultaneous control)
- **Compatible Devices:** Sanyo Air Conditioners

WARRANTY AND SUPPORT

Information regarding specific warranty terms or direct customer support for this product is not provided in the available documentation. Please refer to the seller or manufacturer's website for any warranty claims or support inquiries.

© 2025 ECONTROLLY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKGP86HJ>

More documents and user manuals: <https://manuals.plus/>