

Peg Perego IP2600NA00RO51PL31

Peg Perego Veloce Stroller User Manual

Model: IP2600NA00RO51PL31 | Brand: Peg Perego

1. INTRODUCTION

The Peg Perego Veloce is a compact, full-featured, and lightweight stroller designed for agility and ease of use. Approved from birth, it features a reversible seat and weighs approximately 23.5 lbs. With a width of 20 inches, it is designed to be maneuverable in various environments.

The Veloce stroller is compatible with Peg Perego Primo Viaggio 4-35 Lounge or Primo Viaggio 4-35 Nido infant car seats, transforming it into a travel system. Additionally, with the purchase of a separate car seat adapter, it can accommodate most Maxi Cosi style car seats. The seat offers an almost flat recline for comfort from birth up to 50 lbs.

Key features include polyurethane wheels, rear shock absorbers with visible springs, and ball bearings for agile steering. Front wheels can be adjusted between locked and swiveling positions. High-visibility finishes on the wheels enhance safety during evening walks. The stroller features a user-friendly brake system and an eco-leather handlebar with multiple height adjustments for parent comfort. The Veloce stroller can be opened and closed with one hand using a central control on the handle, eliminating the need to bend down. It folds compactly with the seat in both forward and rear positions, offering space-saving storage. The large, adjustable UPF 50+ hood includes a peek-a-boo window for sun protection and ventilation. A spacious, easy-to-access basket with a reinforced rigid bottom supports heavy loads. Comfort and functionality are further enhanced by a roomy seat, a 5-point harness, and an eco-leather front bar that opens and closes easily.

2. SAFETY INFORMATION

Please read and understand all instructions before assembling and using the stroller. Failure to follow these instructions could result in serious injury or death to your child.

- **WARNING:** Never leave your child unattended in the stroller.
- Always use the 5-point harness system to secure your child in the seat. Ensure it is properly adjusted and fastened.
- Engage the brakes whenever the stroller is stationary.
- Do not overload the storage basket. The maximum weight capacity for the basket is specified in the 'Specifications' section.
- Ensure all locking devices are engaged before use.
- Do not use accessories or replacement parts other than those approved by Peg Perego.
- The stroller is designed for children from birth up to 50 lbs (approximately 22 kg).
- Avoid placing hot liquids or heavy objects on the handlebar.
- Keep children clear of moving parts when making adjustments.

- This product is not suitable for running or skating.

3. WHAT'S IN THE BOX

Upon unpacking, please ensure all components are present and undamaged:

- Veloce Stroller Frame
- Reversible Stroller Seat with 5-point harness and eco-leather front bar
- Large adjustable UPF 50+ hood
- Large, easy-to-access basket
- Wheels (front and rear)
- Instruction Manual
- *Note: Primo Viaggio 4-35 Lounge or Nido car seat and Car Seat Adapter are sold separately.*

4. SETUP AND ASSEMBLY

4.1 Unpacking and Initial Inspection

Carefully remove all components from the packaging. Inspect for any signs of damage or missing parts. If anything is amiss, contact customer support immediately.

4.2 Attaching the Wheels

1. Locate the front and rear wheels.
2. Insert the rear wheels into the axle until they click securely into place. Pull gently to ensure they are locked.
3. Insert the front wheels into their respective housings until they click. Verify secure attachment.



Figure 4.2.1: Detail of the stroller wheels, showing the suspension and reflective accents. Ensure wheels are securely attached.

4.3 Attaching the Seat Unit

1. Unfold the stroller frame (refer to Section 5.1).
2. Align the seat unit's connectors with the corresponding slots on the stroller frame.
3. Push down firmly until you hear a click, indicating the seat is securely locked.
4. The seat can be attached facing forward or rearward. To reverse, press the release buttons on both sides of the seat and lift, then reattach in the desired direction.



Figure 4.3.1: The Peg Perego Veloce stroller with the seat unit installed in the forward-facing position.

4.4 Adjusting the Handlebar

The eco-leather handlebar is adjustable to multiple heights for parent comfort. Press the buttons on either side of the handlebar and move it up or down to your preferred position. Release the buttons to lock it in place.



Figure 4.4.1: Side profile illustrating the adjustable handlebar and the large UPF 50+ canopy.

4.5 Attaching the Canopy and Front Bar

The large adjustable UPF 50+ hood attaches to the seat unit. Ensure it is securely fastened to provide adequate sun protection. The eco-leather front bar clicks into place on the seat unit. It can be opened from either side or removed completely by pressing the release buttons.

5. OPERATING INSTRUCTIONS

5.1 Unfolding the Stroller

1. Ensure the stroller is on a flat, stable surface.
2. Locate the central control on the handlebar.
3. With one hand, activate the release mechanism and lift the handlebar upwards until the frame fully extends and locks into place. You should hear a click.
4. Verify that the frame is fully locked before placing a child in the stroller.

5.2 Folding the Stroller

The Veloce stroller features a one-hand fold mechanism, even with the seat attached in either direction.

1. Ensure the child is removed from the stroller.
2. Engage the parking brake.
3. Locate the central control on the handlebar.
4. Activate the release mechanism and push the handlebar downwards, allowing the frame to collapse.

5. Continue pushing until the stroller is fully folded and the automatic lock engages.



Figure 5.2.1: The Veloce stroller in its compact, folded configuration, designed for easy storage.

5.3 Engaging the Brakes

The stroller is equipped with a user-friendly foot brake located near the rear wheels. Press the brake pedal down firmly to engage the brakes. Lift the pedal up to release. Always ensure the brakes are fully engaged when the stroller is stationary.

5.4 Adjusting Front Wheels (Swivel/Lock)

To switch between swivel and locked front wheels, locate the locking mechanism above each front wheel. Push the lever down to lock the wheel in a straight position for rougher terrain, or lift it up to allow the wheel to swivel for easier maneuverability.

5.5 Reclining the Seat

The seat offers multiple recline positions, including an almost flat recline suitable for newborns. Locate the recline lever or button on the back of the seat. Squeeze or press and adjust the seat to the desired angle. Release to lock.

5.6 Using the 5-Point Harness

Always secure your child with the 5-point harness. Insert each buckle tongue into the central buckle until it clicks. To release, press the button on the central buckle. Adjust the shoulder straps and waist straps for a snug, secure fit without being too tight.

5.7 Car Seat Compatibility (Travel System)

The Veloce stroller is designed to integrate with Peg Perego Primo Viaggio 4-35 Lounge or Primo Viaggio 4-35 Nido

infant car seats to form a travel system. To attach a compatible car seat, remove the stroller seat unit. Align the car seat with the frame's attachment points and press down until it clicks securely. Always ensure the car seat is firmly attached before use.

For compatibility with most Maxi Cosi style car seats, a separate "Car Seat Adapter" is required. Follow the instructions provided with the adapter for proper installation.



Figure 5.7.1: The Veloce stroller configured as a travel system with an infant car seat installed.

6. MAINTENANCE

6.1 Cleaning the Fabric

The fabric components (90% Polyester Blend, 10% Faux Leather) can be spot cleaned with a mild soap and cold water. Do not use bleach or harsh detergents. Allow to air dry completely before reassembly or storage. Refer to the care label on the fabric for specific washing instructions.

6.2 Cleaning the Frame and Wheels

Wipe the aluminum frame and plastic components with a damp cloth and mild soap. Dry thoroughly. Periodically clean debris from the wheels and axles to ensure smooth operation. Avoid using abrasive cleaners.

6.3 Lubrication

Occasionally, apply a small amount of silicone-based lubricant to moving parts such as wheel axles and folding mechanisms to maintain smooth operation. Avoid using oil-based lubricants as they can attract dirt.

6.4 Storage

When not in use, store the stroller in a clean, dry place away from direct sunlight and extreme temperatures. The compact fold feature helps save space during storage.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stroller not unfolding/folding smoothly	Locking mechanisms obstructed or stiff; seat not correctly positioned.	Ensure all components are clear of the folding mechanism. Apply lubricant to moving parts if stiff. Ensure seat is correctly attached.
Wheels not swiveling or locking	Debris in wheel housing; locking mechanism jammed.	Clean wheels and wheel housings. Check if the swivel lock lever is fully engaged or disengaged.
Brake not engaging/disengaging	Debris in brake mechanism; cable issue.	Clear any debris from the brake pedal and mechanism. If the issue persists, contact customer support.
Harness difficult to buckle/unbuckle	Buckle mechanism dirty or jammed.	Clean the buckle with a damp cloth. Ensure no fabric is obstructing the mechanism.

8. SPECIFICATIONS

Model Number: IP2600NA00RO51PL31

UPC: 888487047769

Color: Blue Shine

Material: Aluminum (Frame), 90% Polyester Blend, 10% Faux Leather (Fabric), Polyurethane (Wheels)

Age Range: From Birth (with flat recline) up to 50 lbs

Maximum Weight Recommendation: 50 Pounds

Item Weight: 23.75 Pounds

Item Dimensions (L x W x H): 40"L x 20"W x 42.25"H

Folded Size: 16.5" x 20" x 31"

Harness Type: 5 Point

Number of Wheels: 4

Car Seat Compatible: Yes (with Peg Perego Primo Viaggio 4-35 Lounge/Nido or Maxi Cosi style with adapter)

Safety Standards: ASTM, JPMA



Figure 8.1: Key dimensions of the Peg Perego Veloce stroller.

9. WARRANTY INFORMATION

The Peg Perego Veloce Stroller comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, normal wear and tear, or unauthorized modifications.

For detailed warranty terms and conditions, please refer to the official Peg Perego website or contact customer support.

10. SUPPORT & CONTACT

For further assistance, spare parts, or to report any issues, please contact Peg Perego customer service:

Website: us.pegperego.com (Please visit for the most up-to-date contact information and FAQs)

Phone: Refer to the website for regional contact numbers.

Online Support: Check the 'Support' or 'Contact Us' section on the official website.

When contacting support, please have your stroller's model number (IP2600NA00RO51PL31) and proof of purchase readily available.

Related Documents

 <p>veloce / veloce tc</p>	<p>Peg Perego Veloce / Veloce TC Stroller: User Manual and Safety Guide</p> <p>Official user manual and safety guide for the Peg Perego Veloce and Veloce TC strollers. Learn about assembly, operation, maintenance, and safety features for your child's comfort and security.</p>
 <p>veloce / veloce tc</p>	<p>Peg Perego Veloce Stroller Instructions</p> <p>Comprehensive instructions for assembling, using, and maintaining the Peg Perego Veloce and Veloce TC strollers. Learn how to fold, unfold, adjust, and attach accessories for optimal use.</p>
 <p>pliko p3 compact</p>	<p>Peg Perego Pliko P3 Compact User Manual</p> <p>Comprehensive instructions and guides for the Peg Perego Pliko P3 Compact stroller, covering assembly, usage, and maintenance.</p>
 <p>selfie plus</p>	<p>Peg Perego Selfie Plus: Manuale di Istruzioni e Guida all'Uso</p> <p>Scopri il manuale di istruzioni per il passeggino Peg Perego Selfie Plus. Trova guide dettagliate sull'assemblaggio, l'uso sicuro e la manutenzione per il tuo passeggino.</p>