



[Manuals.plus](#) /

› [HOLMES](#) /

› HOLMES 4-inch Personal Fan Instruction Manual

**HOLMES 32510017**

# HOLMES 4-inch Personal Fan Instruction Manual

Model: 32510017

## PRODUCT OVERVIEW

---

The HOLMES 4-inch Personal Fan is a compact and portable fan designed for personal cooling. It features a rechargeable battery, three speed settings, and an adjustable head for directed airflow. This fan can be powered via USB or its internal rechargeable battery.



Image: The HOLMES 4-inch Personal Fan, a compact black fan with a circular head and a stable base.



Image: A diagram illustrating the dimensions of the HOLMES 4-inch Personal Fan, showing a width of 4.4 inches, depth of 2.5 inches, and height of 5.6 inches.

## SETUP

### Unpacking

- Carefully remove the fan and all accessories from the packaging.
- Ensure all components are present: the fan unit and a Micro-USB charging cable.

## Charging the Battery

The fan is equipped with a rechargeable battery. Before first use, fully charge the fan.

- Locate the Micro-USB port on the side of the fan's base.
- Connect the included Micro-USB cable to the fan's port.
- Connect the other end of the USB cable to a compatible USB power adapter (not included) or a powered USB port. For optimal charging, a 2A USB charger is recommended.
- The charging indicator lights will illuminate to show charging status.
- A full charge typically takes 2-3 hours and provides up to 6 hours of runtime on the lowest speed setting.

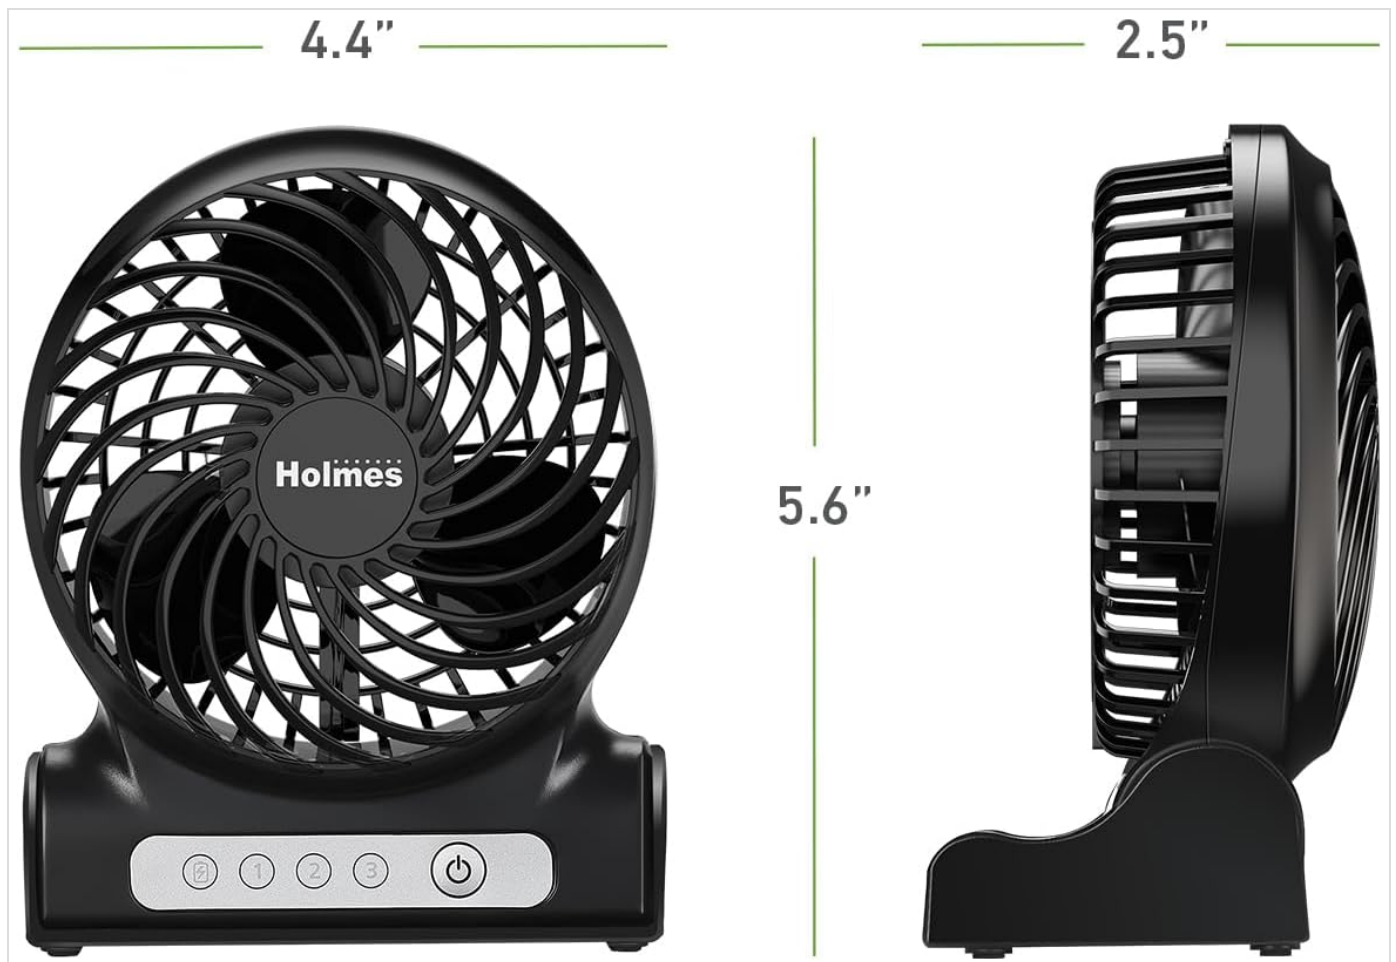


Image: A close-up view of the fan's Micro-USB charging port, with the included Micro-USB cable shown next to it.



Up to 6-Hour  
Rechargeable Battery\*

\*on lowest speed setting

Image: The HOLMES Personal Fan positioned on a desk, emphasizing its rechargeable battery feature that provides up to 6 hours of use on the lowest speed setting.

### Placement and Adjustment

- Place the fan on a stable, flat surface.
- The fan head can be manually tilted up to 90 degrees to direct airflow as needed. Gently adjust the fan head to your desired angle.

# 90°

## Adjustable Head Tilt



Image: A side view of the HOLMES Personal Fan demonstrating its 90-degree adjustable head tilt feature, indicated by a green arrow.

## Powering On/Off

- Press the power button (usually marked with a circle and vertical line) located on the fan's control panel to turn the fan on.
- Press the power button again to turn the fan off.

## Adjusting Fan Speed

The fan features three speed settings: Low, Medium, and High.

- After powering on the fan, press the speed control button (often marked with '1', '2', '3' or similar indicators) to cycle through the speed settings.
- Each press will increase the fan speed. After the highest speed, pressing again will typically return to the lowest speed or turn the fan off, depending on the model's specific control logic.



**3 Speed Levels**  
**Low, Medium, High**

Image: The control panel of the HOLMES Personal Fan, showing buttons for power and three distinct speed levels (Low, Medium, High).

---

## Cleaning

- Always unplug the fan or ensure it is powered off before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean the fan blades, use a soft brush or a vacuum cleaner with a brush attachment to gently remove dust from the grilles. Do not attempt to disassemble the fan.
- Ensure the fan is completely dry before plugging it back in or turning it on.

## Storage

- When not in use, store the fan in a cool, dry place.
- It is recommended to store the fan in its original packaging to protect it from dust and damage.

---

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the Micro-USB cable. Ensure the power source is active.
Fan does not turn on.	USB cable or power adapter issue.	Try a different USB cable or power adapter. Ensure the adapter provides sufficient power (e.g., 2A).
Reduced airflow.	Dust accumulation on blades/grilles.	Clean the fan grilles and blades as described in the Maintenance section.
Fan makes unusual noise.	Obstruction or loose part.	Turn off and unplug the fan. Carefully inspect for any obstructions. If the noise persists, discontinue use and contact support.
Battery does not hold charge.	Charging port damage or battery degradation.	Ensure the charging cable is securely connected and the port is not damaged. If the issue persists, the battery may need replacement or the unit may be faulty. Refer to warranty information.

---

## SPECIFICATIONS

Feature	Detail
Brand	HOLMES
Model Name	HOLMES Personal Fan
Model Number	32510017
UPC	694501170340
Color	Black
Style	Table Fan

Feature	Detail
Product Dimensions	4.45"D x 2.83"W x 5.57"H
Item Weight	8.16 ounces
Power Source	Battery Powered
Number of Speeds	3
Blade Length	4 Inches
Connector Type	Micro USB
Voltage	5 Volts
Wattage	10 watts
Material	Plastic
Manufacturer	Star Elite Inc.

## WARRANTY INFORMATION

---

This HOLMES Personal Fan comes with a **1-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims or inquiries, please contact the manufacturer, Star Elite Inc., directly. Keep your proof of purchase for warranty validation.

## SUPPORT

---

If you encounter any issues not covered in the troubleshooting section or require further assistance, please refer to the contact information provided with your product packaging or visit the official HOLMES website for customer support details.

Always ensure to follow safety guidelines and product instructions to prevent damage or injury.