

[Manuals.plus](#) /

› [Hasbro](#) /

› Hasbro Marvel Collection Drax Figure (Model F6665) Instruction Manual

Hasbro F6665

Hasbro Marvel Collection Drax Figure

MODEL: F6665

1. INTRODUCTION

This manual provides instructions for the Hasbro Marvel Collection Drax Figure, Model F6665. This articulated figure is designed to replicate the character Drax from the Marvel universe, featuring detailed sculpting and multiple points of articulation for posing. It is intended for display and imaginative play.





Figure of Drax standing upright, showcasing its detailed design and included accessories.

2. SETUP

2.1 Unboxing

1. Carefully remove the figure and any accessories from the packaging. Avoid using sharp objects that could damage the figure.
2. Inspect all components to ensure they are present and undamaged.



The Drax figure displayed within its retail packaging, indicating how it appears upon purchase.

2.2 Accessory Attachment

The Drax figure includes two silver knife accessories. To attach them:

1. Gently insert the handle of each knife into the designated grip holes in the figure's hands.
2. Ensure the accessories are securely seated but do not force them, as this may cause damage.



Drax figure holding its two silver knife accessories, demonstrating how they are held.

3. OPERATING YOUR FIGURE

3.1 Posing the Figure

The Drax figure features multiple points of articulation, allowing for various poses. These include:

- Head rotation and tilt
- Shoulder, elbow, and wrist articulation
- Waist rotation
- Hip, knee, and ankle articulation

To pose the figure, gently manipulate the joints to the desired position. Avoid excessive force, as this can damage the articulation points. Some joints may be stiff initially; gentle movement can help loosen them.





Rear view of the Drax figure, highlighting the design and potential articulation points on the back.

4. MAINTENANCE

4.1 Cleaning

To clean your Drax figure:

- Use a soft, dry cloth to gently wipe away dust and debris.
- For stubborn dirt, lightly dampen the cloth with water. Avoid harsh chemicals or abrasive cleaners, as these can damage the paint or plastic.
- Ensure the figure is completely dry before storing.

4.2 Storage

Store the figure in a cool, dry place away from direct sunlight and extreme temperatures. Prolonged exposure to sunlight can cause discoloration. Keep accessories with the figure to prevent loss.

5. TROUBLESHOOTING

- **Stiff Joints:** If a joint is stiff, gently rotate it back and forth to loosen it. Do not apply excessive force.
- **Loose Accessories:** If accessories do not stay in place, ensure they are fully inserted into the designated slots.
- **Figure Instability:** Ensure the figure's feet are flat on a stable surface. Adjust leg and ankle articulation for better balance.

6. SPECIFICATIONS

Product Dimensions	1.5 x 4 x 7 inches (3.8 x 10.2 x 17.8 cm)
Item Weight	2.11 ounces (60 grams)

Model Number	F6665
Manufacturer Recommended Age	4 years and up
Material	Plastic

7. SAFETY INFORMATION

WARNING: CHOKING HAZARD – Small parts. Not for children under 3 years. This product contains small parts which may pose a choking hazard if swallowed. Adult supervision is recommended for younger children.

Always ensure the figure and its accessories are used as intended and kept away from infants and toddlers.





The reverse side of the product packaging, displaying important safety warnings and product information in multiple languages.

8. WARRANTY AND SUPPORT

For product support, inquiries, or information regarding potential warranties, please contact Hasbro customer service. Details can typically be found on the product packaging or the official Hasbro website.

You can visit the official Hasbro website for further assistance:www.hasbro.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKK27DVR>

More documents and user manuals: <https://manuals.plus/>