

Koblenz CKM-650 EIN, 80350R

Koblenz CKM-650 EIN Espresso/Cappuccino Maker and Hamilton Beach 80350R Coffee Grinder User Manual

Models: CKM-650 EIN (Espresso Maker), 80350R (Coffee Grinder)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliances. Keep this manual for future reference.

- Always ensure the appliance is unplugged before cleaning or when not in use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep hands and utensils out of the grinding chamber during operation to prevent injury.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.

2. PRODUCT OVERVIEW

2.1 Koblenz CKM-650 EIN Espresso/Cappuccino Maker

The Koblenz CKM-650 EIN is a semi-automatic espresso and cappuccino maker designed for home use. It features a 3.5 bar pressure system and a milk frother for creating various coffee beverages.



Figure 1: Koblenz CKM-650 EIN Espresso and Cappuccino Maker. This image shows the front view of the espresso machine, highlighting its sleek black and stainless steel design, portafilter, and glass carafe.



Figure 2: Koblenz CKM-650 EIN Espresso and Cappuccino Maker with dimensions. The image displays the espresso machine with its approximate dimensions: 36cm (depth) x 25.5cm (width) x 25.5cm (height).

2.2 Hamilton Beach 80350R Coffee and Spice Grinder

The Hamilton Beach 80350R is a versatile grinder suitable for coffee beans and spices. It features durable stainless steel blades and a removable grinding chamber for easy cleaning.





Figure 3: Hamilton Beach 80350R Coffee and Spice Grinder. This image shows the compact design of the grinder, with its stainless steel finish and transparent lid revealing coffee beans.

3. SETUP

3.1 Initial Cleaning

1. Before first use, wash the glass carafe, portafilter, and removable grinding chamber with warm, soapy water. Rinse thoroughly and dry.
2. Wipe the exterior of both appliances with a damp cloth. Do not immerse the main units in water.

3.2 Espresso Maker Setup (Koblenz CKM-650 EIN)

1. Place the espresso maker on a stable, heat-resistant surface.
2. Fill the water reservoir with fresh, cold water. Ensure the water level does not exceed the maximum fill line.
3. Insert the metal filter into the portafilter handle.

4. Attach the portafilter to the brewing head by aligning it and twisting firmly to the right until it locks into place.
5. Ensure the glass carafe is placed on the drip tray beneath the portafilter.

3.3 Coffee Grinder Setup (Hamilton Beach 80350R)

1. Place the grinder on a dry, stable surface.
2. Ensure the removable grinding chamber is clean and dry before use.
3. Place the grinding chamber securely into the base of the grinder.

4. OPERATING INSTRUCTIONS

4.1 Using the Coffee Grinder (Hamilton Beach 80350R)

1. Fill the removable grinding chamber with whole coffee beans or spices. Do not overfill.
2. Securely place the lid on the grinding chamber.
3. Plug in the grinder.
4. Press and hold the power button to begin grinding. Release the button to stop. Grind until desired consistency is achieved.
5. Unplug the grinder. Remove the lid and then the grinding chamber to pour out the ground contents.

Easy to clean, fill and pour

With removable dishwasher safe grinding bowl made from durable stainless steel



Figure 4: Hamilton Beach 80350R Coffee Grinder with removable grinding chamber. The image illustrates the ease of filling and cleaning the grinder's detachable chamber.



Grinds enough to brew up to 12 cups

Great for a quick cup or a full pot

Figure 5: Hamilton Beach 80350R Coffee Grinder in use. This image shows the grinder in action, with ground coffee ready to be used for brewing.

4.2 Making Espresso (Koblentz CKM-650 EIN)

1. Ensure the water reservoir is filled and the portafilter with ground coffee is securely attached.
2. Place the glass carafe on the drip tray.
3. Plug in the espresso maker and turn the power switch to the 'ON' position. The indicator light will illuminate.
4. Wait for the machine to heat up (indicator light may change or turn off, refer to specific model instructions for exact timing).
5. Turn the control knob to the 'Brew' position to start the espresso extraction.
6. Once the desired amount of espresso (up to 4 cups or 240 ml) is brewed, turn the control knob back to the 'OFF' position.

4.3 Making Cappuccino/Steaming Milk (Koblentz CKM-650 EIN)

1. After brewing espresso, ensure there is sufficient water in the reservoir.
2. Fill a metal frothing pitcher with cold milk (dairy or non-dairy) up to one-third full.
3. Turn the control knob to the 'Steam' position and wait for the steam wand to heat up.

4. Submerge the steam wand tip just below the surface of the milk. Turn the steam knob to release steam.
5. Move the pitcher up and down to create foam. Once desired foam and temperature are reached, turn off the steam knob.
6. Immediately wipe the steam wand with a damp cloth to prevent milk residue from drying.

5. MAINTENANCE AND CLEANING

5.1 Espresso Maker Cleaning (Koblenz CKM-650 EIN)

1. Always unplug the machine and allow it to cool completely before cleaning.
2. Remove the portafilter and discard used coffee grounds. Wash the portafilter and metal filter with warm, soapy water.
3. Empty and clean the drip tray and glass carafe after each use.
4. Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or pads.
5. The espresso maker components are **not dishwasher safe**.

5.2 Coffee Grinder Cleaning (Hamilton Beach 80350R)

1. Unplug the grinder before cleaning.
2. Remove the grinding chamber. It is designed to be easily detachable for cleaning.
3. Wash the removable grinding chamber with warm, soapy water. Rinse and dry thoroughly.
4. Wipe the base of the grinder with a damp cloth. Do not immerse the base in water.

5.3 Descaling (Espresso Maker)

Regular descaling is essential to maintain optimal performance and extend the life of your espresso machine. The frequency depends on water hardness and usage. Follow these general steps:

1. Prepare a descaling solution according to the descaler product instructions (usually a mix of water and descaling agent).
2. Fill the water reservoir with the descaling solution.
3. Place an empty container under the portafilter and steam wand.
4. Run half of the solution through the brewing head and half through the steam wand.
5. Let the machine sit for 15-20 minutes.
6. Run the remaining solution through the machine.
7. Rinse the reservoir and run several cycles of fresh water through the machine to remove any descaling residue.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Espresso machine not turning on	Not plugged in; power switch off; circuit breaker tripped.	Check power connection; ensure switch is ON; reset circuit breaker.

Problem	Possible Cause	Solution
No coffee brewing / Slow drip	Water reservoir empty; coffee too finely ground or tamped too hard; machine clogged.	Fill water reservoir; use coarser grind or lighter tamp; descale machine.
Weak espresso	Insufficient coffee grounds; coffee too coarsely ground.	Increase coffee amount; use finer grind.
No steam from wand	Machine not heated to steam temperature; steam wand clogged.	Wait for machine to reach steam temperature; clean steam wand thoroughly.
Grinder not operating	Not plugged in; lid not securely placed; grinding chamber not properly seated.	Check power connection; ensure lid is secure; reseal grinding chamber.

7. SPECIFICATIONS

Feature	Koblenz CKM-650 EIN Espresso Maker	Hamilton Beach 80350R Coffee Grinder
Brand	Koblenz	Hamilton Beach
Model Number	CKM-650 EIN	80350R
Capacity	4 cups (240 ml)	12 cups (ground coffee)
Power	800 Watts	Not specified (operates quietly)
Pressure (Espresso)	3.5 Bar	N/A
Material	Stainless Steel	Stainless Steel Blades
Color	Black with Stainless Steel	Silver
Dimensions (DxWxH)	36 x 25.5 x 25.5 cm	Not specified
Input Type	Ground Coffee	Whole Beans, Spices
Special Features	Milk Frother	Removable Grinding Chamber
Dishwasher Safe	No	Removable chamber is washable

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Koblenz and Hamilton Beach websites. Keep your proof of purchase for warranty claims. If you encounter any issues not covered in this manual, please contact customer service for assistance.