

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Huilefu](#) /

› [Huilefu 144W Dimmable Gold Plating 6-Ring LED Flush Mount Ceiling Light Instruction Manual \(Model: Huilefu-001\)](#)

Huilefu Huilefu-001

Huilefu 144W Dimmable Gold Plating 6-Ring LED Flush Mount Ceiling Light

Model: Huilefu-001

INTRODUCTION

This manual provides essential instructions for the safe installation, operation, and maintenance of your Huilefu 144W Dimmable Gold Plating 6-Ring LED Flush Mount Ceiling Light. Please read this manual thoroughly before installation and retain it for future reference.



Image: The Huilefu 6-Ring LED Flush Mount Ceiling Light, featuring a gold-plated finish and six illuminated rings, installed in a contemporary living room setting.

SAFETY INFORMATION

- Always turn off the power at the main circuit breaker before beginning installation.
- Consult a qualified electrician if you are unsure about the installation process.
- Ensure all electrical connections are secure and comply with local electrical codes.
- Do not attempt to modify the light fixture.
- Handle components with care to avoid damage.

PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- Ceiling Light Chassis
- LED Light Rings (6 units)
- Mounting Hardware (screws, nuts, wire connectors)
- Remote Control
- Instruction Manual



Image: Detailed view of the light fixture's components, highlighting the wrought iron ceiling plate, silicone lampshade, aluminum alloy lampshade, and brushed metal accents.

SPECIFICATIONS

Feature	Detail
Brand	Huilefu
Model Number	Huilefu-001
Product Dimensions	104 x 104 x 39 cm
Item Weight	4 Kilograms
Wattage	144 watts
Voltage	110 Volts (AC)
Lighting Method	LED
Number of Light Sources	6 Rings
Control Method	Remote

Installation Type	Flush Mount
Special Feature	Dimmable



Image: Product dimensions illustrating the overall width (104 cm), height (39 cm), and base diameter (20 cm) of the light fixture.

SETUP AND INSTALLATION

Follow these steps carefully to install your ceiling light. Professional installation is recommended if you are unfamiliar with electrical wiring.

1. Prepare the Light Rings:

Thread the wires from each light ring through the screw tubes. Cut any bundled thin ropes with scissors and slowly tighten the attached screw tube onto the lamp body.

2. Attach Rings to Chassis:

Insert the top of the screw tube through the chassis and secure it by tightening the nut from the inside. Ensure all nuts are tightly fastened.

3. Connect Terminals:

Connect the terminals from the light rings to the LED driver. Ensure all terminals are plugged in tightly to prevent loose connections.

4. Mount to Junction Box:

Install the crossbar to the ceiling junction box. Connect the household electrical wires to the light fixture's wires (live to live, neutral to neutral, ground to ground). Secure the light fixture to the crossbar.

Your browser does not support the video tag.

Video: This video demonstrates the assembly and installation process for a 6-ring LED ceiling light, including connecting the rings, securing them to the chassis, and mounting the fixture to the ceiling.

OPERATING INSTRUCTIONS

Your Huilefu ceiling light is controlled by a remote. The remote allows for brightness and color temperature adjustments.

- **Power On/Off:** Use the dedicated ON/OFF buttons on the remote.
- **Brightness Adjustment:** Use the 'Bright+' and 'Dark-' buttons to increase or decrease the light intensity.
- **Color Temperature Adjustment:** Use the 'Warm Light' and 'White Light' buttons to cycle through different color temperatures (e.g., warm white, neutral white, cool white).
- **Mode Selection:** Some remotes may offer preset modes like 'Night Mode' or specific color temperature settings. Refer to your remote's specific buttons.

Infinitely Dimmable

Suitable for Various Life Situations



Use the remote control, adjust the color temperature and brightness



Brightness
Adjustment



Color temperature
Adjustment



Warm light

Warm and romantic
Create atmosphere

Neutral light

Softness Natural
Daily Entertainment

White light

Bright and comfortable
Reading and studying

Image: Illustration of the remote control functions, demonstrating how to adjust brightness and switch between warm, neutral, and white light settings.

Your browser does not support the video tag.

Video: This video demonstrates the dimmable functions of a 6-ring LED ceiling light, showcasing changes in brightness and color temperature using a remote control.

MAINTENANCE

- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth to wipe the fixture. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** The LED light source is integrated and not user-replaceable. If the LEDs fail, contact customer support.
- **Inspection:** Periodically check for any loose connections or signs of damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on	No power, loose wiring, faulty remote.	Check circuit breaker. Verify wiring connections. Replace remote batteries.
Light flickers	Loose wiring, incompatible dimmer switch (if applicable).	Check wiring. Ensure dimmer switch is LED-compatible.
Remote not working	Dead batteries, remote out of range, interference.	Replace batteries. Ensure remote is within operating range. Remove obstructions.

WARRANTY AND SUPPORT

Warranty and specific support information for this product were not available in the provided data. Please refer to the product packaging or contact the retailer/manufacturer directly for details regarding warranty coverage and customer support services.