

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HOUSBAY](#) /

› [HOUSBAY Rainbow Alarm Clock User Manual](#)

HOUSBAY RS13 C

HOUSBAY Rainbow Alarm Clock User Manual

Model: RS13 C | Brand: HOUSBAY

INTRODUCTION

Welcome to the user manual for your HOUSBAY Rainbow Alarm Clock. This versatile alarm clock is designed to enhance your bedroom experience with its large, colorful display, customizable night light, and convenient features. It's perfect for users of all ages, from kids learning to tell time to teens needing a reliable wake-up, and adults seeking a functional and aesthetically pleasing clock.

PRODUCT OVERVIEW



The HOUSBAY Rainbow Alarm Clock features a sleek design with vibrant, rainbow-colored digital time display and an integrated night light.



7.5" Large Display

easy to read across room

Large 7.5" Display: Easy to read across the room, ensuring clear visibility of the time.

7 Colors Nightlight

 
change the color and 5 levels brightness of nightlight



7 Colors Nightlight: Offers a large night light with 7 selectable colors and 5 levels of brightness, providing ambient lighting or a fun color change option. The nightlight can also be completely turned off.

Full Range Dimmer

easily adjust from very bright to fully dark



Full Range Dimmer: Adjust the display brightness from very bright to fully dark, allowing for personalized comfort day or night.



Dual Alarm: Set two separate alarms to accommodate different schedules for multiple users or varying wake-up times.



Easy Snooze: A large, easy-to-reach snooze button on top provides an extra 9 minutes of sleep.

Outlet Powered & True Battery Backup

ensure the full functions run well when power failure



True Battery Backup: Powered by an AC outlet, with backup battery capability (3*AAA batteries, not included) to maintain time, display, night light, alarm, and timer functions during power outages.

PACKAGE CONTENTS

- 1 x HOUSBAY Rainbow Alarm Clock (Model: RS13 C)
- 1 x Power Adapter (AC 110V 50Hz)
- 1 x User Manual (this document)

CONTROLS AND DISPLAY

The HOUSBAY Rainbow Alarm Clock features an intuitive layout for easy operation. The large digital display shows the time clearly with vibrant, rainbow-colored digits.

Top Panel:

- **Snooze/Light Button:** A large button on the top surface. Press briefly to snooze an active alarm or to turn the night light on/off. Press and hold for 2 seconds to completely turn off the alarm.

Rear Panel:

- **Nightlight Brightness (+/-):** Buttons to adjust the brightness levels of the night light.
- **Time Button:** Used to enter time setting mode.
- **Alarm 1 Button:** Used to set and activate Alarm 1.
- **Alarm 2 Button:** Used to set and activate Alarm 2.
- **Nightlight Brightness (-):** Button to decrease the brightness of the night light.
- **Display Dimmer Slider:** A slider to adjust the brightness of the main time display from very bright to completely off.
- **Volume Slider:** A slider to adjust the alarm volume.
- **DC 5V Input:** Power input port for the included adapter.
- **Battery Compartment:** Located on the bottom, for 3*AAA backup batteries (not included).

SETUP

1. Power Connection:

Plug the provided power adapter into the DC 5V input port on the back of the alarm clock, then plug the adapter into a standard AC 110V 50Hz wall outlet. The display will light up.

2. Battery Backup (Optional):

For uninterrupted operation during power outages, open the battery compartment on the bottom of the clock and insert 3 AAA batteries (not included). Ensure correct polarity (+/-).

3. Initial Time Setting:

1. Press and hold the **Time** button on the rear panel until the hour digits begin to flash.
2. Use the **Nightlight Brightness +** or **-** buttons to adjust the hour.
3. Press the **Time** button again to move to minute setting. Use the **Nightlight Brightness +** or **-** buttons to adjust the minutes.
4. Press the **Time** button a third time to select 12-hour or 24-hour format. Use the **Nightlight Brightness +** or **-** buttons to toggle between "12H" and "24H".
5. Press the **Time** button one last time to confirm and exit time setting mode.

OPERATING INSTRUCTIONS

Setting Alarms (Alarm 1 & Alarm 2):

1. Press and hold the **Alarm 1** button (for Alarm 1) or **Alarm 2** button (for Alarm 2) on the rear panel until the hour digits begin to flash.
2. Use the **Nightlight Brightness +** or **-** buttons to adjust the alarm hour.
3. Press the respective **Alarm** button again to move to minute setting. Use the **Nightlight Brightness +** or **-** buttons to adjust the alarm minutes.
4. Press the respective **Alarm** button one last time to confirm and activate the alarm. An alarm icon will appear on the display.

Snooze Function:

When the alarm sounds, press the large **Snooze/Light** button on the top of the clock. The alarm will pause for 9 minutes and then sound again.

Turning Off Alarm:

To turn off an active alarm completely, press and hold the large **Snooze/Light** button on the top for 2 seconds. The alarm icon will disappear from the display.

Adjusting Display Brightness:

Use the **Display Dimmer** slider on the rear panel to adjust the brightness of the time digits. Slide it to the left for dimmer display or to the right for brighter display. You can set it to completely dark if desired.

Using the Night Light:

- Press the large **Snooze/Light** button on the top to cycle through the 7 available night light colors.
- Use the **Nightlight Brightness +** or **-** buttons on the rear panel to adjust the brightness of the night light (5 levels).
- Press and hold the **Snooze/Light** button on the top for 2 seconds to turn the night light off.

Adjusting Alarm Volume:

Use the **Volume** slider on the rear panel to adjust the loudness of the alarm sound. Slide it to the left for lower volume or to the right for higher volume.

MAINTENANCE

- Clean the clock surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the clock away from direct sunlight, excessive heat, or moisture.
- If using battery backup, replace batteries annually or when the display dims unexpectedly to ensure continuous operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is off or dim.	Power adapter unplugged; Display Dimmer set to minimum; Batteries drained (if using backup).	Ensure power adapter is securely plugged in. Adjust Display Dimmer slider. Replace backup batteries.
Alarm does not sound.	Alarm not activated; Alarm volume too low; Incorrect alarm time set.	Ensure alarm icon is visible on display. Adjust Volume slider. Verify alarm time is correctly set.
Night light is not working.	Night light turned off; Brightness set to minimum.	Press the Snooze/Light button to turn on. Increase Nightlight Brightness.
Time is incorrect after power outage.	No backup batteries or batteries are drained.	Insert fresh AAA batteries for backup. Reset time manually if needed.

SPECIFICATIONS

- **Brand:** HOUSBAY
- **Model:** RS13 C
- **Color:** Colorful
- **Display Type:** Digital
- **Power Source:** Corded Electric (Input: 100-240V, Power: DC 5V-1A)
- **Battery Backup:** 3 x AAA batteries (not included)
- **Product Dimensions:** 2.36"W x 2.75"H
- **Item Weight:** 11.3 ounces (0.71 Pounds)
- **Material:** Acrylonitrile Butadiene Styrene (ABS)
- **Special Features:** Snooze, Timer, Dual Alarm, Large Display, 7-Color Night Light, Dimmable Display
- **Country of Origin:** China
- **Date First Available:** October 26, 2022

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official HOUSBAY website. Keep your purchase receipt for warranty claims.

Related Documents - RS13 C

 <p>If a faulty product is found when setting up, please Email us at Support@kevec.com TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!</p>	<p>HOUSBAY Digital Alarm Clock User Manual</p> <p>User manual for the HOUSBAY Digital Alarm Clock (Model RS13), detailing features, setup, time and alarm settings, nightlight, display brightness, volume, timer functions, battery operation, and support information.</p>
 <p>If a faulty product is found when setting up, please Email us at Support@kevec.com TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!</p>	<p>HOUSBAY GLOW Digital Alarm Clock User Manual - Setup, Features, and Operation</p> <p>Comprehensive user manual for the HOUSBAY GLOW digital alarm clock. Learn how to set the time, alarms, use the FM radio, nightlight, sleep timer, nap timer, and understand its features and specifications.</p>
 <p>If a faulty product is found when setting up, please Email us at Support@kevec.com TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!</p>	<p>HOUSBAY TS3 Digital Alarm Clock User Manual</p> <p>Discover the HOUSBAY TS3 User Manual, your comprehensive guide to operating the HOUSBAY sound machine with alarm clock. Learn about its features including wireless charging, Bluetooth music streaming, 21 soothing sounds, 10 night light modes, and adjustable brightness. This manual provides detailed instructions for time setting, alarm setup, sound machine operation, and troubleshooting, ensuring optimal use of your HOUSBAY device.</p>
 <p>If a faulty product is found when setting up, please Email us at Support@kevec.com TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!</p>	<p>HOUSBAY TS9 White Noise Machine with Alarm Clock User Manual</p> <p>User manual for the HOUSBAY TS9 White Noise Machine with Alarm Clock, detailing features, setup, operation, and safety precautions.</p>
 <p>If a faulty product is found when setting up, please Email us at Support@kevec.com TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!</p>	<p>HOUSBAY RS10 Sound Machine with Alarm Clock User Manual</p> <p>Comprehensive user manual for the HOUSBAY RS10 Sound Machine with Alarm Clock, detailing features, setup, operation, and troubleshooting. Learn how to set the time, alarm, use sound machine functions, and more.</p>
 <p>If a faulty product is found when setting up, please Email us at Support@kevec.com TIPS: The clock works and lasts a few hours if its battery powered ONLY, please keep it plugged in always!</p>	<p>HOUSBAY KW244 Magnetic Sleep Charger Quick Start Guide</p> <p>A quick start guide for the HOUSBAY KW244 Magnetic Sleep Charger, detailing its features as a wireless charger and sound machine, and providing setup instructions.</p>