

IAGREEA TDQR05

IAGREEA Baby Bottle Washer User Manual

Model: TDQR05

INTRODUCTION

Thank you for choosing the IAGREEA Baby Bottle Washer. This compact and versatile appliance is designed to simplify your dishwashing routine, especially for baby bottles, and can also be used for washing fruits and vegetables. Its innovative design allows for both built-in water tank operation and direct faucet connection, offering flexibility for various living spaces.

Please read this manual thoroughly before operating the appliance to ensure safe and efficient use. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following basic precautions:

- Read all instructions before using the appliance.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Supervise children closely when the appliance is in use.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only detergents specifically designed for automatic dishwashers.
- Ensure proper ventilation during operation, especially with high-temperature steam.
- Do not cover or block the air outlet on the right side of the dishwasher.

PRODUCT OVERVIEW

The IAGREEA Baby Bottle Washer is a compact countertop appliance designed for efficient cleaning. It features a user-friendly touch panel and multiple wash programs.

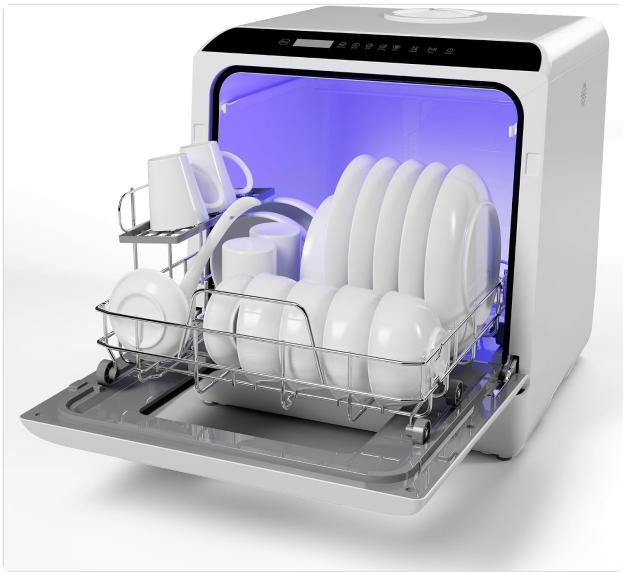


Figure 1: Front view of the IAGREEA Baby Bottle Washer with the door open, revealing a rack filled with various dishes and bottles ready for washing.

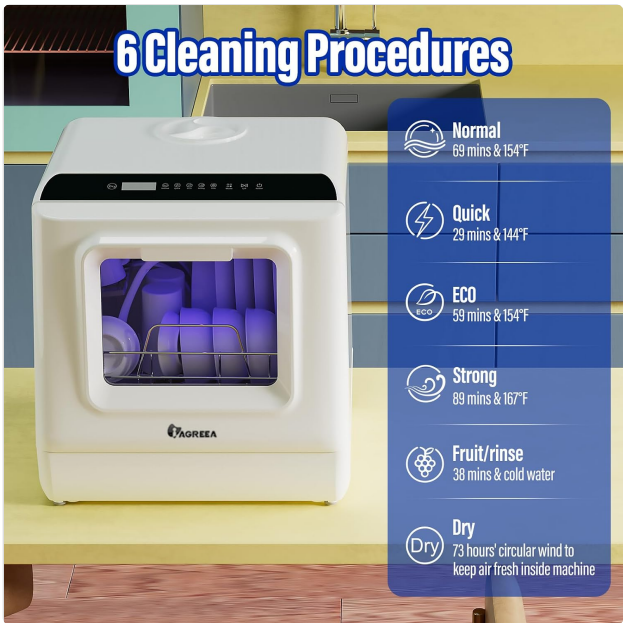


Figure 2: Display illustrating the six available cleaning programs: Normal, Quick, ECO, Strong, Fruit/Rinse, and Dry, along with their respective durations and temperatures.



Figure 3: Interior view of the dishwasher during operation, highlighting the 360-degree rotating nozzles spraying water for comprehensive cleaning.



Figure 4: Diagram showing the 73-hour circulation ventilation drying system, designed to keep dishes dry and prevent bacterial growth.

SETUP AND INSTALLATION

The IAGREEA Baby Bottle Washer offers two convenient water supply options: a built-in water tank or direct faucet connection.

1. Unpacking

- Carefully remove the dishwasher from its packaging.
- Check for any damage during transit. If damaged, contact customer support immediately.

- Ensure all included accessories are present: Dishwasher, Inlet Hose.

2. Placement

Place the dishwasher on a stable, level surface, such as a countertop. Ensure there is adequate space around the unit for ventilation and operation. The compact dimensions are approximately 16.7"D x 16.9"W x 18"H.



Figure 5: Visual representation of the compact dimensions of the IAGREEA Baby Bottle Washer, highlighting its suitability for various countertop spaces.

3. Water Supply Options

Water tank mode and fauect mode

Easy to install anywhere in your kitchen without the need to modify your water pipe system



Figure 6: Illustration of the two water supply methods: manually filling the built-in 5L water tank from the top, and connecting the inlet hose to a faucet for direct water supply.

a. Built-in 5L Water Tank (No Hookup Needed)

- Open the water tank cover on the top of the appliance.
- Pour clean water into the tank using a pitcher or similar container until the water level indicator shows full, or until you hear a chime indicating it's full. The capacity is 5 liters.
- Close the water tank cover securely.

b. Direct Faucet Connection

- Connect the provided inlet hose to the water inlet port on the back of the dishwasher.
- Connect the other end of the inlet hose to a standard faucet (1/2 inch elbow size).
- Ensure all connections are tight to prevent leaks.
- Open the faucet to supply water to the dishwasher.

4. Drain Hose Setup

- Connect the effluent hose to the drain outlet on the back of the dishwasher.
- Place the other end of the effluent hose into a sink or a bucket for drainage. Ensure the hose is securely positioned to prevent accidental spills.

OPERATING INSTRUCTIONS

1. Loading Dishes

- Scrape off large food particles from dishes before loading.
- Place dishes, bottles, and cutlery into the racks, ensuring they do not block the spray arms.
- The dishwasher can accommodate: 4 dinner plates, 4 small plates, 4 cups, 4 serving bowls, 2 glasses, 7 forks, 7 knives, and 7 spoons.



Figure 7: Guide on how to effectively load various types of cutlery and dishes into the dishwasher to maximize capacity and ensure thorough cleaning.

2. Adding Detergent

- Use only automatic dishwasher detergent. Do not use washing-up liquid.
- Place one detergent pod or the recommended amount of powder/gel into the detergent dispenser.

3. Selecting a Program

The dishwasher features 6 cleaning programs:

Program	Duration	Temperature	Description
Normal	69 mins	154°F (68°C)	Standard wash for daily dishes.
Quick	29 mins	144°F (62°C)	Fast wash for lightly soiled dishes.
ECO	59 mins	154°F (68°C)	Energy-efficient wash.
Strong	89 mins	167°F (75°C)	Intensive wash for heavily soiled items and sterilization.
Fruit/Rinse	38 mins	Cold Water	Gentle wash for fruits and vegetables, or a quick rinse cycle.
DRY	73 hours	Circulation Ventilation	Extended drying and ventilation to keep dishes fresh.

Use the touch panel to select your desired program. Press the "Mode" button to cycle through options, then press "Power" or "Start" to begin.



Figure 8: Detailed view of the modern control panel with touch buttons for program selection (Normal, Quick, ECO, Strong, Fruit) and power.

4. Starting the Cycle

- Close the dishwasher door firmly.
- Press the "Power" button to start the selected program.
- The machine will automatically run until the washing cycle is complete.

5. Extra Dry Function

The appliance features a hot air drying mode that runs for 1 hour after the wash cycle. Additionally, automatic ventilation keeps your dishes clean, dry, and ready to use for up to 72 hours.



Figure 9: Visual representation of the 73-hour circulation ventilation drying feature, ensuring dishes remain dry and hygienic.

CARE AND MAINTENANCE

1. Cleaning the Filter

Regularly clean the detachable filter to maintain optimal washing performance.

- Locate the filter at the bottom of the dishwasher tub.
- Twist and lift the filter assembly to remove it.
- Rinse the filter under running water to remove any trapped food particles. Use a brush if necessary.
- Reinsert the filter assembly and twist to lock it in place.

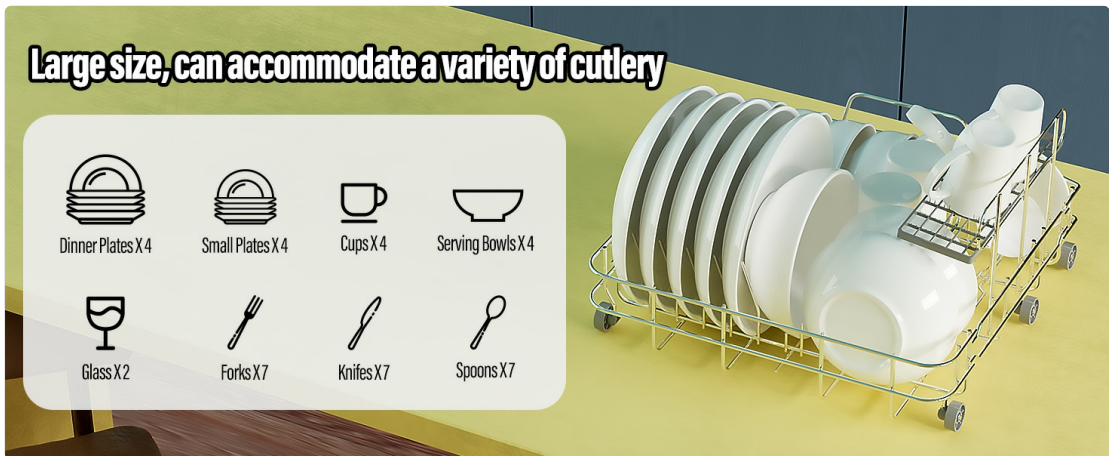


Figure 10: Image demonstrating the easy removal and cleaning of the detachable filter, crucial for maintaining dishwasher performance.

2. Cleaning the Interior

- Wipe down the interior surfaces with a damp cloth periodically.
- For stubborn stains or odors, run an empty cycle with a dishwasher cleaner.

3. Exterior Cleaning

- Clean the exterior with a soft, damp cloth. Avoid abrasive cleaners.

4. Anti-Leakage Design

The IAGREEA Baby Bottle Washer is designed with internal sealing strips on the door to prevent water leakage. Ensure these seals are clean and free from debris for optimal performance.

Troubleshooting

Problem	Possible Cause	Solution
Dishwasher not starting	Not plugged in; Door not closed properly; No water supply.	Ensure power cord is securely plugged in; Close door firmly until it latches; Check water tank level or faucet connection.
Dishes not clean	Improper loading; Clogged spray arms; Insufficient detergent; Incorrect program selected.	Rearrange dishes to allow water circulation; Clean spray arm nozzles; Use recommended amount of detergent; Select a stronger wash program.
Water leakage	Improper hose connection; Damaged door seal; Overfilling water tank.	Check inlet and effluent hose connections for tightness; Inspect door seal for damage and clean if necessary; Do not overfill the water tank.
Unusual noise	Dishes interfering with spray arms; Foreign object in pump.	Adjust dish placement; Check and remove any foreign objects from the filter area.
Drying not effective	Dishes loaded too tightly; Air outlet blocked.	Ensure proper spacing between dishes; Do not cover the air outlet on the right side of the dishwasher.

Product Specifications

Brand	IAGREEA
Model Name	TDQR05
Product Dimensions	16.7"D x 16.9"W x 18"H (42.4 x 42.9 x 45.7 cm)
Item Weight	31.8 Pounds (14.4 kg)
Capacity	5 Liters (Water Tank)
Voltage	120 Volts
Operating Frequency	60 Hz
Noise Level	49 dB
Number of Settings/Programs	6 (Normal, Quick, ECO, Strong, Fruit/Rinse, DRY)
Wash Arms	2 (Upper and Lower 360° Rotating Nozzle)
Control Type	Touch Panel
Material	Plastic (Inner and Outer)
Included Components	Dishwasher, Inlet Hose

WARRANTY AND SUPPORT

IAGREEA is committed to providing high-quality products and customer satisfaction. If you encounter any issues with your Baby Bottle Washer, please refer to the following:

Warranty Information

Specific warranty details are typically provided with your product packaging or can be found on the official IAGREEA website. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, technical assistance, or replacement service for damaged or missing accessories, please contact IAGREEA customer support. Refer to the contact information provided in your product packaging or on the official IAGREEA website.



Figure 11: IAGREEA's commitment to customer satisfaction, offering replacement service for damaged or missing accessories upon contact.

© 2024 IAGREEA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question