

[manuals.plus](#) /

› [Arteck](#) /
› [Arteck MD172 Multi-Device Wireless Bluetooth Mouse User Manual](#)

Arteck MD172

Arteck MD172 Multi-Device Wireless Bluetooth Mouse

USER INSTRUCTION MANUAL

1. Product Overview

The Arteck MD172 is a multi-device wireless mouse designed for comfort and versatility. It supports connections via 2.4G USB-A, 2.4G USB-C, and Bluetooth, allowing seamless switching between up to three devices. Its ergonomic design, silent clicking, and adjustable DPI settings enhance user experience across various operating systems and devices.



Image: The Arteck MD172 mouse, showcasing its ergonomic shape and the included USB-A and USB-C receivers.

2. What's in the Box

- Arteck MD172 Wireless Mouse
- One Nano USB-A Receiver
- One Nano USB-C Receiver
- USB-C Charging Cable
- Welcome Guide

The USB-A and USB-C nano receivers are conveniently stored in the back compartment of the mouse.

3. Setup Instructions

3.1 Charging the Mouse

Before initial use, fully charge the mouse using the provided USB-C charging cable. Connect the USB-C end to the mouse's charging port (located at the front) and the USB-A end to a power source (e.g., computer USB port, USB wall adapter). The LED indicator will show charging status.

Long Battery Life

Use for 4 months per charge, based on 2 hours per day



Image: The Arteck MD172 mouse being charged via its USB-C port, highlighting its extended battery life.

3.2 Connecting to Devices

The Arteck MD172 mouse can connect to up to three devices simultaneously using different connection methods. The connection channels are indicated by LEDs on the side of the mouse.

1. 2.4G Wireless Connection (USB-A or USB-C Receiver):

- Retrieve the desired USB-A or USB-C nano receiver from the mouse's bottom compartment.
- Plug the receiver into an available USB port on your computer or device.
- Turn on the mouse using the power switch on the bottom.
- Press the channel switch button (located on the bottom or side) to select the 2.4G wireless channel (usually indicated by a green LED). The mouse should connect automatically.

2. Bluetooth Connection:

- Turn on the mouse using the power switch on the bottom.
- Press the channel switch button to select a Bluetooth channel (usually indicated by a blue LED).
- **For first-time pairing:** Press and hold the channel switch button for 3-5 seconds until the Bluetooth LED starts blinking rapidly. This indicates pairing mode.
- On your device (computer, laptop, tablet, etc.), go to Bluetooth settings and search for new devices.
- Select "Arteck Mouse" or a similar name from the list of available devices to pair.
- Once paired, the Bluetooth LED will stop blinking and remain solid.

Connecting to 3 Devices At The Same Time

USB-A and USB-C adaptor included and Bluetooth Compatible



USB Plug and Play



USB-C Plug and Play



Bluetooth Mouse



Ergonomic Design



Windows



Mac / iPad / iOS



Android



Rechargeable



Small Hands



Medium Hands



Large Hands



Image: Visual representation of the mouse's ability to connect to a desktop (USB-A), laptop (USB-C), and tablet (Bluetooth) concurrently.

3.3 Switching Between Devices

After pairing with multiple devices, you can switch between them by simply pressing the channel switch button on the mouse. Each press will cycle through the connected channels (2.4G USB-A, 2.4G USB-C, Bluetooth 1, Bluetooth 2, etc., depending on how many Bluetooth channels are supported and used).

4. Operating Instructions

4.1 Ergonomic Design

The Artec MD172 mouse features an ergonomic design with a soft, easy-to-grip thumb rest. This design promotes a natural hand and wrist position, reducing strain during extended use. It is designed for medium to large hands.

USB Wireless Bluetooth Mouse

Suitable for Various Environments



Image: Illustration demonstrating the natural, comfortable hand and wrist position achieved with the ergonomic Arteck mouse compared to a standard mouse.

4.2 DPI Adjustment

The mouse includes a DPI switch button, typically located behind the scroll wheel. Pressing this button allows you to cycle through different DPI (Dots Per Inch) sensitivity levels, adjusting the cursor speed to your preference. The available DPI settings are 800, 1200, 1600, 2000, and 2400 DPI.

4.3 Silent Clicking

The Arteck MD172 features silent clicking buttons, minimizing noise during use. This is beneficial for quiet environments such as offices, libraries, or shared workspaces.

Ergonomic Design, Changeable DPI, Silent Clicking



Ergonomic Design

Reduce Stress and Use More Comfortably

5 Level DPI

Switch the DPI Between 800/1200/1600/2000/2400 DPI

Quiet Click

Silent Clicking Free Your Worry About Bothering Others

Image: Close-up views of the Arteck MD172 mouse, illustrating its ergonomic contours, the DPI adjustment button, and the silent click functionality.

4.4 Side Buttons

Two side buttons are located near the thumb rest. These buttons typically function as 'Page Forward' and 'Page Backward' in web browsers and file explorers, enhancing navigation efficiency.

4.5 Auto-Sleep Function

To conserve battery life, the mouse will automatically enter a sleep mode after a period of inactivity. To wake the mouse, simply click any button or move it.

5. Maintenance

5.1 Cleaning

To clean the mouse, gently wipe its surface with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the finish. Ensure no liquid enters the mouse's internal components.

5.2 Battery Care

The Arteck MD172 features a built-in rechargeable Li-polymer battery. To maximize battery lifespan:

- Avoid fully discharging the battery frequently.

- Charge the mouse when the battery indicator is low.
- If storing the mouse for an extended period, charge it to approximately 50% before storage.
- The battery provides approximately 4 months of use on a single charge, based on 2 hours of non-stop use per day.

6. Troubleshooting

If you encounter issues with your Arteck MD172 mouse, please refer to the following common solutions:

- **Mouse not responding:**

- Ensure the mouse is powered on.
- Check the battery level and charge if necessary.
- Verify that the correct connection channel (2.4G or Bluetooth) is selected on the mouse.
- For 2.4G connections, ensure the USB receiver is securely plugged into the device. Try a different USB port.
- For Bluetooth connections, ensure Bluetooth is enabled on your device and the mouse is paired correctly. Try re-pairing the mouse.

- **Intermittent connection or lag:**

- Move the mouse closer to the receiver or Bluetooth-enabled device.
- Avoid using the mouse on highly reflective or uneven surfaces. A mouse pad is recommended.
- Minimize interference from other wireless devices operating on the same frequency.

- **Cursor movement is erratic:**

- Clean the optical sensor on the bottom of the mouse.
- Adjust the DPI setting to a lower sensitivity if the cursor is too fast.

If these steps do not resolve the issue, please contact Arteck customer service for further assistance.

7. Specifications

Feature	Detail
Model Number	MD172
Product Dimensions	4.9 x 3.3 x 0.04 inches (12.5 x 8.4 x 0.1 cm)
Item Weight	7.4 ounces (209.8 g)
Connectivity Technology	Bluetooth, 2.4G USB-A Wireless, 2.4G USB-C Wireless
Movement Detection	Optical
DPI Levels	800, 1200, 1600, 2000, 2400
Battery Type	Rechargeable Li-polymer
Color	Black



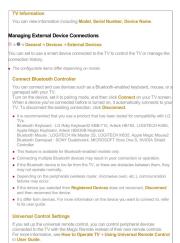
Weight: 122.8 g / 4.3 oz

Image: The Artech MD172 mouse displayed with its physical dimensions and weight for reference.

8. Warranty and Support

Arteck provides a **24-month warranty** for the MD172 Wireless Mouse from the date of purchase. This warranty covers manufacturing defects and ensures product quality.

For technical support, warranty claims, or any product-related inquiries, please contact Arteck customer service through the official Arteck website or your retailer's support channels. Please have your purchase receipt and product model number (MD172) available when contacting support.

	<p>Arteck HW192 Wireless Keyboard User Manual</p> <p>User manual for the Arteck HW192 Wireless Keyboard, detailing product specifications, setup, function keys, battery management, troubleshooting, and warranty information.</p>
	<p>Arteck MW167 Wireless Mouse User Manual - Setup and Guide</p> <p>Comprehensive user manual for the Arteck MW167 Wireless Mouse. Learn about product specifications, getting started, pairing, charging, DPI settings, troubleshooting, and warranty information.</p>
	<p>Arteck HW192 Wireless Keyboard User Manual</p> <p>Comprehensive user manual for the Arteck HW192 Wireless Keyboard, covering product specifications, setup, function keys, battery charging, pairing, troubleshooting, and warranty information.</p>
	<p>Arteck HB086 Bluetooth Keyboard User Manual</p> <p>User manual for the Arteck HB086 Bluetooth Keyboard, covering product overview, function keys, pairing instructions, charging, troubleshooting, and warranty information.</p>
	<p>Arteck HB030B Bluetooth Keyboard User Manual</p> <p>Comprehensive user manual for the Arteck HB030B Bluetooth Keyboard, covering setup, features, troubleshooting, and specifications. Learn how to connect and use your wireless keyboard.</p>
	<p>Managing External Device Connections for LG TVs</p> <p>Learn how to connect and manage external devices like Bluetooth keyboards, mice, and gamepads with your LG TV, including universal control settings.</p>