

[Manuals.plus](#) /

> [Mixpresso](#) /

> Mixpresso Electric Kettle Temperature Control Instruction Manual

Mixpresso ETK-ST304SS/TEM

Mixpresso Electric Kettle Instruction Manual

Model: ETK-ST304SS/TEM

PRODUCT OVERVIEW

The Mixpresso Electric Kettle is a versatile and efficient appliance designed for rapid water heating with precise temperature control. Crafted from food-grade stainless steel, it ensures pure water for your beverages, free from plastic contact during boiling. Its cordless design and intuitive controls make it a convenient addition to any kitchen.



Image: Mixpresso Electric Kettle, showcasing its sleek stainless steel design and a cup of freshly brewed tea.

IMPORTANT SAFETY PRECAUTIONS

Read all instructions carefully before using the appliance to prevent injury or damage.

- Do not immerse the kettle, power base, or cord in water or other liquids.
- Ensure the kettle is placed on a firm, flat, heat-resistant surface, away from the edge of the countertop.
- Do not operate the kettle if the cord or plug is damaged, or if the appliance malfunctions.
- Always ensure the lid is securely closed during operation to prevent hot water from splashing.
- Avoid touching hot surfaces. Always use the handle or knobs. Steam released during boiling is also hot.
- Unplug the kettle from the outlet when not in use and before cleaning.
- This appliance is designed for household use only.
- The kettle features boil-dry protection and automatic shut-off for enhanced safety.

PRODUCT COMPONENTS

Your Mixpresso Electric Kettle is designed for ease of use and durability. Familiarize yourself with its main parts:



Image: Exploded view of the Mixpresso Electric Kettle, highlighting its key components including the snap-on lid, premium stainless steel body, cool-touch handle with LED display, and 360-degree rotary power cordless base.

- **Kettle Body:** Made from eco-friendly food-grade stainless steel with a shiny mirror finish.
- **Snap-On Lid:** Provides a secure seal during boiling.
- **Handle with Digital Display:** Features temperature controls (+/- buttons), a Keep Warm button, and a power button. The LED display shows the current water temperature.
- **Water Level Indicator:** A clear window on the side to easily monitor water levels.
- **360-Degree Rotary Power Cordless Base:** Allows for easy lifting and placing of the kettle from any angle.

SETUP

Follow these steps for the initial setup of your new kettle:

1. Unpack all components and remove any packaging materials.
2. Wipe the exterior of the kettle and the power base with a soft, damp cloth.
3. For first use, fill the kettle with water to the MAX line (1 Liter), boil, and then discard the water. Repeat this process 2-3 times to remove any manufacturing residues or odors.
4. Place the power base on a stable, flat, and dry surface.
5. Ensure the power cord is securely plugged into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Mixpresso Electric Kettle offers precise temperature control for various hot beverages.

Filling the Kettle

- Remove the kettle from its power base.
- Open the snap-on lid.
- Fill the kettle with fresh, cold water. Do not fill below the MIN (0.5L) line or above the MAX (1.0L) line.
- Close the lid securely.
- Place the kettle back onto the power base.

Boiling Water (212°F / 100°C)

1. After filling, press the power button () on the handle.
2. The LED indicator will illuminate blue when idle, and red when heating.
3. The kettle will automatically shut off once the water reaches boiling temperature (212°F / 100°C), and the LED will turn blue.

Temperature Control Settings

Customize your water temperature from 104°F to 212°F for optimal brewing of different beverages.



Image: Digital display on the kettle handle showing various temperature presets for different beverages like delicate tea, green tea, oolong tea, coffee, and black tea.

1. After filling the kettle, use the temperature adjustment buttons (+ and -) on the handle to select your desired temperature. The digital display will show the chosen temperature.
2. Press the power button () to begin heating. The LED will turn red.
3. The kettle will stop heating once the set temperature is reached, and the LED will turn blue.

Keep Warm Function

To maintain the heated water at your desired temperature for up to 30 minutes:

1. After setting your desired temperature and starting the heating process, press the "Keep Warm" button (indicated by steam waves **SSS**).
2. The kettle will heat the water to the set temperature and then maintain it for 30 minutes.



Image: A hand pouring hot water from the Mixpresso Electric Kettle, demonstrating its variable temperature control and comfortable handle.

Official Product Video: Operation Overview

Your browser does not support the video tag.

Video: An official product video from Mixpresso coffee demonstrating the features and operation of the Mixpresso Temperature Electric Kettle, including filling, setting temperature, and pouring.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and longevity of your kettle.

- Always unplug the kettle from the power outlet and allow it to cool completely before cleaning.
- The exterior of the kettle can be wiped with a soft, damp cloth. Do not use abrasive cleaners or scouring pads, as this may damage the stainless steel finish.
- The interior of the kettle should be hand washed. Do not immerse the kettle body in water.
- For descaling (removing mineral deposits), fill the kettle with a mixture of equal parts water and white vinegar. Let it sit for at least 30 minutes, or boil the mixture for stubborn deposits. Rinse thoroughly with fresh water several times after descaling.

TROUBLESHOOTING

If you encounter any issues with your Mixpresso Electric Kettle, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Kettle does not turn on	Not plugged in; no power; kettle not properly seated on base	Check power connection; ensure kettle is correctly placed on base
Water not heating	Boil-dry protection activated; insufficient water	Add water; allow kettle to cool before restarting
Automatic shut-off not working	Kettle is overfilled	Do not fill above the MAX line
Mineral deposits inside	Hard water buildup	Descale regularly using vinegar solution (see Maintenance)

PRODUCT SPECIFICATIONS

Detailed technical specifications for your Mixpresso Electric Kettle.



Image: Diagram showing the approximate dimensions of the Mixpresso Electric Kettle: 7.5 inches length, 5.7 inches width, and 9 inches height.

Feature	Detail
Brand	Mixpresso
Model Name	Temperature Control Electric Kettle
Model Number	ETK-ST304SS/TEM

Feature	Detail
Capacity	1 Liter
Material	Food-grade Stainless Steel
Power	1000 Watts
Temperature Range	104°F to 212°F
Special Features	Keep Warm, Auto-Shutoff, Boil-Dry Protection, LED Indicator, Cordless Base
Product Dimensions	7.5"L x 5.7"W x 9"H
Item Weight	1.9 pounds

WARRANTY AND SUPPORT

The Mixpresso Electric Kettle is covered by a 1-year warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal household use.

For warranty claims, technical support, or any inquiries, please contact Mixpresso customer support via their official website or the contact information provided with your purchase. Please have your model number (ETK-ST304SS/TEM) and proof of purchase ready.

Visit the official Mixpresso Store for more products and support: [Mixpresso Store on Amazon](#)