

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TecTake](#) /

› [TecTake Flint 120 Industrial Dark Wood Desk Instruction Manual](#)

TecTake Flint 120

TecTake Flint 120 Industrial Dark Wood Desk

Model: Flint 120 (404465)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your TecTake Flint 120 Industrial Dark Wood Desk. Please read all instructions carefully before beginning assembly and retain this manual for future reference.

SAFETY INFORMATION

Important Safety Precautions:

- Do not exceed the recommended weight limit of 75 kilograms (165 lbs) on the desktop. Overloading can cause structural damage or instability.
- Ensure all screws and fasteners are securely tightened during assembly and periodically check for tightness to maintain stability.
- Adjust the leveling feet to ensure the desk is stable on uneven surfaces. An unstable desk can pose a tipping hazard.
- Handle all wood components with care to prevent scratches or damage during assembly.
- Keep small parts away from children during assembly to prevent choking hazards.
- This product does not contain electrical components or pressure points requiring special safety considerations beyond standard furniture assembly.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Desktop Panel (1)
- Steel Frame Legs (2)
- Crossbars/Support Beams (as required by design)
- Adjustable Leveling Feet (4)
- Assembly Hardware (screws, Allen key, etc.)
- Instruction Manual (this document)

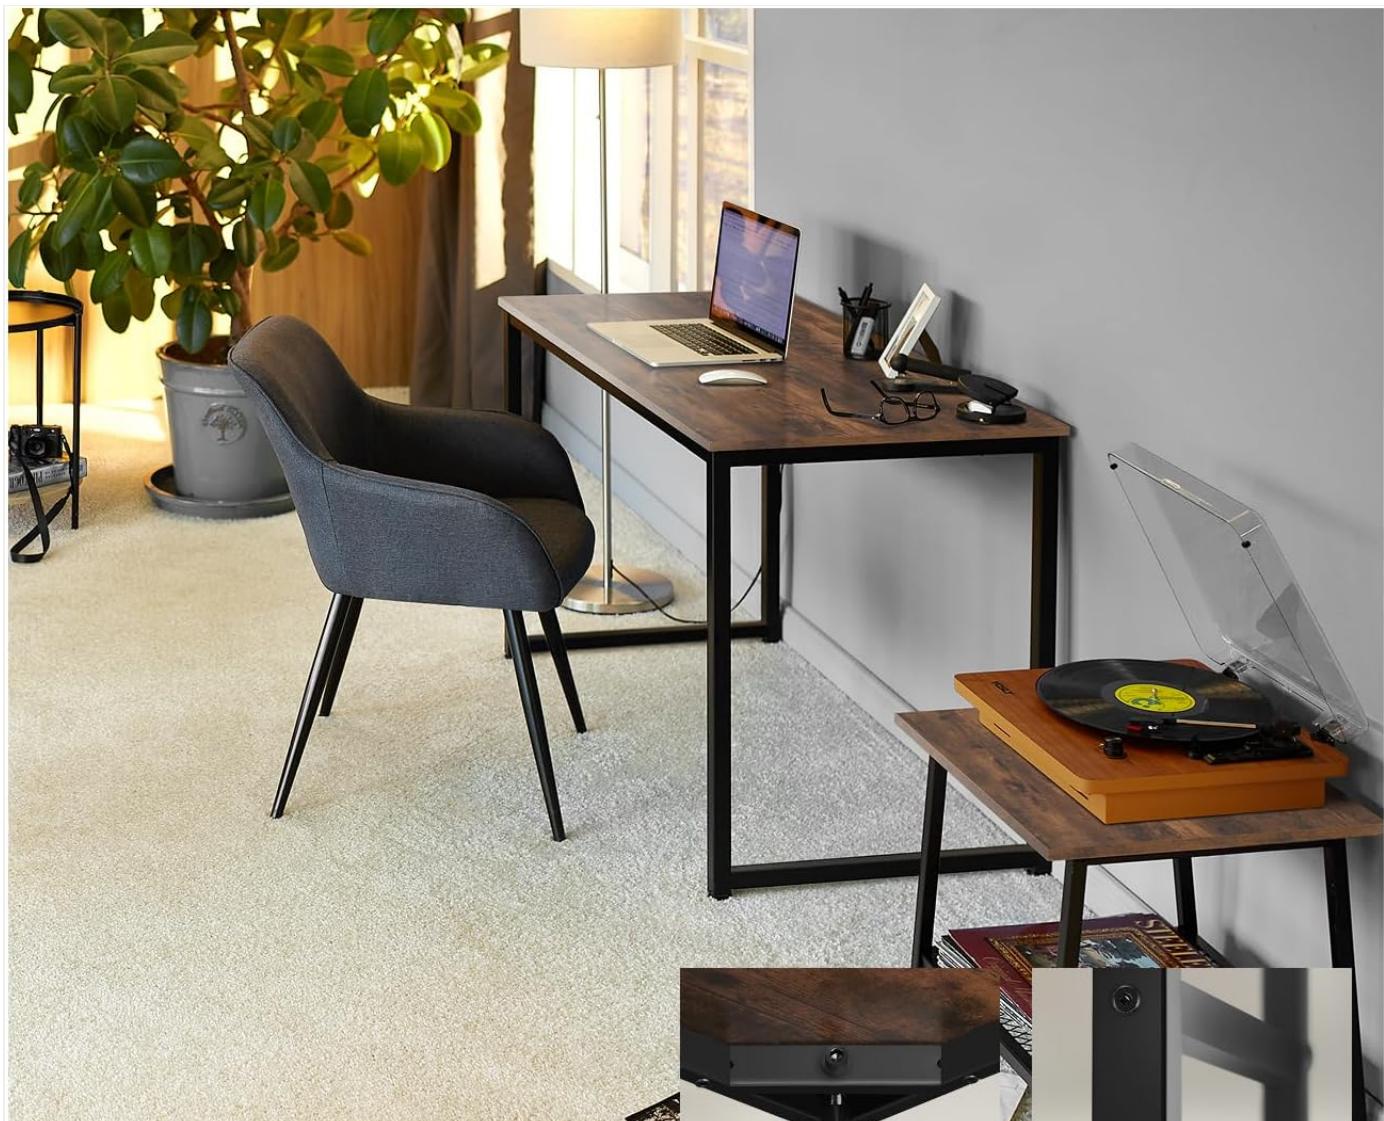


Image: Product details including dimensions, technical data (load capacity 75 kg, approx. weight 14.5 kg, tabletop material, steel structure), and package contents (desk, assembly material, assembly instructions).

SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your desk. It is recommended to assemble the desk on a soft, clean surface to prevent scratches.

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Check against the package contents list.
- 2. Attach Leveling Feet:** Screw the four adjustable leveling feet into the bottom of the steel frame legs. Do not overtighten.
- 3. Assemble Steel Frame:** Connect the two steel frame legs using the provided crossbars/support beams. Secure them with the designated screws and the Allen key. Ensure all connections are firm but do not fully tighten yet.
- 4. Attach Desktop:** Place the desktop panel upside down on a soft surface. Carefully align the assembled steel frame with the pre-drilled holes on the underside of the desktop. Secure the desktop to the frame using the provided screws.
- 5. Final Tightening:** Once all components are loosely assembled, gently flip the desk upright. On a level surface, tighten all screws securely. Avoid overtightening to prevent damage to the wood or stripping screw threads.
- 6. Adjust Leveling Feet:** Adjust the leveling feet by turning them clockwise or counter-clockwise until the desk is stable and does not wobble.



UNA MESA PARA cualquier ocasión



Más capacidad de carga
gracias a su estructura



Patas estables
con pies atornillados

Image: Detail of the desk's underside, illustrating the connection between the steel frame and the wooden tabletop, along with the adjustable leveling feet for stability.

OPERATING INSTRUCTIONS

Your TecTake Flint 120 desk is designed for versatile use in various environments. It functions as a stable surface for work, study, or computer use.

- **Placement:** Position the desk on a flat, stable surface. Use the adjustable feet to compensate for minor unevenness in the floor.
- **Weight Distribution:** Distribute weight evenly across the desktop. Avoid placing heavy items exclusively on one side or corner.
- **Ergonomics:** Adjust your chair height and monitor position to maintain an ergonomic posture while using the desk.
- **Cable Management:** While the desk does not include integrated cable management, consider using external cable clips or ties to keep your workspace tidy.

MEDIDAS

Medidas totales

120 x 59 x 76,5 cm

Distancia entre el marco superior y la base

72 cm

Grosor del tablero aglomerado

1,5 cm

Estructura de acero

3 x 3 cm

Las medidas son aproximadas

DATOS TÉCNICOS

Capacidad de carga

75 kg

Peso aprox.

14,5 kg

Material tablero de aglomerado
revestido de melamina, acero con
revestimiento en polvo, polietileno

CONTENIDO

Escritorio

Material de montaje

Instrucciones de montaje



Image: The TecTake Flint 120 desk in use, showcasing its ample surface for a laptop, lamp, and other office essentials, highlighting its functional design.

MAINTENANCE

Proper care will extend the life and appearance of your desk.

- Cleaning:** Wipe the desktop and steel frame with a soft, damp cloth. For stubborn marks, use a mild, non-abrasive cleaner. Dry immediately with a clean cloth.
- Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong chemical agents, as these can damage the melamine coating and steel finish.
- Protect Surface:** Use coasters for drinks and placemats for hot items to prevent water rings or heat damage.
- Sunlight Exposure:** Avoid prolonged direct sunlight exposure, which can cause fading or discoloration of the wood finish.
- Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

TROUBLESHOOTING

If you encounter issues with your desk, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Desk wobbles or is unstable.	Uneven floor surface; loose screws; leveling feet not adjusted.	Adjust the leveling feet until the desk is stable. Check and tighten all assembly screws. Ensure the desk is on a flat surface.
Parts do not fit together during assembly.	Incorrect orientation of parts; manufacturing defect.	Review the assembly instructions and diagrams to ensure parts are oriented correctly. If parts are still not fitting, contact customer support.
Scratches or damage on the surface.	Improper handling during assembly or use; sharp objects.	Minor scratches may be touched up with furniture repair pens. For significant damage, contact customer support for advice. Prevent future damage by using protective mats.

SPECIFICATIONS

Detailed specifications for the TecTake Flint 120 Industrial Dark Wood Desk:

- **Model:** Flint 120 (404465)
- **Brand:** TecTake
- **Color:** Industrial Dark
- **Overall Dimensions (L x W x H):** 120 cm x 59 cm x 76.5 cm (approximately 47.2 x 23.2 x 30.1 inches)
- **Desktop Thickness:** 1.5 cm (approximately 0.6 inches)
- **Distance between top frame and base:** 72 cm (approximately 28.3 inches)
- **Steel Structure Dimensions:** 3 cm x 3 cm (approximately 1.2 x 1.2 inches)
- **Weight:** Approximately 14.7 kg (32.4 lbs)
- **Maximum Load Capacity:** 75 kg (165 lbs)
- **Materials:** Steel frame, Wood particle board with melamine coating
- **Special Features:** Adjustable leveling feet
- **Design:** Rectangular, Industrial Style



LO QUE NECESITAS EN
tu lugar de trabajo

Image: An angled view of the TecTake Flint 120 desk, emphasizing its minimalist industrial design and sturdy construction.

WARRANTY INFORMATION

TecTake products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your purchase or visit the official TecTake website. Typically, products are covered against manufacturing defects for a period specified by local consumer protection laws.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact TecTake customer support. Contact information can typically be found on the packaging, the official TecTake website, or through your retailer.

For online support, visit: [TecTake Contact Page](#)

© 2023 TecTake. All rights reserved.