

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Finger Dance](#) /

› [Finger Dance 61 Key Keyboard with Lighted Keys, Folding Piano, Semi Weighted Keys Portable Piano, Bluetooth & MIDI, Foldable Keyboard Piano for Beginner - Lighted Black](#)

Finger Dance BX11

Finger Dance 61 Key Folding Piano

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Finger Dance 61 Key Folding Piano. This portable digital piano is designed for beginners and experienced musicians alike, offering a full 61-key experience with the convenience of a foldable design. Featuring semi-weighted, lighted keys, Bluetooth MIDI connectivity, and a long-lasting rechargeable battery, it's perfect for practice, learning, and creative expression anywhere.

Key Features:

- **Portable & Folding Design:** Folds 180° for easy transport and storage.
- **Semi-Weighted Lighted Keys:** Provides a realistic piano feel with visual guidance for learning.
- **Bluetooth MIDI Functionality:** Connects wirelessly to piano learning apps like Garage Band, Perfect Piano, and Pop Piano.
- **Rechargeable Battery:** Offers 8-10 hours of playtime on a full charge, supporting USB and power bank charging.
- **Integrated Speakers:** High-quality speakers deliver rich, three-dimensional sound.

Setup

Follow these steps to set up your Finger Dance Folding Piano for the first time:

1. **Unboxing:** Carefully remove all components from the packaging. Ensure you have the folding piano, power adapter, sustain pedal, music stand, and carrying bag.
2. **Unfolding the Piano:** Gently unfold the piano until it locks into its full 61-key configuration. Ensure the two halves are securely aligned.

3. **Charging the Battery:** Connect the provided USB charging cable to the piano's USB port and a compatible USB power adapter (not included) or power bank. The indicator light will show charging status. A full charge provides 8-10 hours of playtime.
4. **Attaching the Music Stand:** Insert the music stand into the designated slot on the top of the piano.
5. **Connecting the Sustain Pedal:** Plug the sustain pedal into the 'SUS' port on the side of the piano.



Image: The Finger Dance 61 Key Folding Piano shown both unfolded and folded, alongside its included accessories: a carrying bag, power adapter, sustain pedal, and music stand.

Bluetooth & MIDI Support

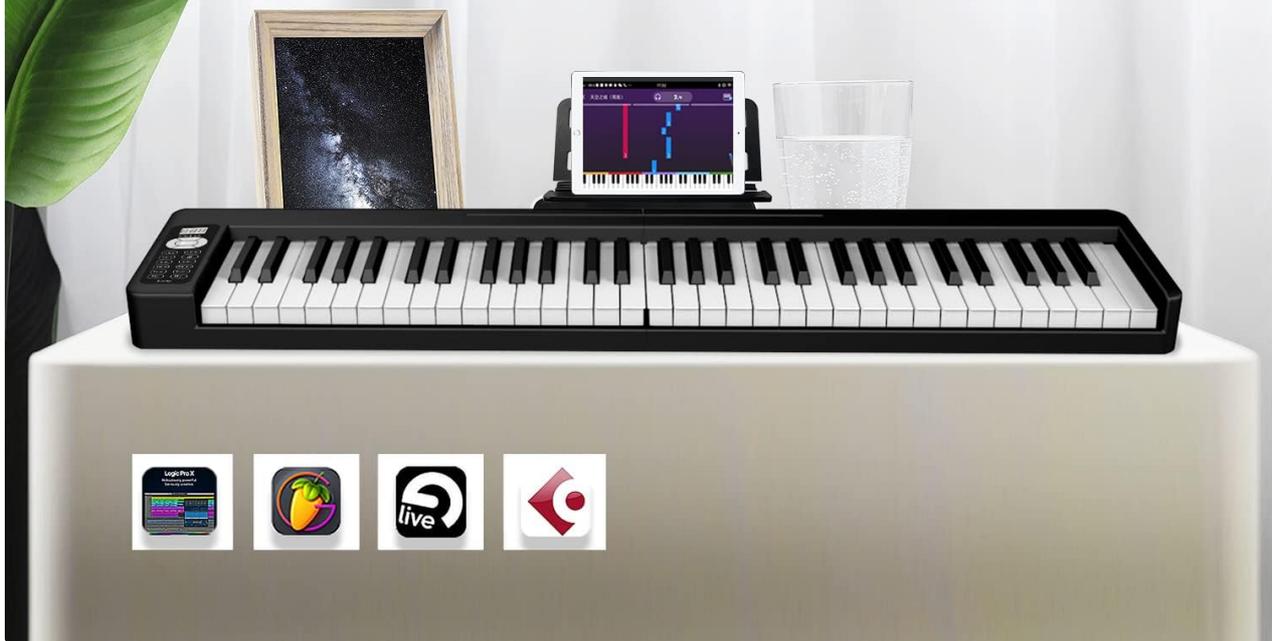


Image: The Finger Dance Folding Piano in its compact, folded configuration, demonstrating its portability and ease of storage.

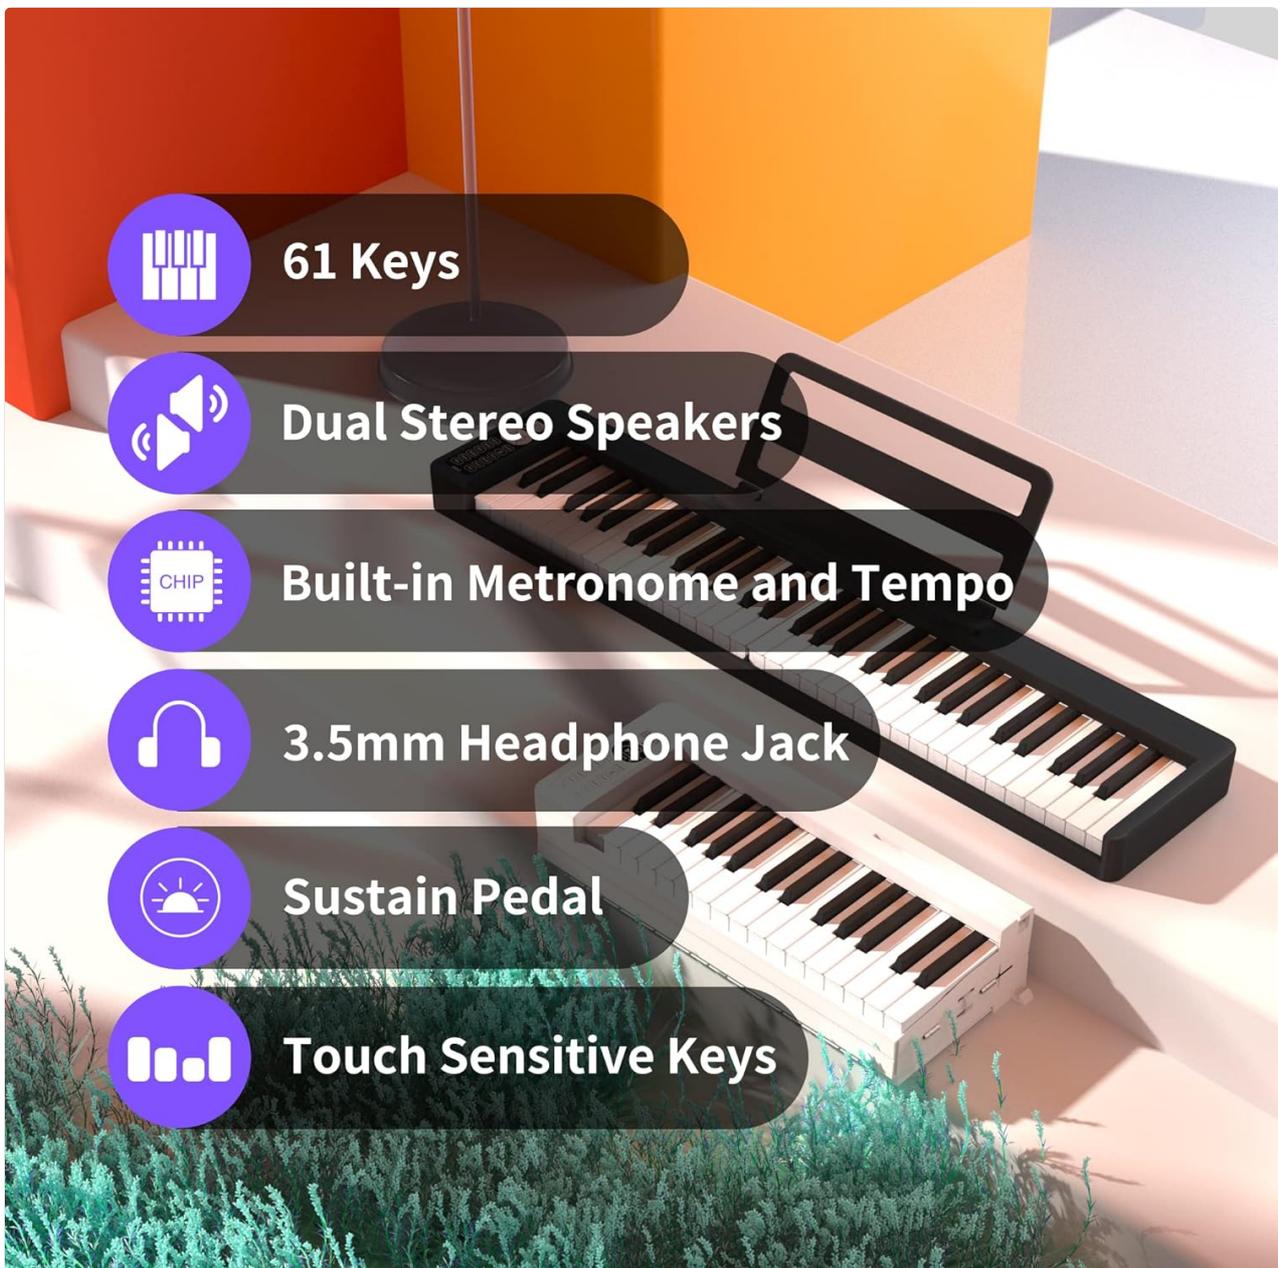


Image: Detailed dimensions of the Finger Dance Folding Piano, illustrating its length, width, and height when both unfolded and folded, highlighting its compact nature.

Operating Instructions

This section details the various functions and controls of your folding piano.

Power On/Off

To power on the piano, press and hold the 'ON/OFF' button located on the control panel. Repeat to power off.

Control Panel Overview



1. 61 Keys



3. Built-in Metronome and Tempo



2. Dual Stereo Speakers



4. 3.5mm Headphone Jack



5. Sustain Pedal



6. Touch Sensitive Keys

Image: A detailed view of the piano's control panel, displaying buttons for various functions such as volume control, chord mode, demo songs, tone selection, tempo adjustment, transposing, and rhythm selection.

- **Volume Control:** Use the 'Vol+' and 'Vol-' buttons to adjust the overall volume.
- **Chord:** Activates chord play mode.
- **Demo:** Plays pre-programmed demo songs.
- **Tone+/-:** Changes the instrument tone.
- **Tempo+/-:** Adjusts the speed of rhythms or demo songs.
- **Trans+/-:** Transposes the key up or down.
- **Rhy+/-:** Selects different rhythm patterns.
- **Sustain:** Toggles the sustain effect.
- **Lighted Keys:** The keys illuminate to guide you during learning or demo playback.

Bluetooth MIDI Function

The piano features built-in Bluetooth for wireless MIDI connectivity. This allows you to connect to various piano learning applications on your smart device.

1. Ensure Bluetooth is enabled on your smartphone or tablet.

2. Open your preferred piano learning app (e.g., Garage Band, Perfect Piano, Pop Piano).
3. Within the app's settings, search for and connect to the Finger Dance piano via Bluetooth MIDI.
4. Follow the app's instructions to utilize features like lighted key guidance for learning.



Image: A close-up of the piano keys, illustrating their semi-weighted design for a more authentic playing experience.

Maintenance

Proper care will ensure the longevity and optimal performance of your Finger Dance Folding Piano.

- **Cleaning:** Use a soft, dry cloth to wipe down the piano's surface. For stubborn marks, a slightly damp cloth with mild soap can be used, followed by a dry cloth. Avoid abrasive cleaners or excessive moisture.
- **Storage:** When not in use, fold the piano and store it in its portable travel tote bag. Keep it in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Battery Care:** To maintain battery health, avoid completely draining the battery frequently. If storing for an extended period, charge the piano to about 50% and recharge every few months.

Troubleshooting

If you encounter any issues with your Finger Dance Folding Piano, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound or low volume	Volume too low; piano not powered on; speaker issue.	Increase volume using 'Vol+' button. Ensure piano is powered on. Check if headphones are plugged in.
Keys not responding or inconsistent volume	Internal connection issue; dust/debris under keys.	Gently clean around the keys. If problem persists, contact customer support.
Bluetooth connection fails	Bluetooth not enabled; device too far; interference.	Ensure Bluetooth is on for both devices. Move devices closer. Restart both piano and smart device.
Piano does not charge	Faulty cable/adaptor; charging port issue.	Try a different USB cable and power adaptor. Ensure the charging port is clean.

If the issue you are experiencing is not listed or the suggested solutions do not resolve the problem, please contact Finger Dance customer support for further assistance.

Specifications

Feature	Detail
Model Number	BX11
Number of Keys	61
Key Type	Semi-Weighted, Lighted
Connectivity	Bluetooth, USB
Power Source	Battery Powered (Rechargeable Lithium Battery)
Playtime (Full Charge)	8-10 hours
Product Dimensions (Unfolded)	7.48"D x 35.43"W x 2.24"H
Item Weight	8.14 pounds (3.7 Kilograms)
Supported Software	Garage Band, Perfect Piano, Pop Piano

Warranty and Support

The Finger Dance 61 Key Folding Piano comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty duration and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact Finger Dance customer service. Contact information can typically be found on the product packaging, the official Finger Dance website, or through your original point of purchase.

Please have your product model number (BX11) and purchase date ready when contacting support to ensure efficient service.