

- Manuals.plus /
- > [ASHATA](#) /
- > ASHATA Portable WiFi Hotspot User Manual

ASHATA

ASHATA Portable WiFi Hotspot User Manual

Model: USB 4G LTE Mobile Router

1. PRODUCT OVERVIEW

The ASHATA Portable WiFi Hotspot is a compact USB 4G LTE mobile router designed to provide high-speed internet access on the go. It allows multiple devices to connect simultaneously, sharing a single 4G network connection. Its USB-powered design offers flexible power options, making it suitable for various travel and home use scenarios.





Figure 1.1: Front view of the ASHATA Portable WiFi Hotspot.

2. PACKAGE CONTENTS

Please verify that all items are present and in good condition upon opening the package:

- 1 x ASHATA Portable WiFi Hotspot (USB 4G LTE Mobile Router)
- 1 x User Manual (this document)

3. KEY FEATURES

- **Multi-User Support:** Connects up to 10 devices simultaneously, including mobile phones, laptops, computers, and smart TVs.
- **USB Powered:** Flexible power options via any USB port, such as mobile phone chargers, car chargers, or power banks.
- **High-Speed Connectivity:** Provides fast and stable 4G LTE internet access.
- **Plug and Play:** Simple setup; insert a SIM card and connect to a USB power source to begin.
- **Enhanced Security:** Features WPA/WPA2 encryption to protect your network from unauthorized access.



Figure 3.1: Overview of the hotspot's main features.

4. SETUP GUIDE

4.1. SIM Card Installation

1. Gently remove the protective cap from the USB dongle to reveal the USB connector.
2. Locate the SIM card slot, typically found near the USB connector or on the side of the device.
3. Insert your activated 4G LTE SIM card into the slot with the gold contacts facing down and the notched corner aligned correctly. Push until it clicks into place.



Figure 4.1: Hotspot with USB cap removed, ready for SIM card insertion.

4.2. Connecting to Power

The hotspot is USB powered. Connect the device to any standard USB power source:

- A USB port on a laptop or desktop computer.
- A USB wall adapter (e.g., phone charger).
- A car USB charger.
- A power bank.

Once connected, the device will power on automatically. Indicator lights on the device will illuminate, typically showing power status and network signal strength.



Figure 4.2: Hotspot connected to a laptop for power and data.

4.3. Initial Wi-Fi Connection

After powering on, the hotspot will broadcast a Wi-Fi network. The default Wi-Fi network name (SSID) and password (Wi-Fi Key) are usually printed on a label on the device itself or on its packaging. Refer to this label for your specific device's credentials.

1. On your device (phone, laptop, tablet), open your Wi-Fi settings.
2. Scan for available Wi-Fi networks.
3. Select the SSID corresponding to your ASHATA hotspot.
4. Enter the default Wi-Fi Key when prompted.
5. Once connected, your device should have internet access.

5. OPERATING INSTRUCTIONS

5.1. Connecting Additional Devices

To connect more devices (up to 10 simultaneously), repeat the steps outlined in Section 4.3. Each device will use the same Wi-Fi network name and password.

Sharing function



Figure 5.1: The hotspot supports sharing internet with multiple devices.

5.2. Network Security

The ASHATA hotspot utilizes WPA/WPA2 encryption protocols to secure your wireless network. It is recommended to keep the default password strong or change it to a unique, complex password for optimal security. Consult the device's web interface (if available, typically accessed via a browser by typing a specific IP address like 192.168.1.1) for advanced security settings, including changing the SSID and password.

6. MAINTENANCE

To ensure the longevity and optimal performance of your ASHATA Portable WiFi Hotspot, follow these maintenance guidelines:

- Keep the device clean and free from dust. Use a soft, dry cloth for cleaning.
- Avoid exposing the device to extreme temperatures, direct sunlight, or high humidity.
- Do not drop or subject the device to strong impacts.
- Ensure proper ventilation when in use; do not cover the device.
- When not in use, store the device in a cool, dry place and replace the protective USB cap.

7. TROUBLESHOOTING

If you encounter issues with your ASHATA Portable WiFi Hotspot, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No Internet Connection	SIM card not activated or no data plan. Poor 4G signal. Incorrect APN settings (Advanced). Device not powered on.	Ensure SIM card is active and has a valid data plan. Move to an area with better 4G coverage. Check device's web interface for APN settings (consult your mobile carrier for correct APN). Ensure the device is properly connected to a USB power source.
Cannot Connect to Wi-Fi Network	Incorrect Wi-Fi password. Device too far from hotspot. Hotspot not broadcasting.	Verify the Wi-Fi password (SSID Key) from the device label. Move closer to the hotspot. Check hotspot indicator lights; if off, ensure it's powered.
Slow Internet Speed	Weak 4G signal. Too many connected devices. Network congestion.	Relocate to an area with stronger signal. Disconnect unnecessary devices. This may be due to carrier network conditions.

8. SPECIFICATIONS

Feature	Detail
Brand	ASHATA
Model	USB 4G LTE Mobile Router
Connectivity Technology	Wi-Fi, USB
Wireless Communication Standard	802.11b
Frequency	5 GHz
Security Protocol	WPA-PSK, WPA2-PSK
Special Feature	WPS
Number of Ports	1 (USB)
Compatible Devices	Laptop, Smart Television, Mobile Phones, Computers
Recommended Uses	Home, Travel
Item Weight	1.41 ounces (approx. 40 grams)
Package Dimensions	4.37 x 2.83 x 0.79 inches (approx. 11.1 x 7.2 x 2.0 cm)
Manufacturer	ASHATA
Country of Origin	China

9. WARRANTY AND SUPPORT

Specific warranty details and direct customer support contact information are not provided within this manual. For warranty claims, technical assistance, or further inquiries, please refer to the product packaging, the official ASHATA website, or contact your point of purchase.

Always retain your proof of purchase for warranty purposes.

© 2024 ASHATA. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKLRH694>

More documents and user manuals: <https://manuals.plus/>