

YAW1F, YAW1F7, YAW1F11, GJC12AG-K6NRNR1A, GJC12AG-K6NRNB3A, GJH12AG-K6NRNB3A, GJC18AE-K6NRNB3A, GJC07AK-K6NRNR1A, GJH07A

Generic Replacement Remote Control User Manual

For Gree Window Air Conditioners (Models YAW1F, YAW1F7, YAW1F11, GJC12AG-K6NRNR1A, GJC12AG-K6NRNB3A, GJH12AG-K6NRNB3A, GJC18AE-K6NRNB3A, GJC07AK-K6NRNR1A, GJH07AK-K6NRNR1A)

[Introduction](#)

[Setup](#)

[Operating Instructions](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the Generic replacement remote control designed for various Gree Window Air Conditioner models. This remote control offers infrared (IR) functionality to manage your air conditioner's basic operations. Please note that as a replacement unit, some advanced functions present on the original remote may not be supported. This remote displays temperature in Celsius only.

2. SETUP

2.1 Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2.1: Back of the remote control with the battery compartment open, showing slots for two AAA batteries. Ensure correct polarity when inserting batteries.



Figure 2.2: Back of the remote control with the battery compartment closed after battery installation.

2.2 Initial Use

Once batteries are installed, the remote control is ready for use. No pairing or complex setup is required. Simply point the remote at your Gree Window Air Conditioner and press the desired function button.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control. The remote is designed for straightforward operation of your air conditioner.



Figure 3.1: Front view of the remote control with labeled buttons.

3.1 Button Functions

- **On/Off:** Powers the air conditioner on or off.
- **Mode:** Cycles through operating modes such as Cool, Fan, Dry, Heat (if applicable to your AC unit).
- **Swing:** Activates or deactivates the automatic louver swing function.
- **Temp ▲/▼:** Adjusts the temperature setting up or down. *Note: Temperature is displayed in Celsius only.*
- **I Feel:** Activates the 'I Feel' function, which senses the temperature at the remote's location for more precise comfort.
- **Light:** Controls the display light on the air conditioner unit.
- **Fan:** Adjusts the fan speed (e.g., Low, Medium, High, Auto).
- **Sleep:** Activates the sleep mode, which adjusts temperature and fan speed for comfortable sleep.
- **Timer:** Sets a timer for the air conditioner to turn on or off automatically.
- **Turbo:** Activates maximum cooling or heating for rapid temperature change.
- **X-Fan:** Activates the X-Fan (or anti-mildew) function, which runs the fan for a short period after shutdown to dry the evaporator coil.

3.2 Operating Tips

- Ensure a clear line of sight between the remote control and the air conditioner's receiver.
- Avoid placing obstacles between the remote and the unit.
- The effective range of the remote control is typically up to 8 meters (26 feet).

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote control's display becomes dim or its response time slows. Always replace both batteries simultaneously with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

4.2 Cleaning the Remote Control

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners, abrasive cleaners, or chemical solvents, as these can damage the remote's surface or internal components.

5. TROUBLESHOOTING

- **Remote control not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote and the air conditioner.
- Confirm you are within the effective operating range.

- **Air conditioner not responding to certain functions:**

- As a replacement remote, some advanced or specific functions of your original air conditioner remote may not be supported. This is normal for generic replacement units.
- Refer to your air conditioner's original manual for specific features.

- **Temperature display is in Celsius only:**

- This remote control is designed to display temperature in Celsius only. There is no option to switch to Fahrenheit.

6. SPECIFICATIONS

Brand	Generic
Compatible Devices	Gree Window Air Conditioners (Models: YAW1F, YAW1F7, YAW1F11, GJC12AG-K6NRNR1A, GJC12AG-K6NRNB3A, GJH12AG-K6NRNB3A, GJC18AE-K6NRNB3A, GJC07AK-K6NRNR1A, GJH07AK-K6NRNR1A)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Batteries Required	2 x AAA (not included)
Special Feature	Display only in Celsius

7. WARRANTY & SUPPORT

Information regarding specific warranty coverage for this Generic replacement remote control is not provided. For any issues or questions, please contact the retailer or seller from whom you purchased the product. Ensure you have your purchase details available when seeking support.