

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Doro](#) /
- › [Doro Tablet User Manual - Easy-to-Use Android Tablet for Seniors with 10.4" HD Screen](#)

Doro Doro Tablet

Doro Tablet User Manual

Model: Doro Tablet

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Doro Tablet. Designed for ease of use, the Doro Tablet features a simplified Android interface with large icons and clear sound, making it ideal for users seeking a straightforward digital experience. Please read this manual thoroughly to ensure proper use and to maximize your tablet's potential.



Image: The Doro Tablet displaying its simplified home screen with large icons for common functions like Google, Help, Settings, Assistant, Play Store, Video Call, View, Send, Search, and Camera. The tablet rests on its included wooden stand.

2. GENERAL SAFETY INFORMATION

- **Battery Safety:** Do not attempt to replace the battery yourself. Use only Doro-approved chargers and cables.
- **Water Resistance:** The Doro Tablet is not water-resistant. Avoid exposure to liquids.
- **Temperature:** Operate the tablet within recommended temperature ranges (0°C to 35°C).
- **Cleaning:** Use a soft, dry cloth for cleaning. Avoid harsh chemicals.
- **Hearing Protection:** Avoid prolonged listening at high volume levels to prevent hearing damage.

3. SETUP

3.1 Unboxing and Initial Charge

Upon unboxing, ensure all components are present: Doro Tablet, USB-C charging cable, power adapter, and wooden stand. Connect the tablet to the power adapter using the USB-C cable and charge it fully before first use. The battery indicator on the screen will show charging status.

3.2 Powering On and Off

- **To Power On:** Press and hold the power button (located on the side) until the Doro logo appears.
- **To Power Off:** Press and hold the power button, then select 'Power off' from the options on the screen.

3.3 Initial Setup Wizard

The first time you power on your tablet, a setup wizard will guide you through essential configurations:

1. **Language Selection:** Choose your preferred language.
2. **Wi-Fi Connection:** Select your Wi-Fi network and enter the password. A stable internet connection is required for updates and app downloads.
3. **Google Account:** Sign in with your Google account or create a new one. This is necessary for accessing the Google Play Store and other Google services.
4. **Doro Interface Settings:** Customize settings for the simplified Doro interface, including text size and icon arrangement.

DORO Tablet

- Einfach zu verwenden
- Vier Lautsprecher
- Gute Lesbarkeit bei extra hellem Bildschirm
- Geeignet für Senioren und Anfänger



Image: The Doro Tablet highlighting its user-friendly features, including ease of use, four speakers for clear audio, and an extra bright screen for enhanced readability. Icons indicate adjustable text size, screen brightness, and Bluetooth connectivity.

4. OPERATING THE DORO TABLET

4.1 Simplified User Interface (EVA)

The Doro Tablet features an intuitive EVA user interface with large, clear icons and simplified menus. This design ensures easy navigation and access to core functions.

DAS TABLET, DAS IHREN BEDÜRFNISSEN ENTSPRICHT

Die **Patentierter Benutzeroberfläche** von **Doro** wurde sorgfältig entwickelt und basiert auf **dem Android-Betriebssystem**. Mit dieser intuitiven **Benutzeroberfläche** können Sie die Hauptfunktionen ganz einfach ausführen: **Videoanrufe tätigen - Nachrichten anzeigen - Nachrichten senden - Suchen**.

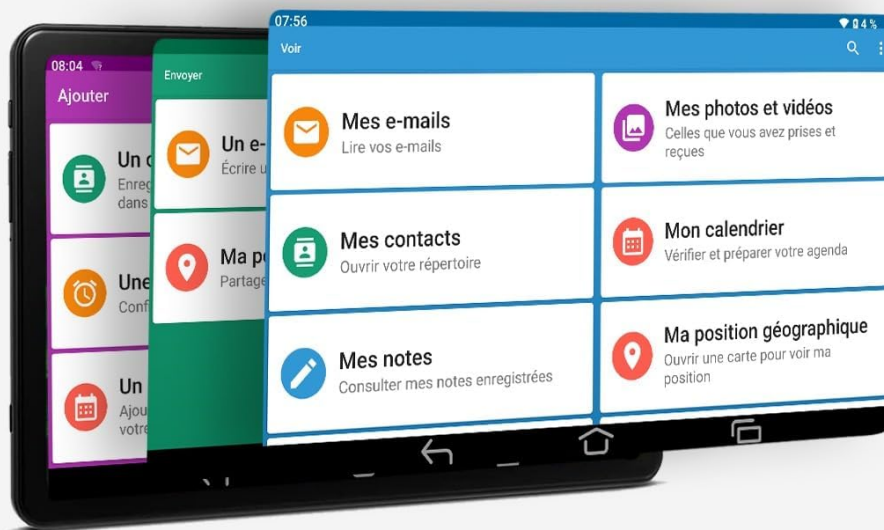


Image: The Doro Tablet showcasing its 'View' menu, which organizes functions by usage, such as 'My emails', 'My photos and videos', 'My calendar', 'My contacts', 'My notes', and 'My geographical position'. This illustrates Doro's patented, Android-based user interface designed for simplicity.

4.2 Basic Navigation

- **Tap:** Touch an icon or item once to open or select it.
- **Swipe:** Slide your finger across the screen to scroll through lists or switch between home screens.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on photos or web pages.

4.3 Communication

The Doro Tablet is equipped for easy communication:

- **Video Calls:** Use the 'Video Call' icon to initiate video calls with friends and family. The tablet's cameras (5MP front, 8MP rear) provide clear video.
- **Messaging:** Access messaging applications through the 'Send' or 'View' menus to send and receive text messages or emails.



Zur Vereinfachung werden Tutorials angeboten und die **TeamViewer-Anwendung** für die **Fernhilfe vorinstalliert**.



Bleiben Sie mit ihren Lieben in Kontakt.

Image: A user engaged in a video call on the Doro Tablet, demonstrating its communication capabilities. The image also notes the availability of tutorials and the pre-installation of TeamViewer for remote assistance, emphasizing connectivity and support.

4.4 Multimedia and Internet

- **Viewing Photos & Videos:** Use the 'View' menu to access your photos and videos. The 10.4-inch HD screen offers a bright and high-contrast display for comfortable viewing.
- **Clear Sound:** Enjoy high-quality audio from the tablet's four speakers, perfect for watching videos or making calls.
- **Internet Browsing:** The 'Search' icon provides access to internet browsing.



**Großer, heller und
kontrastreicher Bildschirm**



**TeamViewer
vorinstalliert**



**Holzständer im
Lieferumfang
enthalten**



**Benutzer-
oberfläche
intuitives EVA**



**Klarer und
kraftvoller
Klang**

Image: A collage of Doro Tablet features, including its large, bright, and high-contrast screen, pre-installed TeamViewer for remote support, the included wooden stand, the intuitive EVA user interface, and its clear, powerful sound. The 'Search' menu is also depicted, offering options like 'Something on the Internet', 'Around me', and 'An item on my tablet'.

4.5 Using the Wooden Stand

The included wooden stand provides a stable base for your tablet, allowing for hands-free viewing during video calls or media consumption. It features two grooves to accommodate the tablet with or without a protective case.



Image: A detailed view of the Doro Tablet's wooden stand, designed to hold the tablet securely for hands-free use.

5. MAINTENANCE

- **Cleaning the Screen:** Gently wipe the screen with a microfiber cloth. For stubborn smudges, slightly dampen the cloth with water or a screen cleaner specifically designed for electronics.
- **Battery Care:** To prolong battery life, avoid fully discharging the tablet frequently. Charge it when the battery level is low, and avoid leaving it plugged in for extended periods after it's fully charged.
- **Software Updates:** Periodically check for system updates in the 'Settings' menu to ensure your tablet has the latest features and security patches.
- **Storage Management:** Regularly delete unnecessary files and apps to free up storage space and maintain optimal performance.

6. TROUBLESHOOTING

If you encounter issues with your Doro Tablet, refer to the following common solutions:

Problem	Solution
Tablet does not turn on.	Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering on again. If it still doesn't turn on, perform a forced restart by holding the power button for 10-15 seconds.
Screen is unresponsive.	Restart the tablet. If the issue persists, ensure the screen is clean and free of debris.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in 'Settings'. Verify the Wi-Fi password. Restart your Wi-Fi router.
Sound is distorted or too low.	Check the volume settings. Ensure the speakers are not obstructed. Restart the tablet.
Applications are slow or crashing.	Close unused applications. Clear app caches in 'Settings' > 'Apps'. Ensure sufficient storage space is available. Restart the tablet.

7. SPECIFICATIONS

Below are the technical specifications for the Doro Tablet:

- **Brand:** Doro
- **Model Name:** Doro Tablet
- **Operating System:** Android
- **Screen Size:** 10.4 Inches
- **Screen Resolution:** 1920 x 1200 pixels (1080p Full HD)
- **Processor Brand:** Unisoc

- **Processor Speed:** 1.8 GHz
- **RAM:** 4 GB
- **Storage Capacity:** 32 GB
- **Graphics Chipset Brand:** Unisoc (Integrated)
- **Connectivity:** Wi-Fi (802.11n), Bluetooth
- **Hardware Interface:** HDMI
- **Compatible Peripherals:** Stylus Pen, HDMI compatible external screen, Bluetooth keyboard, Bluetooth headset
- **Dimensions (L x W x H):** 24.6 x 15.6 x 0.8 cm
- **Product Weight:** 477 Grams
- **Special Features:** Stereo Speaker
- **Battery:** 1 Lithium-ion (included)



8. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the warranty card included with your Doro Tablet or visit the official Doro website. Doro provides support for its products, and you can typically find contact information for customer service on their website. Information regarding spare parts availability and guaranteed software updates is not explicitly provided in the product details and may vary. Please consult Doro's official channels for the most current information.



© 2024 Doro. All rights reserved.

Related Documents - Doro Tablet

<div>Doro Aurora A30</div> <div></div> <div>doro</div>	<div>Doro Aurora A30 User Manual</div> <div>Comprehensive user manual for the Doro Aurora A30 smartphone, covering setup, features, settings, and safety instructions. Learn how to use your Doro Aurora A30 with this detailed guide.</div>
<div>Doro Aurora A31</div> <div></div> <div>doro</div>	<div>Doro Aurora A31 User Manual</div> <div>Comprehensive user manual for the Doro Aurora A31 smartphone, covering setup, features, settings, and safety information.</div>

