

[Manuals.plus](#) /

› [ZdalaMit](#) /

› ZdalaMit J1-06(E) Replacement Remote Control User Manual

ZdalaMit J1-06(E)

ZdalaMit J1-06(E) Replacement Remote Control User Manual

For Hisense Air Conditioners

1. INTRODUCTION

This manual provides instructions for the ZdalaMit J1-06(E) Replacement Remote Control, designed for use with various Hisense Room Air Conditioner models. This remote control offers a direct replacement solution, requiring no complex programming for immediate use.

Compatible Hisense Air Conditioner models include, but are not limited to:

- AP10CW2G, AP14CR2WG, AP08CR2W, AP10CR2W, AP12CR2G, AP13HR2G
- AP10CR1SEJS, AP08CR1W, AP14DR1SFJS2, AP12CR1SEPS, AP13HR1SEJS00
- AP12CR1G, AP14DR1G, AP14CR1WG, AP10CR1W, AP13HR1G, AP08CR1SEJSC
- AP10CW1G, AP10CR1SEPS, AP-10CR1SEPS, AP-10CR1SEJS, AP-12CR1SEJS
- AP-12CR1SEPS, AP-14DR1SFJS2, AP-13HR1SEJS00, AP-08CR1SEJS





Figure 1: ZdalaMit J1-06(E) Replacement Remote Control

2. SETUP

2.1 Battery Installation

The remote control requires two (2) 1.5V AAA Alkaline batteries (not included). Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.

2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Always use new alkaline batteries. Do not mix old and new batteries, or different types of batteries. Remove batteries if the remote control will not be used for an extended period.



Figure 2: Back view of the remote control, indicating the battery compartment area.

2.2 Initial Use

Once batteries are installed, the remote control is ready for immediate use. No programming or pairing is required. Simply point the remote control towards your Hisense Air Conditioner and begin operation.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your ZdalaMit J1-06(E) remote control to effectively operate your Hisense Air Conditioner. Below is a description of the main functions:

Button	Function
ON/OFF	Powers the air conditioner on or off.
MODE	Cycles through operating modes: Auto, Cool, Dry, Fan, Heat (if applicable to your AC model).
FAN	Adjusts fan speed: Auto, Low, Medium, High.
▲ / ▼	Increases or decreases the set temperature.
SWING	Activates or deactivates the automatic louver swing function. (There are two swing buttons, one for horizontal and one for vertical swing, depending on AC model).
SLEEP	Activates sleep mode for quiet operation and energy saving during sleep.
SUPER	Activates rapid cooling or heating (turbo mode).
SMART	Automatically selects the optimal operating mode based on room temperature.
IFEEL	Measures the temperature at the remote control's location and adjusts the AC accordingly for more precise comfort.
DIMMER	Turns off the display light on the air conditioner unit.
TIMER ON	Sets the time for the air conditioner to automatically turn on.
TIMER OFF	Sets the time for the air conditioner to automatically turn off.
CLOCK	Sets the current time on the remote control's display.

For detailed instructions on setting specific functions like Timer or Clock, please refer to your Hisense Air Conditioner's original user manual, as these functions often require specific sequences or confirmations on the AC unit itself.

4. MAINTENANCE

4.1 Cleaning the Remote Control

To maintain the remote control's appearance and functionality:

- Wipe the surface with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water and a mild detergent, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or corrosive liquids, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote control's range decreases or if the display becomes dim or unresponsive. Refer to section 2.1 for battery installation instructions.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

5. TROUBLESHOOTING

If you experience issues with your remote control, consult the table below for common problems and their solutions:

Problem	Possible Cause	Solution
Remote control not working.	Dead or incorrectly installed batteries.	Replace batteries with new AAA alkaline batteries, ensuring correct polarity (+/-).
Limited operating range.	Weak batteries; Obstruction between remote and AC unit; Remote sensor on AC unit is dirty or blocked.	Replace batteries. Ensure a clear line of sight to the AC unit. Clean the AC unit's remote sensor.
Buttons are unresponsive or sticky.	Dirt or debris under buttons; Internal malfunction.	Clean the remote control (refer to section 4.1). If problem persists, the remote may need replacement.
Air conditioner does not respond to remote.	Remote is not compatible with the specific AC model; AC unit is unplugged or powered off.	Verify your AC model is listed in the compatibility section (Section 1). Ensure AC unit has power.

6. SPECIFICATIONS

Feature	Detail
Model Number	J1-06(E)
Brand	ZdalaMit
Compatible Devices	Hisense Air Conditioners
Power Supply	2 x 1.5V AAA Alkaline Batteries
Product Dimensions	5 x 1.5 x 0.5 inches (approx.)
Item Weight	2 ounces (approx.)

Feature	Detail
Color	White
Special Feature	Ergonomic design

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Specific warranty details for this replacement remote control are not provided in this manual. Please refer to the product packaging or contact your retailer for warranty terms and conditions.

7.2 Customer Support

If you have any questions, concerns, or require further assistance with your ZdalaMit J1-06(E) Replacement Remote Control, please do not hesitate to contact the seller or manufacturer. Contact information is typically available on the product packaging or the point of purchase.

© 2024 ZdalaMit. All rights reserved. Model: J1-06(E).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKQ1RNJL>

More documents and user manuals: <https://manuals.plus/>