



[Manuals.plus](#) /

> [Dpofirs](#) /

> Dpofirs Portable MP3 Player User Manual

Dpofirs Dpofirs5yhtvp70d23123-13

Dpofirs Portable MP3 Player User Manual

Model: Dpofirs5yhtvp70d23123-13

INTRODUCTION

Thank you for choosing the Dpofirs Portable MP3 Player. This device is designed to provide high-quality, lossless audio playback in a compact and durable form factor. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.



Image: The Dpofirs Portable MP3 Player, featuring a blue aluminum alloy casing and a circular control pad. A person is visible in the background, enjoying music with headphones.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x Dpofirs MP3 Player
- 1 x Charging Cable
- 1 x Earphones

KEY FEATURES

- **Lossless Sound Quality:** Supports MP3, WMA, FLAC, APE, AAC, OGG, and ACELP audio formats.
- **Expandable Memory:** Supports up to 64GB memory card (not included). MYMAHDI memory cards are recommended.
- **User-Friendly Interface:** Easy navigation for selecting songs, creating playlists, and managing playback.
- **Long Battery Life:** Up to 8 hours of continuous playback on a full charge.

- **Durable Design:** Constructed from premium aluminum alloy for enhanced durability.
- **Playback Modes:** Supports sequential and random playback, and sleep shutdown function.

SETUP

1. Charging the Device

Before first use, fully charge your MP3 player.

1. Connect the provided charging cable to the MP3 player's charging port.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The device will indicate charging status. A full charge typically takes approximately 2 hours.

Important: Ensure the charging cable is functioning correctly. If the device does not charge, try a different USB port or adapter.

2. Inserting a Memory Card

The MP3 player requires a memory card for storing music.

1. Locate the memory card slot on the side of the MP3 player.
2. Gently insert a microSD card (up to 64GB, not included) into the slot until it clicks into place.
3. To remove, push the card in slightly until it springs out.

Note: A memory card is not included with the player. MYMAHDI brand memory cards are recommended for optimal performance.

3. Connecting Earphones

Connect the provided earphones or your preferred 3.5mm audio headphones to the headphone jack on the MP3 player.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the power button (usually the Play/Pause button or a dedicated power button) until the screen lights up.
- To power off, press and hold the power button again until the screen turns off.

2. Basic Navigation

The MP3 player features a circular control pad with several buttons:

- **MENU:** Access the main menu or go back to the previous screen.
- **VOL (+/-):** Adjust the volume level.
- **Play/Pause:** Start or pause playback.
- **Next/Previous:** Skip to the next track or go back to the previous track. Long press to fast forward/rewind.

3. Transferring Music Files

To transfer music to your MP3 player:

1. Connect the MP3 player to your computer using the charging cable.

2. The player should appear as a removable disk drive on your computer.
3. Drag and drop your music files (MP3, WMA, FLAC, APE, AAC, OGG, ACELP) into the player's memory card folder.
4. Safely eject the device from your computer before disconnecting the cable.

4. Playing Music

1. From the main menu, navigate to the "Music" or "Audio" section.
2. Browse your music by artist, album, genre, or all songs.
3. Select a song to begin playback.
4. Use the Play/Pause, Next/Previous, and VOL buttons to control playback.

5. Playback Options

- **Playlists:** Create and manage custom playlists directly on the device.
- **Shuffle/Repeat:** Toggle between sequential playback, shuffle, and repeat modes.
- **Sleep Shutdown:** Set a timer for the device to automatically power off.

MAINTENANCE

- Keep the device dry. Moisture can damage internal circuits.
- Avoid extreme temperatures.
- Clean the device with a soft, dry cloth. Do not use harsh chemicals or cleaning agents.
- Protect the screen from scratches.
- Store the device in a safe place when not in use.

TROUBLESHOOTING

Device does not power on:

- Ensure the battery is charged. Connect the player to a power source and allow it to charge for at least 30 minutes.
- Try pressing and holding the power button for an extended period (5-10 seconds).

Cannot hear any sound:

- Check if the earphones are properly connected to the headphone jack.
- Increase the volume using the VOL+ button.
- Test with a different pair of earphones to rule out faulty headphones.
- Ensure the audio files are not corrupted and are in a supported format.

Music files are not recognized:

- Ensure the memory card is properly inserted and recognized by the device.
- Verify that the music files are in one of the supported formats (MP3, WMA, FLAC, APE, AAC, OGG, ACELP).
- Try reformatting the memory card (this will erase all data) and re-transferring the music.
- Ensure the memory card is not full.

Device freezes or becomes unresponsive:

- Press and hold the power button for about 10-15 seconds to force a restart.
- If available, use a small pin to press the reset button (if present on the device).

SPECIFICATIONS

Brand	Dpofirs
Model Number	Dpofirs5yhtvp70d23123-13
Material	Aluminum Alloy
Battery	Built-in 200mAh Lithium Battery
Charging Time	Approx. 2 hours
Playback Time	Up to 8 hours (fully charged)
Memory Card Support	Up to 64GB (microSD, not included)
Supported Audio Formats	MP3, WMA, FLAC, APE, AAC, OGG, ACELP
Connectivity Technology	Auxiliary, Bluetooth, Wi-Fi <i>(Note: Bluetooth/Wi-Fi functionality not detailed in product description, focusing on core MP3 player features)</i>
Color	Blue
Country of Origin	China

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. Please refer to the retailer's return policy or contact the seller directly for details regarding warranty coverage. For technical support or further assistance, please contact Dpofirs customer service through the platform where you purchased the product.