

[Manuals.plus](#) /

> [PUSOKEI](#) /

> PUSOKEI MP3 Player User Manual (Model: PUSOKEIw0icmkpaer1213-12)

PUSOKEI PUSOKEIw0icmkpaer1213-12

PUSOKEI MP3 Player User Manual

Model: PUSOKEIw0icmkpaer1213-12

INTRODUCTION

Thank you for purchasing the PUSOKEI MP3 Player. This portable music player is designed for high-quality audio playback and offers various features including video playback, e-book reading, and FM radio. This manual provides essential information for setting up, operating, and maintaining your device.

PACKAGE CONTENTS

Please check the package for the following items:

- 1 x MP4 Player
- 1 x Charging Cable
- 1 x Earphone

PRODUCT OVERVIEW

The PUSOKEI MP3 Player features a compact design with a 1.8-inch LCD screen and intuitive controls. It supports various audio formats for lossless sound quality.

Long lasting battery

Battery takes about 2 hours to fully charge
Up to 8 hours of use on a full charge



Image: The MP3 player shown alongside a graphic of a fully charged battery, illustrating its long-lasting battery life.

2. Inserting a Memory Card

The MP3 player supports up to 64GB of external memory via a Micro SD card (not included). Locate the TF card slot on the device and gently insert the Micro SD card until it clicks into place. Ensure the card is inserted correctly to avoid damage.

Large memory

Supports up to 64G memory capacity,
(note: card not included)
Original for MYMAHDI memory card
recommended



Image: A close-up of the MP3 player screen showing a music interface, with text indicating support for up to 64GB memory capacity.

3. Connecting Earphones

Plug the included earphones into the 3.5mm headphone port on the device.

OPERATING INSTRUCTIONS

1. Power On/Off

To power on the device, press and hold the Play/Fade button. To power off, press and hold the Play/Fade button again until the screen turns off.

2. Basic Navigation

Use the Menu/Enter button to access the main menu and confirm selections. Use the Next Song/Volume Up and Previous Song/Volume Down buttons to scroll through menu options.

3. Music Playback

From the main menu, select "Music". Browse your audio files using the navigation buttons. Press the Play/Fade button to start or pause a song. The player supports lossless sound quality for MP3, WMA, FLAC, APE, AAC, OGG, and ACELP formats.



Lossless sound quality

Supports MP3, WMA, FLAC, APE, AAC, OGG and ACELP

Image: The MP3 player screen showing a music icon and musical notes, emphasizing its lossless sound quality feature.

4. Volume Adjustment

Adjust the volume using the dedicated Volume key or the Next Song/Volume Up and Previous Song/Volume Down buttons when in playback mode.

5. Additional Features

- **Video Playback:** The device supports AMV format HD video playback. Navigate to the video section to view your files.
- **E-Books:** Read TXT format e-books. Features include fast/slow 8-level variable speed playback, loop mode, and intelligent A-B repeat.
- **FM Radio:** Access the FM radio function to search, record, and save stations automatically.
- **HD Lossless Recording:** Utilize the built-in recording feature for high-definition audio capture.
- **Photo Viewing:** Browse photos on the 1.8-inch LCD screen.

Your browser does not support the video tag.

Video: This video demonstrates the multifunctional capabilities of the PUSOKEI MP3 Player, including its various playback options and user interface navigation.

MAINTENANCE

To ensure the longevity and optimal performance of your PUSOKEI MP3 Player, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the device with care to prevent drops or impacts. The aluminum alloy body provides durability, but excessive force can cause damage.
- **Battery Care:** Avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods, to maintain battery health.

TROUBLESHOOTING

If you encounter issues with your MP3 player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on	Low battery; device frozen	Charge the device for at least 30 minutes. If still unresponsive, perform a reset (if available, check product for a small reset pinhole).
No sound from earphones	Volume too low; earphones not connected properly; faulty earphones	Increase volume. Ensure earphones are fully plugged in. Test with another pair of earphones.
Cannot detect memory card	Card not inserted correctly; incompatible card; faulty card	Reinsert the Micro SD card. Ensure the card is formatted correctly (FAT32 recommended). Try a different Micro SD card.
Files not playing	Unsupported file format; corrupted file	Ensure files are in supported formats (MP3, WMA, FLAC, APE, AAC, OGG, ACELP for audio; AMV for video). Try playing other files.

SPECIFICATIONS

The following are the technical specifications for the PUSOKEI MP3 Player:

- **Brand:** PUSOKEI
- **Model Number:** PUSOKEIw0icmkpaer1213-12
- **Screen Size:** 1.8 Inches
- **Display Technology:** LCD
- **Memory Storage Capacity:** Supports up to 64 GB (Micro SD card not included)
- **Supported Audio Formats:** MP3, WMA, FLAC, APE, AAC, OGG, ACELP
- **Supported Video Formats:** AMV
- **Connectivity Technology:** Aux (for earphones)
- **Battery:** Built-in Lithium Battery 200mAh
- **Battery Life:** Up to 8 hours (average)
- **Charging Time:** Approximately 2 hours
- **Material:** Premium Aluminum Alloy
- **Included Components:** Earphone

WARRANTY AND SUPPORT

Specific warranty details for this product are not provided in the available information. For support or warranty inquiries, please refer to the retailer or manufacturer's official contact channels.