

Oaks Aura DC2202

Oaks Aura 22-inch Fandelier Ceiling Fan with Light and Remote (Model DC2202)

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Oaks Aura 22-inch Fandelier Ceiling Fan with Light. This modern ceiling fan combines efficient air circulation with adjustable LED lighting, controlled via remote or a dedicated mobile application. Designed for rooms with low ceilings, it features a compact design with crystal accents. Please read this manual thoroughly before installation and operation to ensure safe and correct use.

2. SAFETY INFORMATION

- Always turn off power at the circuit breaker before installation or maintenance.
- Installation should be performed by a qualified electrician or a person with sufficient electrical knowledge.
- Ensure the mounting structure can support the weight of the fan.
- Do not connect the fan to a dimmer switch not specifically designed for ceiling fans.
- Keep hands and objects clear of the fan blades during operation.
- Use only the provided remote control and follow APP instructions for control.

3. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Fandelier Ceiling Fan Unit (pre-assembled)
- Remote Control
- Installation Hardware (screws, wire nuts, etc.)
- Instruction Manual



Figure 3.1: Overview of the Fandelier Ceiling Fan with key dimensions and components.

4. SPECIFICATIONS

Brand	Oaks Aura
Model Number	DC2202
Size	22 Inches (22.44"L x 22.44"W x 8.46"H)
Material	Plastic, Metal, K9 Crystal
Light Source	Integrated LED
Wattage	15 Watts (LED)
Voltage	110 Volts
Color Temperature	3000K (Warm White), 4000K (Natural Light), 6000K (Cool White)
Dimmable	Yes (0-100%)
Fan Speeds	6 Speeds
Control Method	Remote Control, Mobile App
Mounting Type	Flush Mount
Room Type	Bedroom, Living Room, Dining Room, Kitchen, Hallway (up to 12ft x 12ft)



Figure 4.1: Detailed view of the fan's construction materials and design elements.

5. SETUP AND INSTALLATION

The fan is largely pre-assembled for easier installation. Ensure power is disconnected at the circuit breaker before proceeding.

1. **Prepare for Installation:** Turn off power at the main circuit breaker. Clear the installation area.
2. **Mounting Bracket:** Secure the mounting bracket to the ceiling junction box using the provided screws. Ensure the bracket is firmly attached and can support the fan's weight.
3. **Wiring Connections:** Connect the fan's electrical wires to the household wiring according to local electrical codes. Typically, this involves connecting live, neutral, and ground wires. Use appropriate wire nuts.
4. **Attach Fan Unit:** Carefully lift the fan unit and attach it to the mounting bracket. Ensure all connections are secure.
5. **Secure Canopy:** Fasten the canopy to cover the wiring and mounting bracket, ensuring a flush fit against the ceiling.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.

Note: If you are unsure about any step, consult a qualified electrician.

6. OPERATING INSTRUCTIONS

6.1 Remote Control Operation

The included remote control allows for convenient adjustment of fan and light settings.



Figure 6.1: Remote Control Functions.

- **Light ON/OFF:** Press to turn the light on or off.
- **ALL OFF:** Turns off both the fan and light.
- **Light Color Toggle:** Cycles through 3000K (Warm White), 4000K (Natural Light), and 6000K (Cool White).
- **Brightness Adjustment:** Use the up/down arrows to increase or decrease light brightness (0-100%).
- **Fan Timing:** Sets a timer for fan operation (e.g., 1H, 2H, 4H).
- **Fan Reversible:** Changes the direction of fan rotation for summer (downward airflow) or winter (upward airflow).
- **Natural Wind:** Activates a mode that simulates natural breeze by varying fan speed.
- **Fan ON/OFF:** Turns the fan on or off.
- **Speed 1-6:** Selects one of six fan speeds.

6.2 Mobile App Control

The fan can also be controlled via a mobile application. Follow these steps to connect:



Figure 6.2: Mobile App and Remote Control Interface.

1. **Download App:** Scan the QR code provided in the manual or on the product packaging to download the "FanLamp Pro" app. The app supports both iOS and Android devices. (Link: <http://www.jasonghost.com/fanlamppro/>)
2. **Connect Fan Light:**
 - Open the app and click "Add" to set a name for your fan light.

- Within 5 seconds after the fan is powered on, press the "PairCode" check button on the remote control 1-2 times. The fan should connect to the app.

3. **Change Language (if needed):** In the app settings, click on "Language" and select your preferred language (e.g., English).

The app provides full control over light brightness, color temperature, fan speeds, timing, and reverse rotation, similar to the remote control.

6.3 Fan Modes and Features

- **Dimmable LED Light:** Adjust brightness from 0% to 100%.
- **3 Color Temperatures:** Switch between Warm White (3000K), Natural Light (4000K), and Cool White (6000K) to suit your preference.



Figure 6.3: Adjustable Color Temperature and Brightness.

- **6 Wind Speeds:** Choose from six fan speeds for optimal comfort.



Figure 6.4: Fan Speed Settings and Recommended Use.

- **Reversible Motor:**
 - **Summer Mode (Forward Rotation):** Creates a downward airflow, producing a cooling effect.
 - **Winter Mode (Reverse Rotation):** Creates an upward airflow, circulating warm air near the ceiling and distributing it throughout the room.

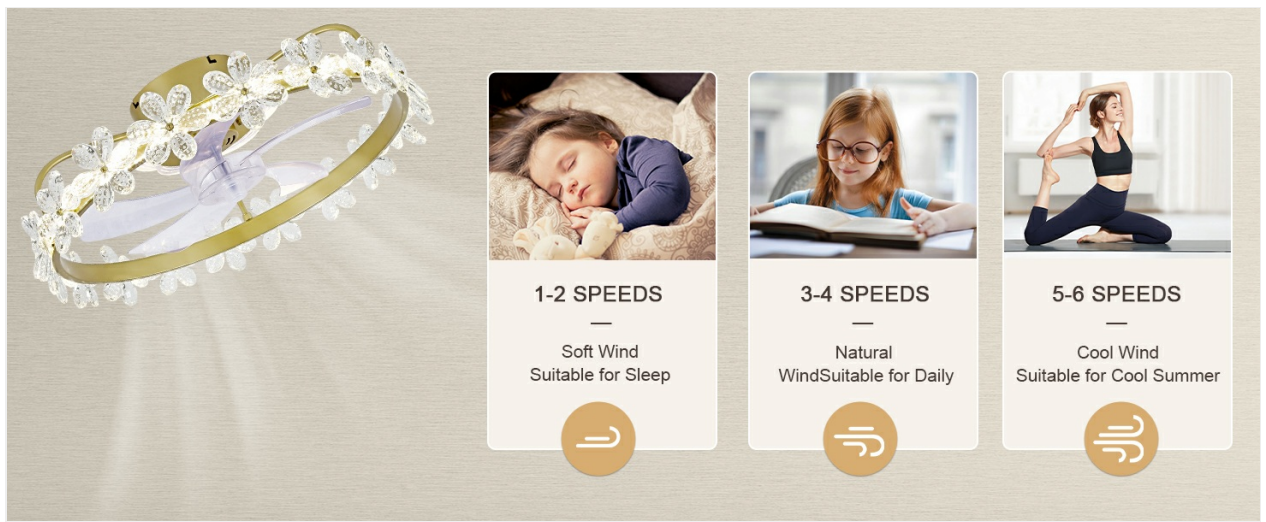


Figure 6.5: Fan Rotation Modes for Seasonal Use.

- **Quiet Operation:** The DC motor ensures quiet operation, typically below 35dB, suitable for bedrooms and nurseries.



Figure 6.6: Low Noise Operation for Peaceful Sleep.

- **Timing Function:** Set the fan to turn off automatically after a specified period.

6.4 Product Video Demonstration

Watch this video for a visual demonstration of the Oaks Aura 22-inch Low Profile Ceiling Fan with Light.

Your browser does not support the video tag.

Video 6.7: A demonstration of the 20-inch Low Profile Ceiling Fan with Light, showcasing its features and operation. Note: This video is for a 20-inch model, but demonstrates similar functionality.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:**
 - Before cleaning, ensure the power is turned off at the circuit breaker.
 - Wipe the fan blades and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - For crystal elements, use a soft, lint-free cloth.
- **Tighten Fasteners:** Periodically check and tighten all screws and fasteners on the fan and mounting bracket to prevent

loosening and potential hazards.

- **Blade Balance:** If the fan wobbles, check that the blades are securely attached and balanced. A balancing kit (not included) may be used if necessary.
- **Light Source:** The LED light source is integrated and designed for long life. If it malfunctions, contact customer support.

8. TROUBLESHOOTING

Refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Fan does not start	No power supply; Loose wiring; Remote control battery low or not paired.	Check circuit breaker; Verify wiring connections; Replace remote battery or re-pair remote/app.
Light does not turn on	No power supply; Loose wiring; LED malfunction.	Check circuit breaker; Verify wiring connections; Contact customer support if LED is faulty.
Fan wobbles	Loose mounting screws; Unbalanced blades.	Tighten all mounting screws; Ensure blades are securely attached; Use a blade balancing kit if needed.
Remote control not working	Battery depleted; Remote not paired with fan.	Replace remote battery; Follow pairing instructions in section 6.2.
App control not working	App not connected; Bluetooth/Wi-Fi issue; Fan not in pairing mode.	Ensure app is correctly paired (see section 6.2); Check device's Bluetooth/Wi-Fi connection; Restart fan and try pairing again.

9. WARRANTY AND SUPPORT

Oaks Aura provides a lifetime warranty for this product, Model DC2202. This warranty covers defects in materials and workmanship under normal use.

- **Warranty Claims:** For warranty service, please retain your proof of purchase. Contact Oaks Aura customer support for assistance.
- **Customer Support:** If you have any questions, require technical assistance, or encounter issues not covered in this manual, please contact Oaks Aura customer service. Refer to the product packaging or the seller's information for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question