



[Manuals.plus](#) /

> [Aivituvin](#) /

> Aivituvin AIR66 Portable Wooden Chicken Coop Instruction Manual

Aivituvin AIR66

Aivituvin AIR66 Portable Wooden Chicken Coop Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Aivituvin AIR66 Portable Wooden Chicken Coop. Please read these instructions carefully before assembly and use to ensure proper function and longevity of the product.

The Aivituvin AIR66 is designed as a portable chicken house featuring a metal-reinforced edge, a large nesting box, and multi-level activity space. Its dimensions are 69.8"L x 42"W x 54.6"H, providing approximately 26 sq ft of activity space suitable for 4-6 chickens.

SETUP AND ASSEMBLY

The Aivituvin AIR66 chicken coop is designed for easy assembly, typically completed in approximately 30 minutes with a few steps. Ensure all components are present before beginning.

Unpacking and Component Check

Before assembly, carefully unpack all components and verify against the parts list (refer to your product packaging for the complete list). Inspect for any shipping damage.



Image: The fully assembled Aivituvin AIR66 Portable Wooden Chicken Coop, showcasing its two-level design with a raised house and ground-level run, nesting boxes, and ramp.

Assembly Steps

The coop features a unique folding design for simplified setup.

FOLDING EASY TO SET UP BY FEW STEPS

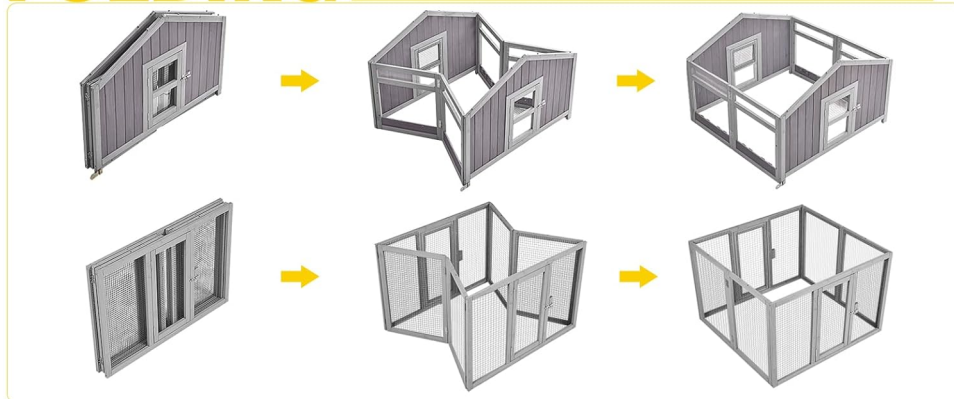


Image: Visual guide demonstrating the folding assembly process for the chicken coop, showing panels unfolding and connecting to form the structure.

1. Begin by unfolding the main housing unit panels.

2. Connect the base run panels, ensuring secure attachment points.
3. Attach the nesting boxes to the main housing unit.
4. Install the roof sections, ensuring they are properly aligned and secured.
5. Verify all latches and doors operate smoothly.

Reinforcement and Stability

The coop incorporates all-around iron reinforcement edges for enhanced durability.

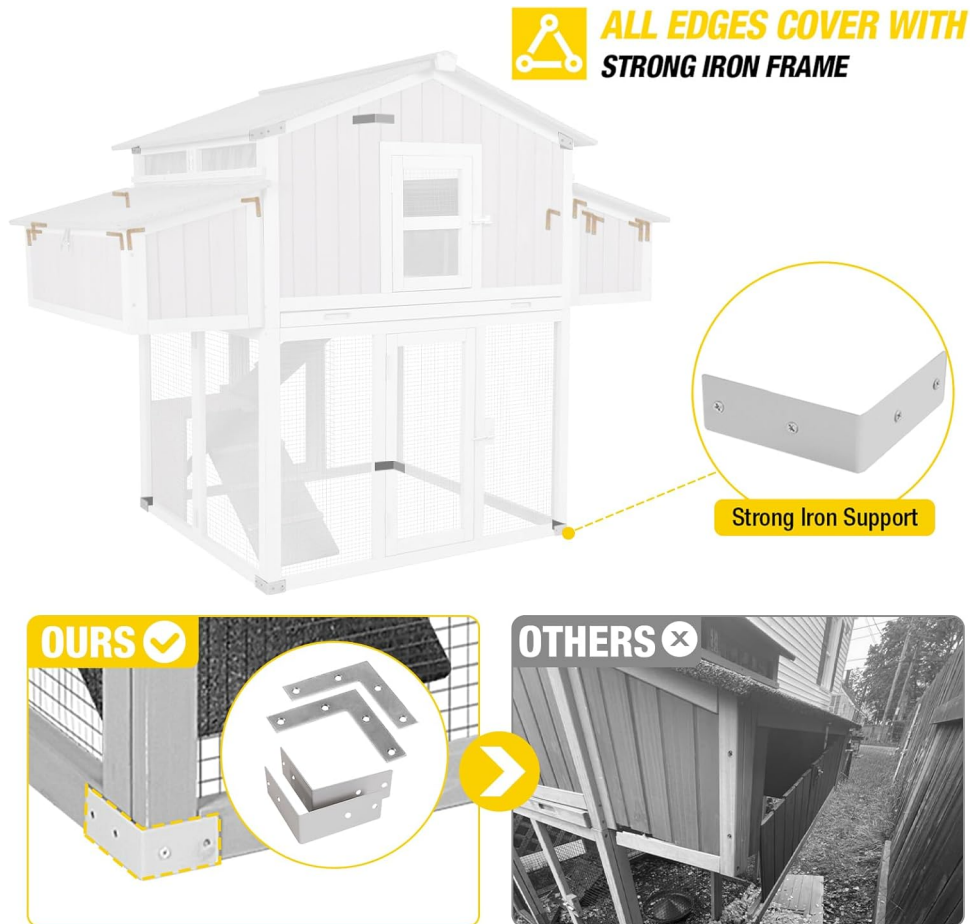


Image: Detail showing the strong iron support brackets used to reinforce the edges of the chicken coop and nesting box, highlighting the improved structural integrity.

- Ensure all metal edge reinforcements are securely fastened.
- Confirm the stability of the entire structure before introducing poultry.

OPERATING INSTRUCTIONS

The Aivituvn AIR66 chicken coop provides a comfortable and secure environment for your chickens. Understanding its features will help optimize its use.

Capacity and Space

This coop is designed to comfortably house 4-6 standard-sized chickens, offering 26 square feet of total activity space.



Image: An annotated diagram illustrating the dimensions (69.8"L x 42"W x 54.6"H) and activity space (26 sq ft) of the chicken coop, indicating its capacity for 4-6 chickens.

- **Resting Area:** The upper level provides a secure sleeping area of 17.2 square feet, equipped with three round-edge perches above a pull-out tray. Two acrylic windows allow natural light.
- **Running Area:** The ground level offers a protected run for daily activity.

Nesting Boxes

The coop includes a large, two-sided nesting box designed for egg laying.



Image: A detailed view of the large, two-sided nesting box, showing eggs inside and a PVC cover designed to prevent water leakage at the connection point.

- The nesting box features a PVC cover to prevent water leakage, keeping eggs dry.
- Special custom locks are integrated to deter predators. Ensure these are always secured.

Access and Security

- The coop features four large doors for convenient access to your pets and for cleaning.
- Durable and sturdy metal wire, combined with predator-resistant spring latches, helps keep your flock secure. Always double-check all latches at night.

MAINTENANCE

Regular maintenance is crucial for the longevity of your Aivituvin AIR66 chicken coop and the health of your flock.

Cleaning

- **Daily:** Clean after use. Remove droppings from the pull-out tray in the sleeping area daily. The pull-out tray simplifies this process.
- **Weekly:** Thoroughly clean the nesting boxes and replace bedding. Inspect the entire coop for cleanliness and remove any accumulated debris.
- **Monthly/Seasonally:** Perform a deep clean of the entire coop. This includes scrubbing surfaces, disinfecting if necessary, and checking for any signs of wear or damage.

Material Care

- The coop is constructed from 100% solid fir wood and features an asphalt roof. These materials

provide a dry and comfortable space.

- Periodically inspect the wood for signs of weathering or damage. Apply a pet-safe wood sealant if needed to extend its lifespan.
- Check the asphalt roof for any tears or lifting, especially after severe weather, to prevent leaks.
- Inspect the metal wire mesh for any damage or weak points that could compromise security.

TROUBLESHOOTING

This section addresses common issues you might encounter with your chicken coop.

Common Issues and Solutions

Problem	Possible Cause	Solution
Latches not secure enough	Standard latches may not be sufficient against determined predators.	Reinforce existing latches with additional predator-resistant hardware or add secondary locking mechanisms.
Wood splitting or swelling	Exposure to harsh weather conditions (wet, windy, extreme temperatures) can affect wood integrity over time.	Consider placing the coop under additional cover. Apply a pet-safe wood sealant annually. Inspect and repair any damaged sections promptly.
Nesting box bottom sagging	Weight from chickens and eggs, combined with moisture, can weaken the nesting box floor over extended use.	Add additional bracing or support underneath the nesting box area. Regularly check for moisture buildup.
Poop accumulation in hard-to-reach areas	Droppings can get stuck between mesh and support boards, particularly near ramps.	Use a smaller cleaning tool or brush to access and clean these areas. Consider using fine shavings in the pull-out tray for easier removal.
Chickens sleeping in nesting boxes instead of perches	Too many nesting boxes for the number of chickens, or perches not being preferred.	Temporarily block off some nesting boxes to encourage chickens to use the roosting bars. Ensure perches are comfortable and appropriately sized.

SPECIFICATIONS

Detailed technical specifications for the Aivituvn AIR66 Portable Wooden Chicken Coop.

Feature	Detail
Model Name	AIR66
Overall Dimensions (L x W x H)	69.8" x 42" x 54.6"
Total Activity Space	26 sq ft

Feature	Detail
Sleeping Area	17.2 sq ft
Recommended Capacity	4-6 chickens
Material	100% Solid Fir Wood, Metal Wire, Asphalt Roof
Special Features	Folding Design, Metal Edge Reinforcement, Large Nesting Box with PVC Cover, Pull-out Tray, 3 Round Edge Perches, 2 Acrylic Windows, Predator-Resistant Latches
Item Weight	106 Pounds
Manufacturer	Aivituvn

WARRANTY AND SUPPORT

Aivituvn stands behind the quality of its products.

Warranty Information

This product comes with a **5-year warranty** from the date of purchase. This warranty covers manufacturing defects and material flaws under normal use. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions, assembly assistance, troubleshooting, or warranty claims, please contact Aivituvn customer support.

- **Online Support:** Visit the [Aivituvn Store on Amazon](#) for product information and contact options.
- **General Inquiries:** Refer to the customer support information provided with your product packaging.