

[Manuals.plus](#) /

› [TECKEEN](#) /

› TECKEEN 4-in-1 Game Controller Back Button Attachment Instruction Manual for Xbox One S/X and Xbox Series S/X

TECKEEN B0BKT3JLF8

TECKEEN 4-in-1 Game Controller Back Button Attachment Instruction Manual

For Xbox One S/X and Xbox Series S/X Controllers

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your TECKEEN 4-in-1 Game Controller Back Button Attachment. This accessory is designed to enhance your gaming experience by allowing you to remap controller buttons to convenient back triggers.

Please read this manual thoroughly before using the product to ensure proper setup and functionality.

2. PACKAGE CONTENTS

Verify that all the following items are included in your package:

- 1 x Back Clip Bracket
- 2 x 4-in-1 Triggers (Style A and Style B)
- 1 x Micro USB to Micro USB Cable (5cm)
- 1 x Micro USB to Type-C Cable (5cm)
- 1 x USB to Type-C Data Cable (3m)
- 1 x Trigger Screw
- 1 x Silicone Pad



Figure 2.1: All components included in the package.



Figure 2.2: Overview of the product packaging and contents.

3. COMPONENT IDENTIFICATION

Familiarize yourself with the main components of the back button attachment:

- **Back Clip Bracket:** The main unit that attaches to your controller.
- **4-in-1 Triggers:** Two interchangeable trigger styles (A and B) that provide additional remappable buttons.
- **Trigger Screw:** Used to secure the chosen triggers to the bracket.
- **Silicone Pad:** Provides stability and protects the controller when the bracket is attached.
- **Cables:**
 - Short Micro USB to Micro USB Cable (5cm): For connecting the attachment to an Xbox One S/X controller.
 - Short Micro USB to Type-C Cable (5cm): For connecting the attachment to an Xbox Series S/X controller.
 - Long USB to Type-C Data Cable (3m): For connecting the attachment to the console for power and data.

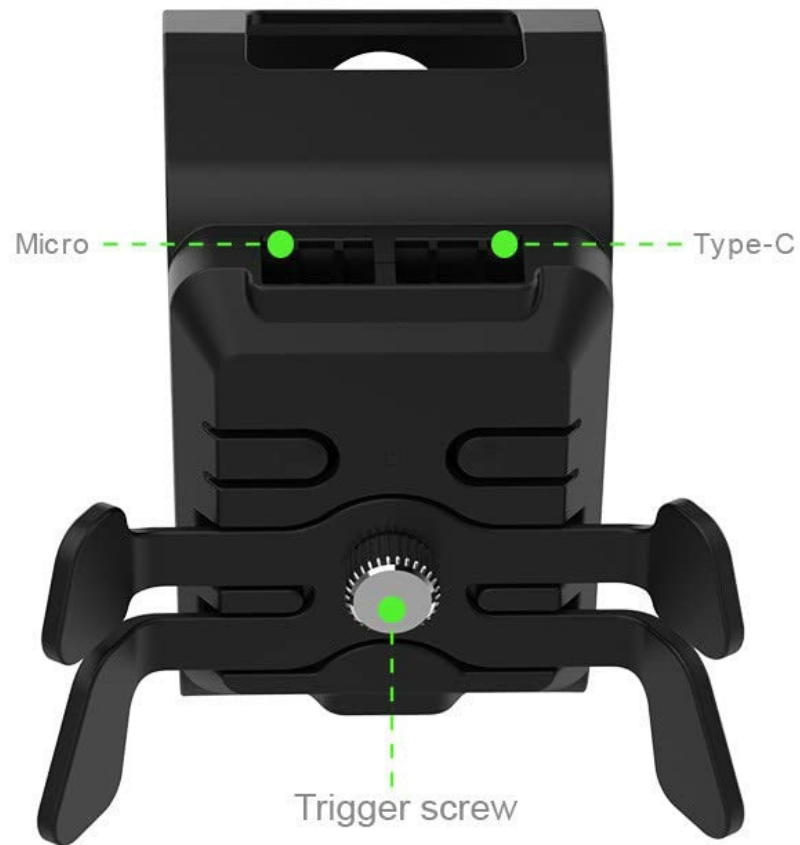


Figure 3.1: Detailed view of the attachment's ports and trigger screw.



Figure 3.2: Overview of the attachment, cables, and trigger options.

4. SETUP AND INSTALLATION

Follow these steps to install the back button attachment on your controller:

1. **Attach the Back Clip Bracket:** Carefully align the back clip bracket with the back of your Xbox controller. Ensure the silicone pad is placed between the controller and the bracket for stability and protection.
2. **Install Triggers:** Choose your preferred trigger style (A or B). Install the chosen trigger onto the back clip bracket. Align the trigger screw with the screw hole and turn it clockwise to lock the trigger securely in place.
3. **Connect Short Cable to Controller:**
 - For Xbox One S/X controllers: Use the 5cm Micro USB to Micro USB cable. Connect one end to the attachment and the other to the controller's Micro USB port.
 - For Xbox Series S/X controllers: Use the 5cm Micro USB to Type-C cable. Connect the Micro USB end to the attachment and the Type-C end to the controller's Type-C port.

4. **Connect Long Cable to Console:** Connect the 3m USB to Type-C data cable. Plug the Type-C end into the attachment and the USB-A end into an available USB port on your Xbox console. The attachment is powered by the console, requiring no additional batteries.



Figure 4.1: Back button attachment installed on a controller.



Figure 4.2: Rear view of the attachment on the controller.



Figure 4.3: Controller and attachment connected to the console.

5. OPERATION

Once the attachment is correctly installed and connected, you can begin using its features:

- **Button Remapping:** The back button attachment allows you to remap standard controller buttons (ABXY, LR, directional buttons) to the back triggers. Refer to the specific instructions provided with the attachment for detailed remapping procedures, as these can vary.
- **3.5mm Headset Support:** The attachment supports the use of a 3.5mm wired headset, allowing for audio and communication during gameplay.
- **Power Source:** The attachment draws power directly from your Xbox console via the connected USB cable, eliminating the need for separate batteries or power adapters.

6. COMPATIBILITY

This back button attachment is compatible with the following original Xbox controllers:

- Xbox One X Controller
- Xbox One S Controller
- Xbox Series X (XSX) Controller
- Xbox Series S (XSS) Controller

7. MAINTENANCE

To ensure the longevity and optimal performance of your back button attachment, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the attachment. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, store the attachment in a clean, dry place away from direct sunlight and extreme temperatures.
- **Handling:** Handle the attachment and its cables with care to prevent damage. Avoid excessive force when connecting or disconnecting cables.

8. TROUBLESHOOTING

If you encounter issues with your back button attachment, refer to the following common solutions:

- **Attachment not recognized by console/controller:**
 - Ensure all cables are securely connected to the attachment, controller, and console.
 - Verify you are using the correct short cable for your specific controller model (Micro USB for Xbox One, Type-C for Xbox Series).
 - Try connecting the long USB cable to a different USB port on your console.
 - Restart your Xbox console.
- **Buttons not remapping:**
 - Confirm that the attachment is properly powered and recognized.
 - Refer to the specific remapping instructions that came with your attachment, as the process may involve specific button combinations or modes.
- **Headset audio issues:**
 - Ensure your 3.5mm headset is fully plugged into the attachment's port.
 - Check your console's audio settings to ensure output is directed correctly.
 - Test the headset directly with the controller (if possible) to rule out headset issues.

9. SPECIFICATIONS

Product Name	4-in-1 Game Controller Back Button Attachment
Brand	TECKEEN
Model Number	B0BKT3JLF8
Compatibility	Xbox One S/X, Xbox Series S/X Controllers
Connectivity	Wired (Micro USB, Type-C, USB-A)
Headset Support	3.5mm Wired Headset

Power Source	Console USB Port
Item Weight	7.4 ounces (approx. 210 grams)
Package Dimensions	3.94 x 3.15 x 0.79 inches (approx. 10 x 8 x 2 cm)

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact TECKEEN customer service directly. Contact details are typically available on the product packaging or the manufacturer's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question