

LEPOWER DL-13

LEPOWER Desk Lamp Instruction Manual

Model: DL-13

[Safety](#)[Contents](#)[Setup](#)[Operation](#)[Maintenance
Support](#)[Troubleshooting](#)[Specifications](#)[Warranty &](#)

INTRODUCTION

This instruction manual provides important information regarding the safe and efficient operation of your LEPOWER DL-13 Desk Lamp. Please read this manual thoroughly before using the product and retain it for future reference. This LED desk lamp is designed to provide versatile and eye-caring illumination for various tasks and environments, including home offices, bedrooms, and study areas.

SAFETY INSTRUCTIONS

- Ensure the power adapter is compatible with your local power supply (100-240V AC, 50/60Hz).
- Do not disassemble, repair, or modify the lamp. This may cause electric shock or damage the product.
- Avoid exposing the lamp to direct sunlight, high temperatures, or high humidity.
- Keep the lamp away from water or other liquids.
- Do not use the lamp if the power cord or adapter is damaged.
- This product is for indoor use only.

PACKAGE CONTENTS

Please check the package for the following items:

- LEPOWER DL-13 Desk Lamp (Base, Gooseneck, Lamp Head)
- Power Adapter
- Instruction Manual

SETUP

1. Unpack all components from the box.
2. Screw the gooseneck into the base of the lamp. Ensure it is securely tightened.
3. Connect the power cable from the gooseneck to the lamp head. This connection is keyed to prevent incorrect insertion.
4. Insert the power adapter into the power input port located at the back of the lamp base.
5. Plug the power adapter into a suitable wall outlet.

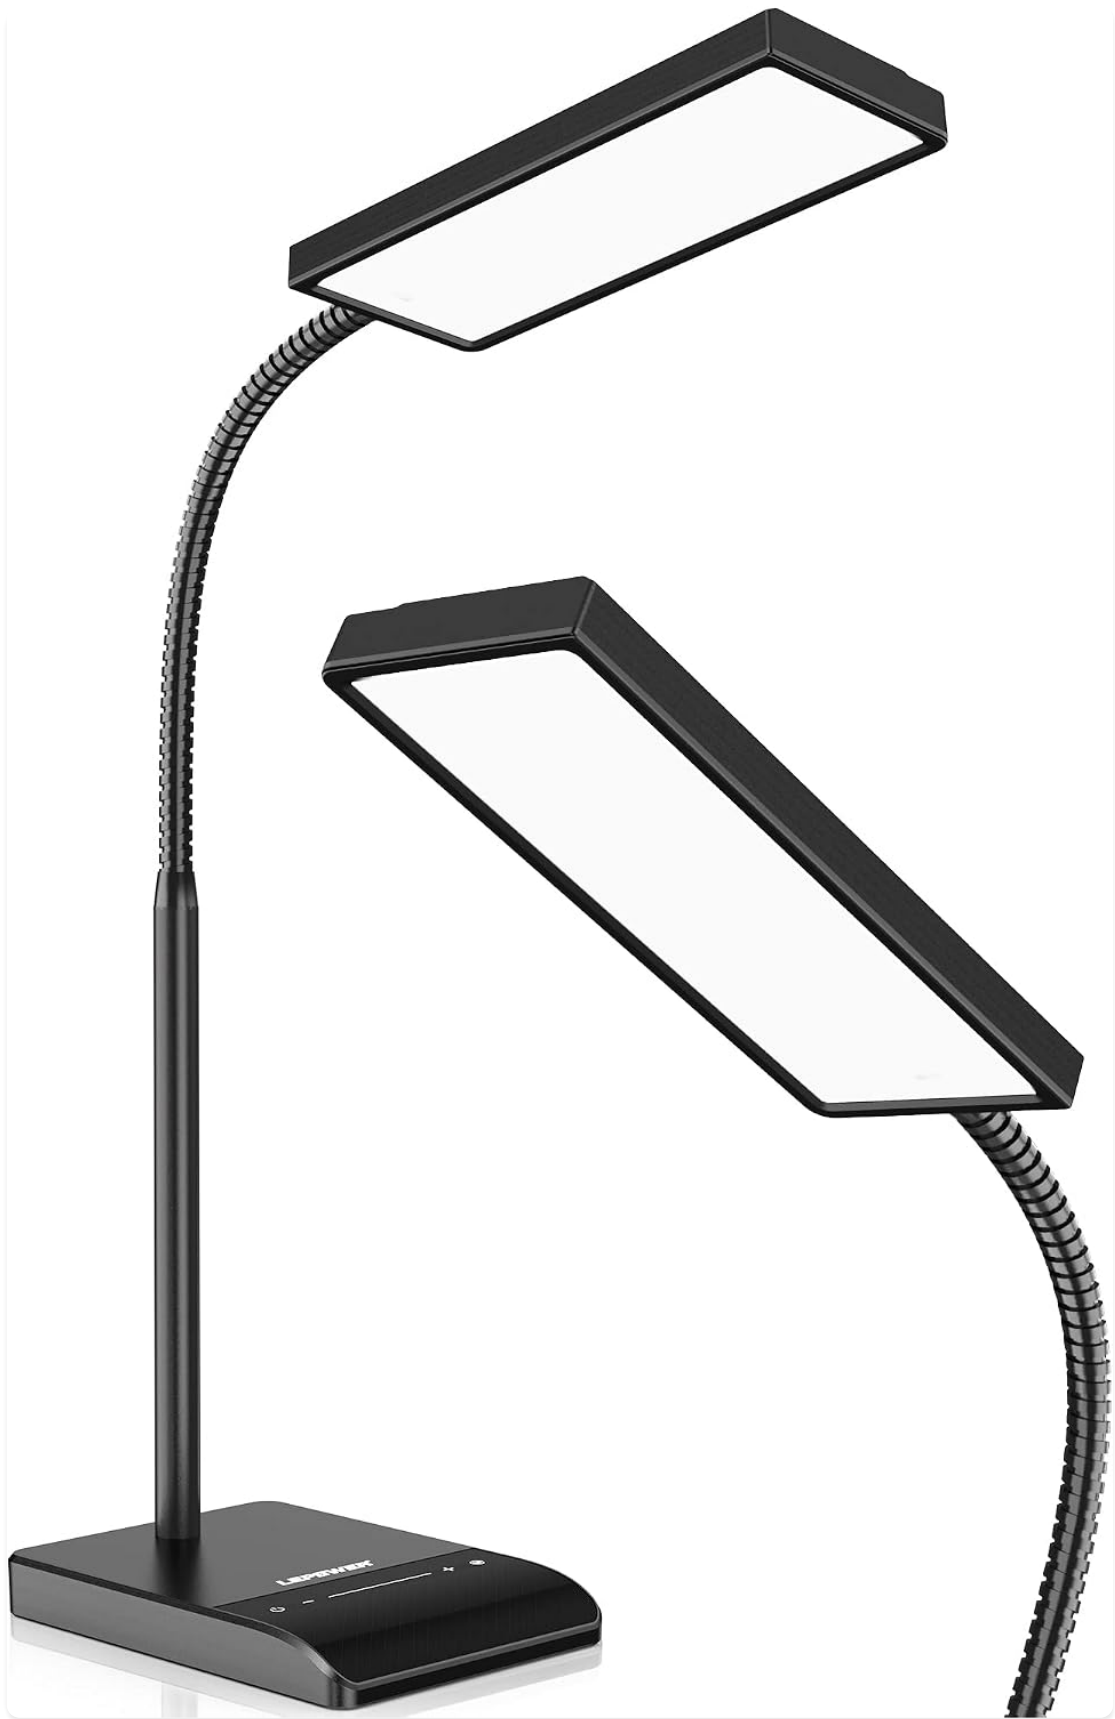


Figure 1: Assembled LEPOWER DL-13 Desk Lamp. The lamp features a rectangular LED head, a flexible gooseneck, and a stable rectangular base with touch controls.

OPERATING INSTRUCTIONS

The LEPOWER DL-13 Desk Lamp features intuitive touch controls located on its base.



Figure 2: Close-up of the lamp's touch control panel. It includes an ON/OFF button, brightness adjustment buttons (+/-), a stepless slide-control bar for brightness, and a color temperature adjustment button.

1. Power On/Off

Tap the **ON/OFF** button (power symbol) on the base to turn the lamp on or off.

2. Adjusting Brightness

The lamp offers 10 brightness levels. You can adjust it in two ways:

- **Buttons:** Tap the **+** or **-** buttons to incrementally increase or decrease brightness.
- **Slide Control:** Slide your finger along the stepless slide-control bar to smoothly adjust the brightness from 5% to 100%.



Figure 3: Visual representation of the lamp's 50 lighting modes, showing a spectrum from 2700K to 6000K for color temperature and 5% to 100% for dimmable brightness.

3. Adjusting Color Temperature

The lamp provides 5 color temperature modes (from 2700K warm light to 6000K cool daylight). Tap the **Color** button (sun symbol) to cycle through the available color temperatures.



Figure 4: The lamp's versatility in different lighting scenarios, from bright working light (6000K, 100% brightness) to warm relaxing light (2700K, 5% brightness).

4. Smart Memory Function

The lamp is equipped with a smart memory function. When you turn the lamp off and then back on, it will automatically recall the last brightness and color temperature settings used.

5. Gooseneck Adjustment

The flexible metal gooseneck allows for 360° adjustment of the lamp head. Bend and twist the gooseneck to direct the light precisely where needed for optimal illumination.

Flexible Gooseneck Design



Figure 5: The flexible gooseneck allows the lamp head to be positioned in multiple angles and heights, adapting to different lighting needs.

6. Eye-Caring Technology

The LEPOWER DL-13 Desk Lamp utilizes RG0 certified LED beads and professional optical lenses to minimize hazardous blue light, protecting your eyes from fatigue and potential vision loss during prolonged use.

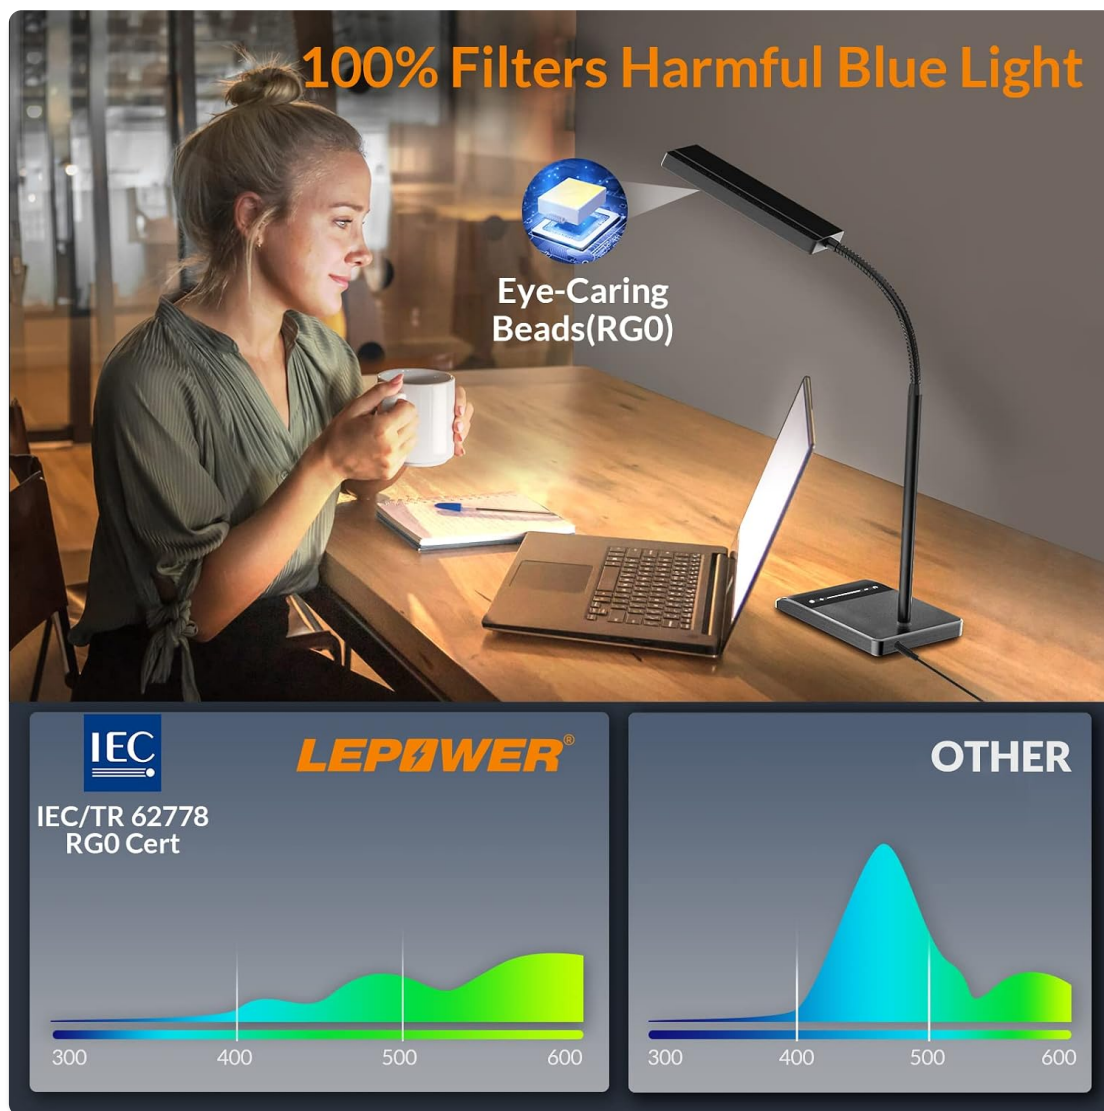


Figure 6: The lamp's eye-caring technology is highlighted, showing its ability to filter harmful blue light, making it suitable for extended use.

MAINTENANCE

- Always unplug the lamp from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the lamp. Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- Ensure the lamp is completely dry before plugging it back in.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power supply.	Check if the power adapter is securely plugged into the lamp and the wall outlet. Ensure the outlet has power.
Lamp flickers or light is unstable.	Loose connection or power issue.	Ensure all lamp components (base, gooseneck, head) are securely connected. Try a different power outlet.
Cannot adjust brightness or color temperature.	Control panel issue.	Ensure your fingers are dry and clean when using touch controls. Unplug the lamp for 30 seconds and plug it back in to reset.

SPECIFICATIONS

Feature	Detail
Model Number	DL-13
Brand	LEPOWER
Lamp Type	Desk Lamp
Light Source Type	LED
Wattage	12 Watts
Brightness	800 Lumens (1400 Lux)
Color Temperature	2700K - 6000K (5 modes)
Brightness Levels	10
Control Method	Touch Control
Gooseneck Adjustment	360° Flexible
Eye-Caring Certification	RG0 Certified (IEC 62778)
Material	Acrylonitrile Butadiene Styrene, Metal
Product Dimensions (D x W x H)	7.49" x 5.31" x 17.72"
Item Weight	2.31 Pounds
Average Life	50,000 Hours
Power Source	Corded Electric (Adapter included)

WARRANTY & SUPPORT

LEPOWER products are manufactured to the highest quality standards. For warranty information, technical support, or any inquiries regarding your LEPOWER DL-13 Desk Lamp, please contact LEPOWER customer service through the retailer's platform or visit the official LEPOWER website. Please have your model number (DL-13) and purchase details ready when contacting support.

© 2025 LEPOWER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question