

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [Hightec](#) /
- › Hightec HKMP100 Table Refrigerator User Manual

Hightec HKMP100

Hightec HKMP100 Table Refrigerator User Manual

Comprehensive guide for setup, operation, maintenance, and troubleshooting of your Hightec HKMP100 compact refrigerator.

1. PRODUCT OVERVIEW

The Hightec HKMP100 is a compact table refrigerator designed for efficient and convenient food storage. It features a static cooling system and mechanical temperature control, making it suitable for various small spaces.



Image: The Hightec HKMP100 compact refrigerator with its door open, revealing the internal layout. The main compartment features two adjustable shelves, a crisper drawer at the bottom, and a small freezer compartment at the top. The door includes two shelves for bottles and smaller items. Various food items like fruit and bottles are shown for illustrative purposes.

2. SETUP AND INSTALLATION

2.1 Unpacking

- Carefully remove all packaging materials, including foam and adhesive tape.
- Inspect the refrigerator for any signs of damage during transit. Report any damage to your retailer immediately.
- Remove all internal accessories and clean them before first use.

2.2 Placement

- Place the refrigerator on a firm, level surface to ensure stability and proper operation.
- Ensure adequate ventilation around the unit. Maintain a minimum clearance of 10 cm (4 inches) from the back and sides to allow for proper heat dissipation.
- Avoid placing the refrigerator in direct sunlight or near heat sources such as stoves, radiators, or ovens, as this can increase energy consumption.
- The unit is equipped with adjustable feet. Use them to level the appliance if the floor is uneven.

2.3 Electrical Connection

- Before plugging in, ensure the voltage and frequency indicated on the rating plate match your household power supply.
- Connect the refrigerator to a properly grounded electrical outlet. Do not use extension cords or multiple socket adapters.
- Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in. This allows the refrigerant to settle.

2.4 Door Reversal

The Hightec HKMP100 features reversible doors, allowing you to change the opening direction to suit your space. This procedure requires specific tools and careful handling. Refer to the detailed diagrams in the printed manual for step-by-step instructions. If you are unsure, it is recommended to contact a qualified technician.

3. OPERATION

3.1 Temperature Control

The refrigerator is equipped with a mechanical temperature control dial, typically located inside the unit. Turn the dial to adjust the cooling intensity. Higher numbers usually indicate colder temperatures. Start with a medium setting and adjust as needed based on ambient temperature and food load.

- **Setting 1-2:** Less cold, suitable for light loads or cooler environments.
- **Setting 3-4:** Normal operation, recommended for most uses.
- **Setting 5:** Maximum cooling, for quick chilling or hot environments.

3.2 Initial Startup

- After plugging in the appliance, allow it to run empty for approximately 2-3 hours to reach its optimal operating temperature before loading food.
- The internal light will illuminate when the door is opened.

3.3 Food Storage Guidelines

- Store raw meat and fish in sealed containers on the lowest shelf to prevent dripping onto other foods.
- Wrap or cover all food items to prevent drying out and odor transfer.
- Do not place hot food directly into the refrigerator; allow it to cool down first.
- Avoid overloading the refrigerator, as this can impede air circulation and cooling efficiency.

4. MAINTENANCE AND CLEANING

4.1 Defrosting (Manual)

This refrigerator features a manual defrosting system. Frost buildup on the evaporator (inside the freezer compartment) can reduce cooling efficiency. Defrost when the frost layer reaches about 3-5 mm (0.1-0.2 inches) thick.

1. Unplug the refrigerator from the power outlet.
2. Remove all food items and store them in a cool place or another refrigerator.
3. Leave the refrigerator door open to allow the frost to melt naturally. Place towels or a shallow tray at the bottom to collect melted water.
4. Do not use sharp objects or heating devices to speed up defrosting, as this can damage the appliance.
5. Once all frost has melted, clean and dry the interior thoroughly before plugging the unit back in and returning food.

4.2 Cleaning

- Always unplug the refrigerator before cleaning.
- Clean the interior with a soft cloth dampened with a solution of mild detergent and warm water. Avoid abrasive cleaners or solvents.
- Wipe down door seals regularly to ensure a tight seal.
- Clean the exterior with a soft, damp cloth.
- Periodically vacuum the condenser coils at the back of the unit (if accessible) to maintain efficiency.

4.3 Long-Term Storage

- If the refrigerator will not be used for an extended period, unplug it, empty all contents, and defrost thoroughly.
- Clean and dry the interior completely to prevent mold and odors.
- Leave the door slightly ajar to allow air circulation and prevent odor buildup.

5. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their potential solutions.

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power supply; power cord not plugged in; circuit breaker tripped.	Check power connection; check circuit breaker; test outlet with another appliance.
Temperature is not cold enough.	Temperature control set too high; door opened too frequently; warm food placed inside; poor ventilation.	Adjust temperature control to a colder setting; minimize door openings; allow hot food to cool before storing; ensure adequate clearance around the unit.
Excessive noise.	Refrigerator not level; unit touching a wall; normal compressor operation.	Adjust leveling feet; move unit away from walls; some operational noises are normal.
Water on the floor or inside.	Drain hole blocked; excessive humidity; door not closed properly.	Clear drain hole; ensure proper ventilation; check door seal and closure.

6. TECHNICAL SPECIFICATIONS

Model	HKMP100
Brand	Hightec
Energy Efficiency Class	F
Noise Level	41 dB(A)
Refrigerant Gas	R600a
Annual Energy Consumption	107 kWh
Energy Efficiency Index (EEI)	115.3
Net Refrigerator Capacity	91 Liters
Cooling System	Static
Control System	Mechanical
Defrosting System	Manual
Product Dimensions (H x W x D)	83.1 cm x 45 cm x 49 cm (32.7 x 17.7 x 19.3 inches)
Product Weight	21 kg (46.3 lbs)
Reversible Doors	Yes
Adjustable Feet	Yes

7. WARRANTY AND CUSTOMER SUPPORT

Your Hightec HKMP100 refrigerator is covered by a manufacturer's warranty. For specific details regarding warranty terms, duration, and conditions, please refer to the warranty card included with your product or contact your retailer.

For assistance with product issues, technical support, or warranty claims, please contact Hightec customer service or your point of purchase. When contacting support, please have your model number (HKMP100) and purchase date available.

For information on returns and refunds, please consult the retailer's policies or Amazon's help pages:

- [Amazon.it Returns Policy](#)
- [Amazon.it Help Pages](#)