

[Manuals.plus](#) /

› [Brilliant](#) /

› Brilliant Moreen LED Ceiling Light 34 cm Instruction Manual

Brilliant Moreen G9964/G9965

Brilliant Moreen LED Ceiling Light 34 cm Instruction Manual

Model: Moreen G9964/G9965

1. INTRODUCTION AND OVERVIEW

The Brilliant Moreen LED Ceiling Light is a versatile lighting solution suitable for both private and commercial environments. Its simple, elegant design integrates seamlessly into various spaces, including hallways, stairwells, entrances, and living rooms. The light features a unique combination of natural wood and modern technology, with wood sourced from sustainable, FSC-certified forestry.

This energy-efficient LED lamp offers adjustable light color temperature (CCT technology) from warm white (3000K) to cool white (4500K), allowing you to customize the ambiance. The LED elements are integrated, requiring no additional light sources. A memory function retains your preferred light settings.

All necessary installation hardware is included to ensure a straightforward setup.



Figure 1: Front view of the Brilliant Moreen LED Ceiling Light.

2. SAFETY INSTRUCTIONS

- Always disconnect power at the main circuit breaker before installation, maintenance, or cleaning.
- Installation should be performed by a qualified electrician or a person with sufficient electrical knowledge to ensure safety and compliance with local regulations.
- Do not modify the product in any way. Unauthorized modifications may void the warranty and pose safety risks.
- Ensure the mounting surface is structurally sound and can support the weight of the fixture.
- Do not look directly into the LED light source when it is illuminated.
- Keep packaging materials out of reach of children.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before proceeding with installation.

- 1x Brilliant Moreen LED Ceiling Light (integrated LED elements)
- Mounting hardware (screws, wall plugs)
- Instruction Manual

4. SETUP AND INSTALLATION

Tools Required: Drill, screwdriver, wire strippers, voltage tester, pencil, measuring tape.

1. **Prepare for Installation:** Turn off the main power supply to the installation area at the circuit breaker. Use a voltage tester to confirm that the power is off.
2. **Mark Mounting Points:** Hold the mounting bracket (if separate) or the light fixture itself against the ceiling at the desired installation location. Use a pencil to mark the drilling points.
3. **Drill Holes:** Drill holes at the marked points using an appropriate drill bit for your ceiling material. Insert the provided wall plugs into the drilled holes.
4. **Connect Wiring:** Carefully connect the electrical wires from the ceiling to the terminals on the light fixture. Ensure correct polarity (Live, Neutral, Earth) according to local electrical codes. Secure all connections tightly.
5. **Mount the Fixture:** Align the light fixture with the drilled holes and secure it to the ceiling using the provided screws. Ensure the fixture is firmly attached and stable.
6. **Restore Power:** Once installation is complete and all connections are secure, restore power at the main circuit breaker.

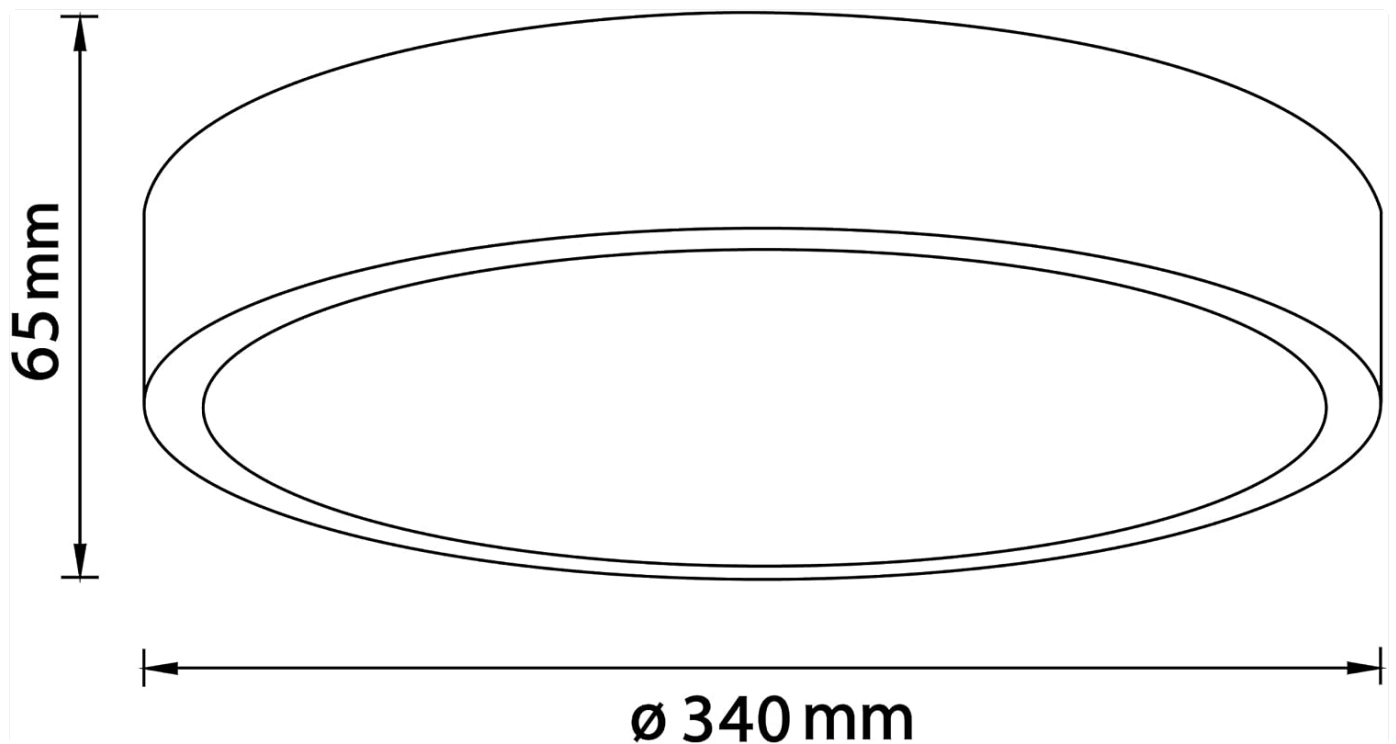


Figure 2: Dimensions of the Brilliant Moreen LED Ceiling Light (65mm height, 340mm diameter).

5. OPERATING INSTRUCTIONS

The Brilliant Moreen LED Ceiling Light is designed for simple operation.

- **Turning On/Off:** Use your standard wall switch to turn the light on or off.
- **Adjusting Color Temperature (CCT):** The light color can be adjusted between 3000K (warm white) and 4500K (cool white). This is typically controlled by toggling the wall switch quickly. Each toggle cycles through the available color temperatures.
- **Memory Function:** The fixture includes a memory function that saves the last selected light color temperature. When the light is turned off and then back on, it will recall the previous setting.



Figure 3: Detail of the sustainable wood construction and light diffuser.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your LED ceiling light.

- **Cleaning:** Before cleaning, ensure the power supply to the fixture is disconnected. Use a soft, dry, or slightly damp cloth to wipe the surface of the light. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electrical components.
- **LEDs:** The LED elements are integrated and not user-replaceable. Do not attempt to open the fixture to replace LEDs.
- **Inspection:** Periodically check the fixture for any signs of damage, loose connections, or wear. If any issues are found, disconnect power and consult a qualified electrician.

7. TROUBLESHOOTING

If you encounter issues with your Brilliant Moreen LED Ceiling Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power supply. Loose wiring connection. Faulty wall switch.	Check circuit breaker. Ensure all wires are securely connected (with power off). Test or replace the wall switch.
Light flickers.	Loose wiring. Incompatible dimmer switch (if applicable). Power fluctuations.	Check and secure wiring connections (with power off). Ensure dimmer switch is compatible with LED fixtures. Consult an electrician for power supply issues.
Color temperature does not change.	Incorrect toggling sequence.	Ensure you are toggling the wall switch quickly to cycle through CCT options. Pause briefly between toggles.

If these steps do not resolve the issue, please contact customer support.

8. SPECIFICATIONS

- **Brand:** Brilliant
- **Model:** Moreen G9964/G9965
- **Product Dimensions (L x W x H):**6.5 x 34 x 34 cm
- **Item Weight:** 1.12 Kilograms
- **Material:** Wood, Metal, Plastic
- **Color:** Chestnut
- **Style:** Modern
- **Light Source Type:** Integrated LED
- **Power:** 14 Watts
- **Luminous Flux:** 1300 Lumens
- **Color Temperature:** 3000K - 4500K (Adjustable)
- **IP Rating:** IP44 (Protected against solid objects over 1mm and splashing water from any direction)
- **Installation Type:** Ceiling Mounting
- **Special Features:** Energy-saving, Memory Function, FSC Certified Wood
- **Batteries Required:** No

9. WARRANTY INFORMATION

This Brilliant Moreen LED Ceiling Light is covered by a standard manufacturer's warranty against defects in materials and workmanship. The warranty period typically begins from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, accidents, or unauthorized modifications. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or contact Brilliant customer support.

10. SUPPORT

If you require further assistance, have questions about installation, operation, or troubleshooting that are not covered in this manual, please contact Brilliant customer support.

- **Website:** Visit the official Brilliant website for FAQs and support resources.
- **Contact:** Refer to your product packaging or the Brilliant website for contact details (phone number, email address).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0BKT8WXH5>

More documents and user manuals: <https://manuals.plus/>